

outdoorScan3 – PROFINET

Safety laser scanners

SICK
Sensor Intelligence.



Described product

outdoorScan3 – PROFINET

Manufacturer

SICK AG
Erwin-Sick-Str. 1
79183 Waldkirch
Germany

Legal information

This work is protected by copyright. Any rights derived from the copyright shall be reserved for SICK AG. Reproduction of this document or parts of this document is only permissible within the limits of the legal determination of Copyright Law. Any modification, abridgment or translation of this document is prohibited without the express written permission of SICK AG.

The trademarks stated in this document are the property of their respective owner.

© SICK AG. All rights reserved.

Original document

This document is an original document of SICK AG.



Contents

1	About this document.....	8
1.1	Function of this document.....	8
1.2	Scope.....	8
1.3	Target groups of these operating instructions.....	8
1.4	Further information.....	9
1.5	Symbols and document conventions.....	9
2	Safety information.....	10
2.1	General safety notes.....	10
2.2	Intended use.....	11
2.3	Inappropriate use.....	11
2.4	Cybersecurity.....	12
2.5	Requirements for the qualification of personnel.....	12
3	Product description.....	13
3.1	Product identification via the SICK product ID.....	13
3.2	Device overview.....	13
3.3	Setup and function.....	14
3.4	Product characteristics.....	15
3.4.1	Variants.....	15
3.4.2	Connections.....	16
3.4.3	System plug.....	16
3.4.4	Field types.....	16
3.4.5	Field set.....	18
3.4.6	Monitoring case.....	19
3.4.7	Simultaneous monitoring.....	20
3.5	Example applications.....	20
4	Project planning.....	22
4.1	Manufacturer of the machine.....	22
4.2	Operator of the machine.....	22
4.3	Outdoor applications.....	23
4.3.1	Permissible outdoor use.....	23
4.3.2	Ambient conditions when used outdoors.....	23
4.4	Assembly.....	28
4.4.1	Protection from influences.....	29
4.4.2	Preventing unprotected areas.....	30
4.4.3	Response time of the safety laser scanner.....	33
4.4.4	Monitoring case switching time.....	34
4.4.5	Hazardous area protection.....	35
4.4.6	Mobile hazardous area protection.....	42
4.5	Integration in the electrical control system.....	47
4.5.1	Electromagnetic compatibility.....	48
4.5.2	Voltage supply.....	49

4.5.3	USB connection.....	49
4.5.4	PROFINET.....	49
4.5.5	Restart interlock.....	49
4.6	Integration into the network.....	51
4.6.1	Network topology.....	51
4.6.2	Network services and ports.....	51
4.6.3	Integration of the safety laser scanner into the network.....	52
4.6.4	Configuring control.....	52
4.6.5	Available data.....	54
4.7	Testing plan.....	55
4.7.1	Planning the thorough check during commissioning and in certain situations.....	56
4.7.2	Planning the regular thorough check.....	56
4.7.3	Notes on the tests.....	57
5	Mounting.....	60
5.1	Safety.....	60
5.2	Unpacking.....	60
5.3	Mounting procedure.....	61
5.3.1	Changing position of the system plug.....	62
5.3.2	Direct mounting.....	64
6	Electrical installation.....	65
6.1	Safety.....	65
6.2	Connection overview.....	65
6.2.1	outdoorScan3 – PROFINET.....	66
6.3	Pin assignment.....	66
6.3.1	Voltage supply (XD1).....	66
6.3.2	Network for PROFINET PROFIsafe, data output, configuration, and diagnostics (XF1, XF2).....	66
7	Configuration.....	67
7.1	Delivery state.....	67
7.2	Safety Designer configuration software.....	67
7.2.1	Installing Safety Designer.....	67
7.2.2	Projects.....	67
7.2.3	User interface.....	68
7.2.4	User groups.....	68
7.2.5	Settings.....	70
7.2.6	Configuration.....	70
7.2.7	Networking.....	71
7.3	Overview.....	72
7.3.1	Functional scope.....	73
7.4	Hardware.....	74
7.5	Network settings.....	75
7.5.1	PROFINET.....	75
7.6	Time synchronization.....	78

7.7	Reading configuration.....	78
7.8	Identification.....	79
7.9	Protocol settings.....	80
7.9.1	PROFINET.....	80
7.10	Application.....	82
7.11	Monitoring plane.....	83
7.11.1	Parameters for the monitoring plane.....	84
7.11.2	Parameters for the safety laser scanner.....	86
7.12	Fields.....	86
7.12.1	Drawing in points that cannot be monitored.....	89
7.12.2	Enable propose field.....	90
7.12.3	Object transformation.....	91
7.12.4	Editing fields using coordinates.....	92
7.12.5	Background image.....	93
7.12.6	Device Settings.....	93
7.12.7	Defining global geometry.....	93
7.12.8	Grid Settings.....	94
7.12.9	Creating field set templates.....	94
7.12.10	Importing and exporting field sets and fields.....	95
7.12.11	Virtual group.....	95
7.13	Inputs and outputs.....	96
7.14	Monitoring cases.....	98
7.14.1	Settings for monitoring case tables.....	98
7.14.2	Several monitoring case tables.....	99
7.14.3	Settings for monitoring cases.....	99
7.14.4	Input condition.....	100
7.14.5	Cut-off paths.....	100
7.14.6	Assigning field sets.....	100
7.14.7	Assigning a defined cut-off behavior.....	101
7.14.8	Importing and exporting monitoring case tables.....	102
7.15	Simulation.....	103
7.16	Data output.....	104
7.17	Transfer.....	105
7.18	Starting and stopping safety function.....	107
7.19	PROFINET Overview.....	107
7.20	Reports.....	108
7.21	Service.....	109
7.21.1	Device restart.....	109
7.21.2	Factory settings.....	109
7.21.3	Managing passwords.....	110
7.21.4	Access management.....	110
7.21.5	Compare configuration.....	111
7.21.6	Import / Export.....	112
8	Commissioning.....	113
8.1	Safety.....	113

8.2	Alignment.....	113
8.3	Switching on.....	114
8.4	Check during commissioning and modifications.....	115
9	Operation.....	116
9.1	Safety.....	116
9.2	Regular thorough check.....	116
9.3	Status indicators.....	116
9.3.1	Status LEDs.....	116
9.3.2	Network LEDs.....	117
9.3.3	Status indicator with the display.....	119
10	Maintenance.....	122
10.1	Safety.....	122
10.2	Regular cleaning.....	122
10.3	Replacing the optics cover.....	123
10.4	Replacing the safety laser scanner.....	123
10.4.1	Replacing the safety laser scanner without system plug.....	124
10.4.2	Replacing the safety laser scanner completely.....	124
10.5	Replacing the system plug.....	125
10.6	Regular thorough check.....	126
11	Troubleshooting.....	127
11.1	Safety.....	127
11.2	Detailed diagnostics using the display.....	127
11.3	Error indication on the display.....	129
11.4	Diagnostics using Safety Designer.....	131
11.4.1	Data recorder.....	132
11.4.2	Event history.....	133
11.4.3	Message history.....	135
11.4.4	Contamination measurement.....	136
11.4.5	PROFINET diagnostics.....	137
11.4.6	PROFINET Status.....	138
11.5	Diagnostics using the control.....	138
12	Decommissioning.....	139
12.1	Disposal.....	139
13	Technical data.....	140
13.1	Variant overview.....	140
13.2	Version numbers and functional scope.....	140
13.3	Data sheet.....	141
13.3.1	outdoorScan3 – PROFINET.....	141
13.4	Response times.....	145
13.5	Sensing range.....	146
13.6	Scan plane.....	148
13.7	Light spot size.....	148

13.8	Measurement data details.....	149
13.9	Data exchange in the network.....	150
13.9.1	Process images in detail.....	150
13.9.2	Alarms.....	157
13.9.3	I&M data.....	159
13.10	Dimensional drawings.....	160
14	Ordering information.....	162
14.1	Scope of delivery.....	162
14.2	Ordering information.....	163
15	Spare parts.....	164
15.1	Safety laser scanner without system plug.....	164
15.2	System plug.....	164
15.3	Additional spare parts.....	164
16	Accessories.....	165
16.1	Weather protection.....	165
16.2	Additional accessories.....	165
17	Glossary.....	166
18	Annex.....	170
18.1	Conformities and certificates.....	170
18.1.1	EU declaration of conformity.....	170
18.1.2	UK declaration of conformity.....	170
18.2	Note on standards.....	170
18.3	Checklist for initial commissioning and commissioning.....	172
18.3.1	Additional checklist for outdoor applications.....	173
18.4	Mounting methods for protection from interference from systems in close proximity.....	173
19	List of figures.....	175
20	List of tables.....	177

1 About this document

1.1 Function of this document

These operating instructions contain the information needed during the life cycle of the safety laser scanner.

Operating instructions of the safety laser scanner must be made available to all people who work with the device.

Read the operating instructions carefully and ensure that you have understood the contents completely before you work with the safety laser scanner.

1.2 Scope

Product

This document applies to the following products:

- Product code: outdoorScan3 – PROFINET
- “Operating instructions” type label entry: 8027929

Document identification

Document part number:

- This document: 8027931
- Available language versions of this document: 8027929

You can find the current version of all documents at www.sick.com.

Other documents relevant for the product

Table 1: Available documents

Document	Title	Part number
Operating instructions	airWiper	8027361

1.3 Target groups of these operating instructions

Some sections of these operating instructions are intended for certain target groups. However, the entire operating instructions are relevant for intended use of the product.

Table 2: Target groups and selected sections of these operating instructions

Target group	Sections of these operating instructions
Project developers (planners, developers, designers)	"Project planning", page 22 "Configuration", page 67 "Technical data", page 140 "Accessories", page 165
Installers	"Mounting", page 60
Electricians	"Electrical installation", page 65
Safety experts (such as CE authorized representatives, compliance officers, people who test and approve the application)	"Project planning", page 22 "Configuration", page 67 "Commissioning", page 113 "Technical data", page 140 "Checklist for initial commissioning and commissioning", page 172
Operators	"Operation", page 116 "Troubleshooting", page 127
Maintenance personnel	"Maintenance", page 122 "Troubleshooting", page 127

1.4 Further information

www.sick.com

The following information is available via the Internet:

- Data sheets and application examples
- CAD files and dimensional drawings
- Certificates (such as the EU declaration of conformity)
- Guide for Safe Machinery. Six steps to a safe machine
- Safety Designer (software for configuring safety solutions made by SICK AG)

1.5 Symbols and document conventions

The following symbols and conventions are used in this document:

Warnings and other notes



DANGER

Indicates a situation presenting imminent danger, which will lead to death or serious injuries if not prevented.



WARNING

Indicates a situation presenting possible danger, which may lead to death or serious injuries if not prevented.



CAUTION

Indicates a situation presenting possible danger, which may lead to moderate or minor injuries if not prevented.



NOTICE

Indicates a situation presenting possible danger, which may lead to property damage if not prevented.



NOTE

Highlights useful tips and recommendations as well as information for efficient and trouble-free operation.

Instructions to action

- The arrow denotes instructions to action.
- 1. The sequence of instructions for action is numbered.
- 2. Follow the order in which the numbered instructions are given.
- ✓ The check mark denotes the result of an instruction.

LED symbols

These symbols indicate the status of an LED:

- The LED is off.
- ◐ The LED is flashing.
- The LED is illuminated continuously.

2 Safety information

2.1 General safety notes

Integrating the product



DANGER

The product can not offer the expected protection if it is integrated incorrectly.

- ▶ Plan the integration of the product in accordance with the machine requirements (project planning).
- ▶ Implement the integration of the product in accordance with the project planning.

Laser notes



CAUTION

Optical radiation: Class 1 Laser Product

Caution - if any operating or calibrating equipment other than those specified here are used or other methods are employed, this can lead to dangerous exposure to radiation.

- ▶ Use only the tools and auxiliary equipment specified in this documentation.
- ▶ Only carry out the procedures specified in this documentation.
- ▶ Do not open the housing unless carrying out the mounting and maintenance operations provided in this documentation.



Figure 1: Laser class 1

This device complies with the following standards:

- EN 60825-1:2014 + A11:2021
- IEC 60825-1:2014
- 21 CFR 1040.10 and 1040.11, except compliance with IEC 60825-1:2014, as described in Laser Notice No. 56 dated 08.05.2019

The laser is eye-safe.

The laser marking is located on the underside of the safety laser scanner.

Mounting and electrical installation



DANGER

Death or severe injury due to electrical voltage and/or an unexpected startup of the machine

- ▶ Make sure that the machine is (and remains) disconnected from the voltage supply during mounting and electrical installation.
- ▶ Make sure that the dangerous state of the machine is and remains switched off.

Repairs and modifications



DANGER

Improper work on the product

A modified product may not offer the expected protection if it is integrated incorrectly.

- ▶ Apart from the procedures described in this document, do not repair, open, manipulate or otherwise modify the product.

2.2 Intended use

The safety laser scanner is an electro-sensitive protective device (ESPE) and is suitable for the following applications:

- Hazardous area protection
- Mobile hazardous area protection (e.g. protection from automated guided vehicles)

The product may be used in safety functions.

The safety laser scanner is suitable for use in indoor and outdoor industrial environments. The industrial area of application is an area that is inaccessible to the public and that can only be entered by briefed adult personnel.

The safety laser scanner must only be used within the limits of the prescribed and specified technical data and operating conditions at all times.

When operating outside the specified technical data, which also include ambient condition, the detection capability of the device is not guaranteed.

If the device is to be used outside the application specified in this chapter, the machine manufacturer must conduct an appropriate risk assessment. In this assessment, the manufacturer must conduct a proper check of the extended application framework and confirm the safety function with suitable tests.

When checking the extended application framework, the machine manufacturer must ensure they conduct the following steps in particular:

- Take into consideration the difference between the application stated explicitly in this document and the actual operational purpose
- Take into consideration application-specific standards, e.g. ISO 25119.
- Conduct systematic analyses and consult appropriate standards, e.g. IEC 62998.
- Conduct a systematic validation of the safety function.

Incorrect use, improper modification or manipulation of the safety laser scanner will invalidate any warranty from SICK; in addition, any responsibility and liability of SICK for damage and secondary damage caused by this is excluded.

2.3 Inappropriate use



DANGER

Hazard due to lack of effectiveness of the protective device

Persons and parts of the body to be protected may not be recognized in case of non-observance.

The safety laser scanner works as an indirect protective measure and cannot provide protection from pieces thrown from the application nor from emitted radiation. Transparent objects are not detected.

- ▶ You must only use the safety laser scanner as an indirect protective measure.

The safety laser scanner is not suitable for the following applications, among others:

- Underwater
- In explosion-hazardous areas
- Access protection and hazardous point protection (so-called vertical applications in which the angle between access direction and scan plane exceeds 30°)

2.4 Cybersecurity

Overview

To protect against cybersecurity threats, the operator must have a comprehensive cybersecurity concept, which must be continuously monitored and maintained. A suitable concept consists of organizational, technical, procedural, electronic, and physical levels of defense and considers suitable measures for different types of risks. The measures implemented in this product can only support protection against cybersecurity threats if the product is used as part of such a concept.

You will find further information at www.sick.com/psirt, e.g.:

- General information on cybersecurity
- Contact option for reporting vulnerabilities
- Information on known vulnerabilities (security advisories)

Communication interfaces

- USB
- Ethernet for PROFINET PROFIsafe, data output, configuration and diagnostics
- Display and pushbuttons

Further topics

- ["Network services and ports", page 51](#)
- ["Managing passwords", page 110](#)
- ["Access management", page 110](#)

2.5 Requirements for the qualification of personnel

The product must be configured, installed, connected, commissioned, and serviced by qualified safety personnel only.

Project planning

You need safety expertise to implement safety functions and select suitable products for that purpose. You need expert knowledge of the applicable standards and regulations.

Mounting, electrical installation and commissioning

You need suitable expertise and experience. You must be able to assess if the machine is operating safely.

Configuration

You need suitable expertise and experience. You must be able to assess if the machine is operating safely.

Operation and maintenance

You need suitable expertise and experience. You must be instructed in machine operation by the machine operator. For maintenance, you must be able to assess if the machine is operating safely.

3 Product description

3.1 Product identification via the SICK product ID

SICK product ID

The SICK product ID uniquely identifies the product. It also serves as the address of the web page with information on the product.

The SICK product ID comprises the host name pid.sick.com, the part number (P/N), and the serial number (S/N), each separated by a forward slash.

For newer products, the SICK product ID is displayed as text and QR code on the type label and/or on the packaging.



Figure 2: SICK product ID

3.2 Device overview

Overview

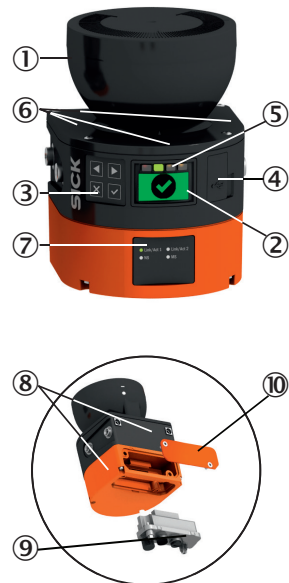


Figure 3: Device overview

- ① Optics cover
- ② Display
- ③ Keypad
- ④ USB connection
- ⑤ Status LEDs
- ⑥ Additional LEDs for ON state and OFF state
- ⑦ Network LEDs
- ⑧ Safety laser scanner without system plug
- ⑨ System plug
- ⑩ Cover plate

Complementary information

The safety laser scanner can be mounted and operated in any orientation.

Position and direction information in this document:

- The top is the side of the safety laser scanner on which the optics cover is located.
- The bottom is the side of the safety laser scanner opposite the optics cover.
- The front is the side of the safety laser scanner on which the display is located.
The 90° angle of the sector of a circle scanned by the safety laser scanner points in this direction.
- The back is the side of the safety laser scanner opposite the display. The sector of a circle not scanned by the safety laser scanner lies in this direction.

Further topics

- ["Connections", page 16](#)
- ["Status indicators", page 116](#)

3.3 Setup and function

The safety laser scanner is an electro-sensitive protective device (ESPE) which scans its surroundings two-dimensionally using infrared laser beams.

The safety laser scanner forms a protective field using the invisible laser beams. This protective field protects the hazardous area and enables hazardous point protection, access protection or hazardous area protection. As soon as an object is situated in the protective field, the safety laser scanner signals the detection by means of a signal change at the safety output (OSSD for example). The machine or its control must safely analyze the signals (for example using a safe control or safety relays) and stop the dangerous state.

The safety laser scanner operates on the principle of optical time-of-flight measurement. It emits light pulses in regular, very short intervals. If the light strikes an object, it is reflected. The safety laser scanner receives the reflected light. The safety laser scanner calculates the distance to the object based on the time interval between the moment of transmission and moment of receipt (Δt).

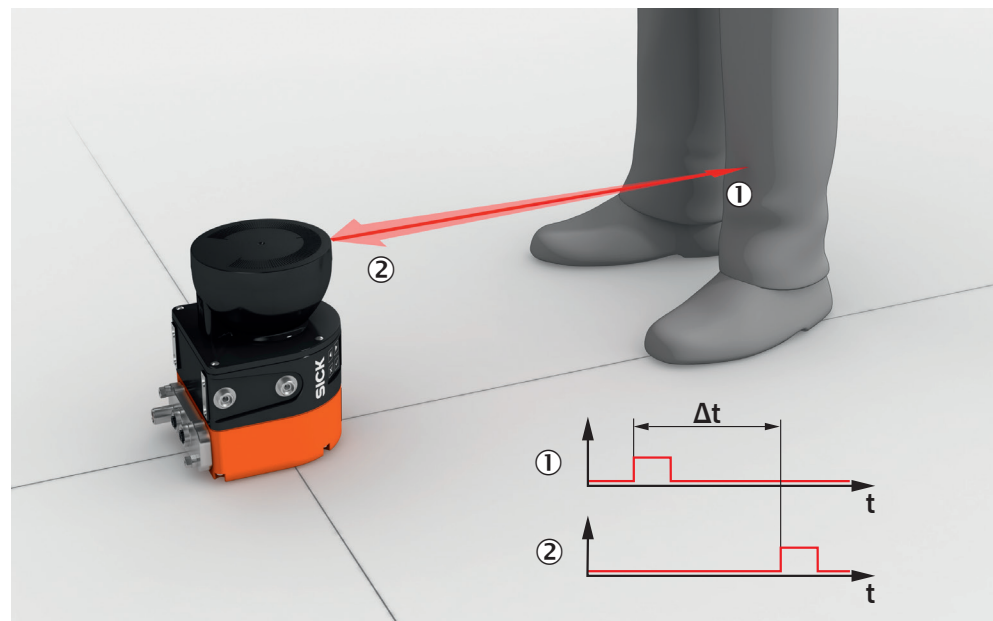


Figure 4: Principle of time-of-flight measurement

- ① Transmitted light pulse
- ② Reflected light pulse

A rotating mirror is situated in the safety laser scanner. The mirror deflects the light pulses so that they scan a fan-shaped area.

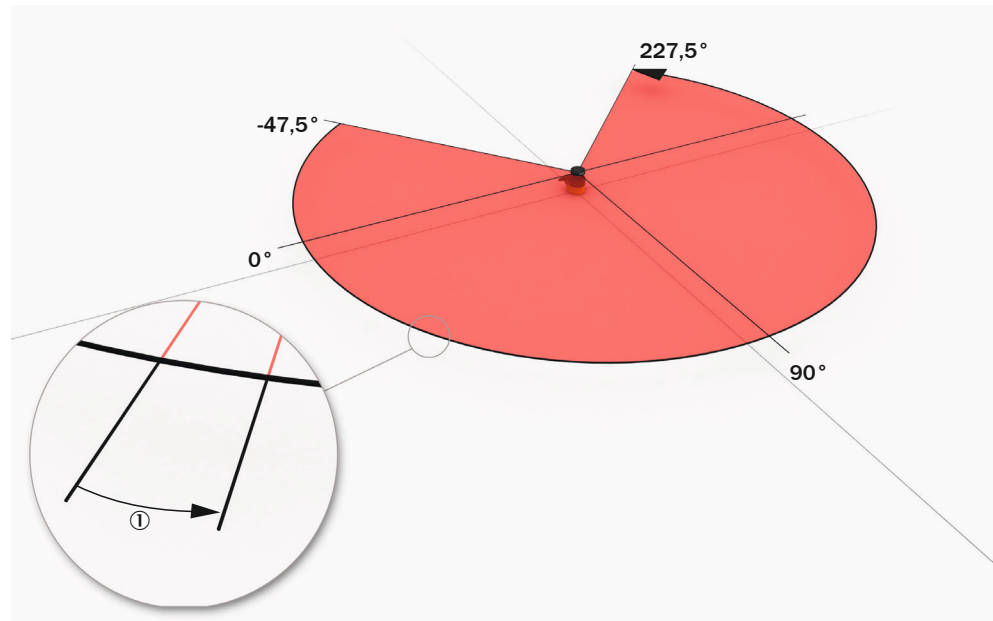


Figure 5: Light pulses scan an area

① Angular resolution: the angular distance (in degrees) between 2 distance measurements

Scan cycle time and resolution

The time that the mirror requires for one rotation is called the scan cycle time. The number of light pulses per unit of time is constant. The scan cycle time and the number of light pulses per unit of time determine the angular resolution. The scanning range for a given object resolution depends on the angular resolution. The object resolution indicates the minimum size that an object must be to allow it to be detected safely. The scan cycle time also influences the response time.

The resolution in protective fields can be set to various values according to the intended purpose.

Geometry of the scan plane

The laser beams emitted cover a sector of a circle, so an object can be detected in an area of up to 275° .

The sector of a circle covered ranges from -47.5° to 227.5° , where 90° denotes the axis of the safety laser scanner from the back to the front. When viewing the safety laser scanner from above, the direction of rotation of the mirror and the deflected light pulses is counterclockwise, [see figure 5](#).

3.4 Product characteristics

3.4.1 Variants

The safety laser scanner is delivered in different variants. You will find an overview of important distinguishing features of the variants in the following.

Integration in the control

The safety laser scanner communicates with the machine controller as follows:

- PROFINET PROFIsafe

The safety laser scanner allows the measurement data and other data to be output in the following way:

- UDP and TCP/IP

Protective field range

The safety laser scanner is available in variants with the following maximum protective field range:

- 4.0 m

Further topics

- ["Variant overview", page 140](#)

3.4.2 Connections

Overview

- 1 x male connector, M12, A-coding for voltage supply
- 2 x female connector, M12, D-coding for network (PROFINET PROFIsafe, data output, configuration, and diagnostics)
- 1 x female connector, USB 2.0 Mini-B for configuration and diagnosis. ¹⁾

Further topics

- ["Connection overview", page 65](#)

3.4.3 System plug

A system plug is required to operate the safety laser scanner.

The metal plate with the connections is the system plug ([see figure 3, page 13](#)). The system plug can either be mounted on the rear side or the underside.

The safety laser scanner's internal configuration memory is integrated in the system plug. The system plug and all connecting cables can remain at the installation site when the safety laser scanner is replaced. The system plug is detached from the defective safety laser scanner and connected to the new safety laser scanner. The new safety laser scanner reads the configuration from the configuration memory when switched on.

3.4.4 Field types

During operation, the safety laser scanner uses its laser beams to continuously check whether people or objects are present in one or more areas. The areas to be checked are called fields. A distinction is made between the following field types, depending on the application type:

- Protective field
- Warning field

Table 3: Field types and their function

	Protective field	Warning field
Safe switch off (according to ISO 13849-1)	Yes (PL d)	No
Max. scanning range of the safety laser scanner	4.0 m	40 m
Purpose	Detection and protection of people	Functional use (no safety-relevant use)

¹⁾ The USB connection may only be used temporarily and only for configuration and diagnostics.

Protective field

The protective field is the area in which the test object specified by the manufacturer is detected by the electro-sensitive protective equipment (ESPE). As soon as the electro-sensitive protective device detects an object in the protective field, it switches the associated safety outputs to the OFF state. This signal can be passed to controllers resulting in the dangerous state coming to an end, e.g. to stop the machine or the vehicle.

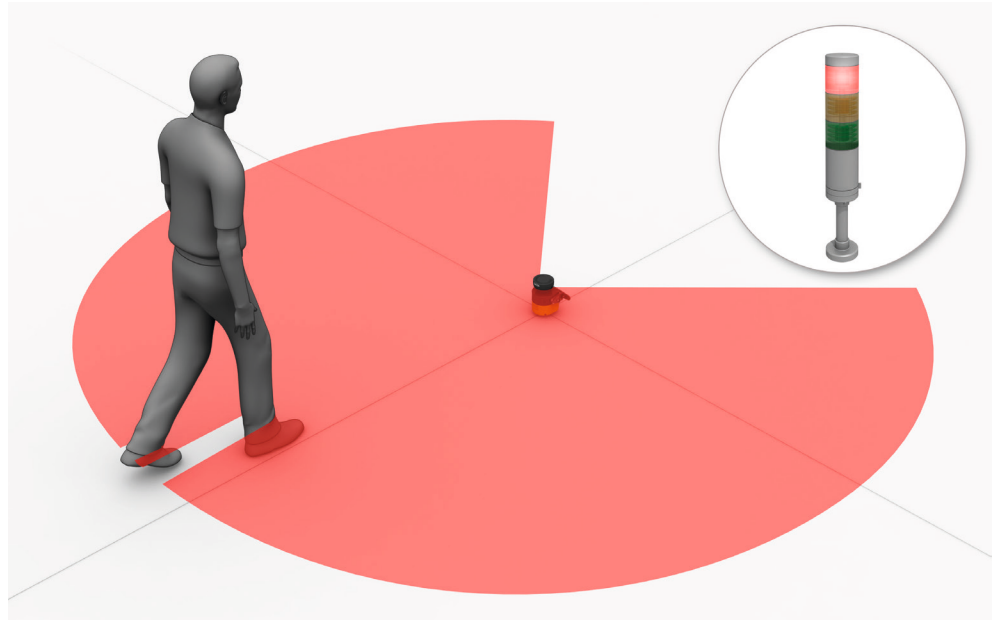


Figure 6: Protective field, shown in red in this document

Warning field

The warning field monitors larger areas than the protective field. Simple switching functions can be triggered with the warning field, e.g. a warning light or an acoustic signal can be triggered if a person approaches, even before the person enters the protective field.

The warning field must not be used for safety applications.

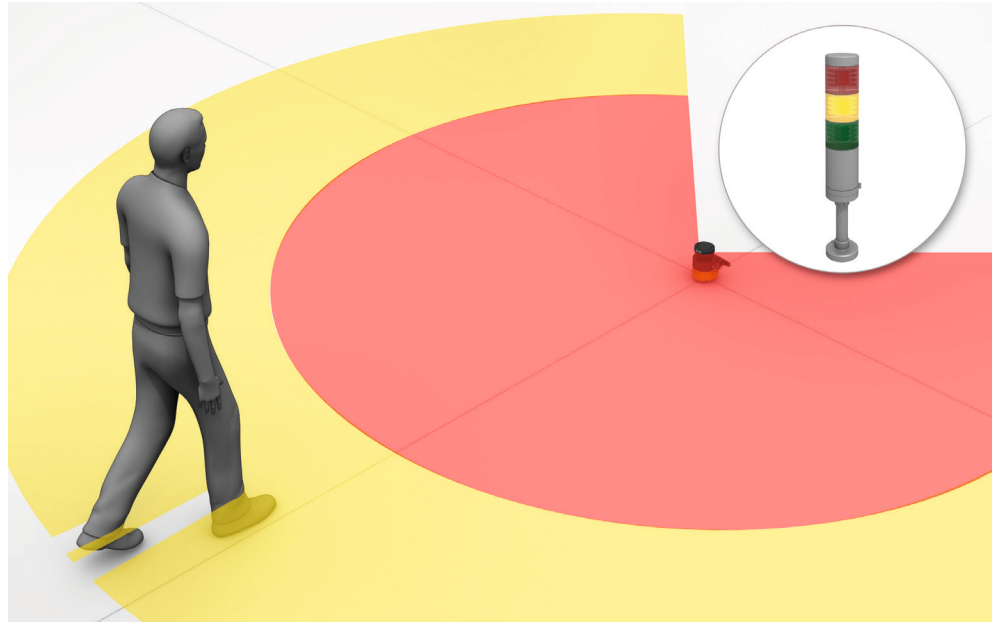


Figure 7: Warning field, shown in yellow or orange in this document

3.4.5 Field set

A field set consists of one or more fields. The fields in a field set are monitored simultaneously.

A field set can contain different field types, e.g., a protective field and a warning field.

A typical application is the use of a protective field with one or more warning fields: if a vehicle approaches a person, a warning field triggers an optical or acoustic signal. If the person does not react to this and the vehicle continues to approach, the safety laser scanner detects an object in the protective field and switches the associated safety outputs to the OFF state. The vehicle stops before it reaches the person.

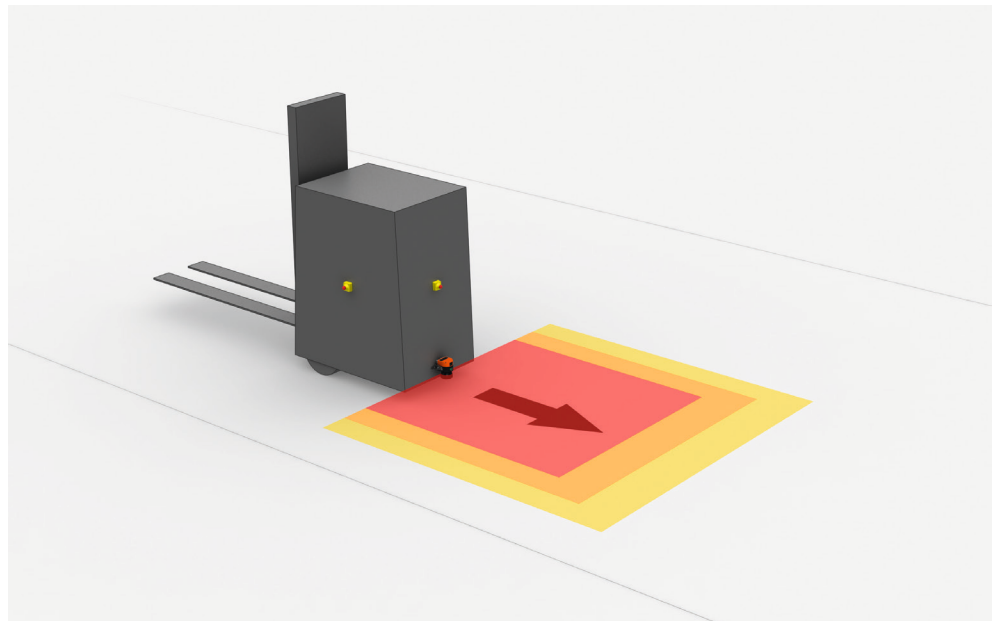


Figure 8: Field set, consisting of one protective field (red) and 2 warning fields (orange and yellow)

3.4.6 Monitoring case

A monitoring case signals the machine status to the safety laser scanner. The safety laser scanner activates the field set, which is assigned to the monitoring case and therefore a particular machine status.

If a machine, e.g., has various operational statuses, a monitoring case can be assigned to each operational status. The safety laser scanner receives a defined signal for the current operational status via the safety-related network. If there is a change of signal, the safety laser scanner switches from one monitoring case to the monitoring case that is assigned to the new signal (as well as the new operational status). Generally, one field set is assigned to each monitoring case.

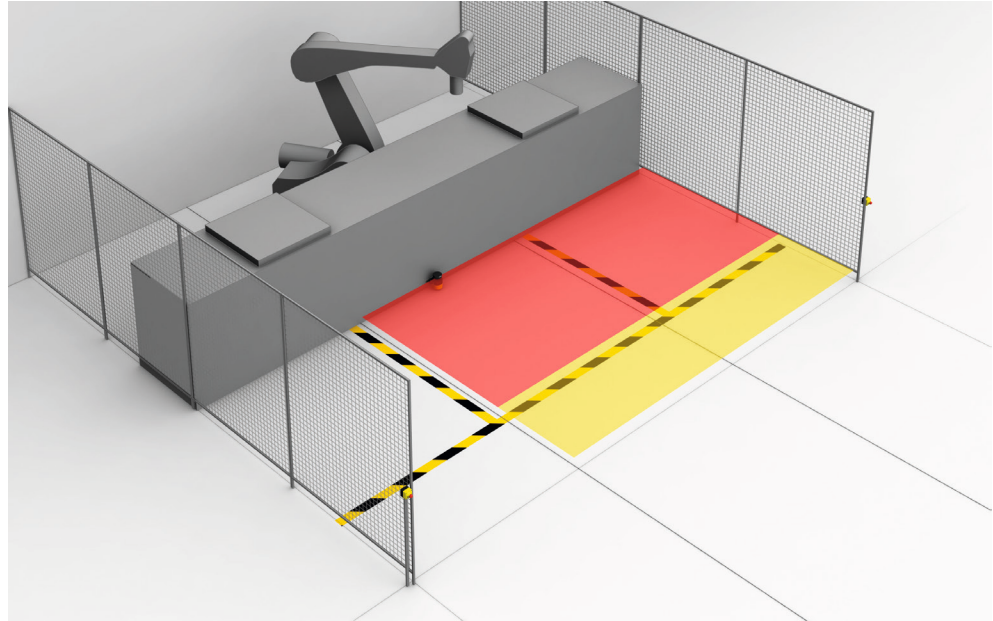


Figure 9: Monitoring case 1 with field set 1

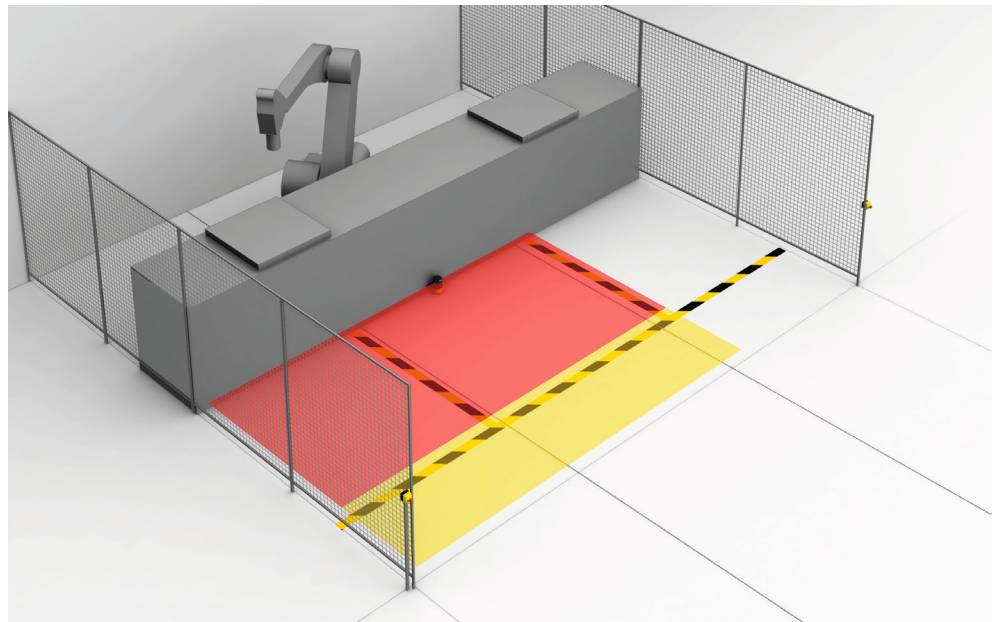


Figure 10: Monitoring case 2 with field set 2

3.4.7 Simultaneous monitoring

The safety laser scanner can monitor several field sets in one monitoring case (e.g. hazardous area to the left and hazardous area to the right). The field sets can affect different safety outputs in variants with several safety outputs.

For example, they can protect 2 machines with only one safety laser scanner.

In order to configure simultaneous monitoring, assign several field sets to a monitoring case in Safety Designer, see ["Assigning field sets"](#), page 100.

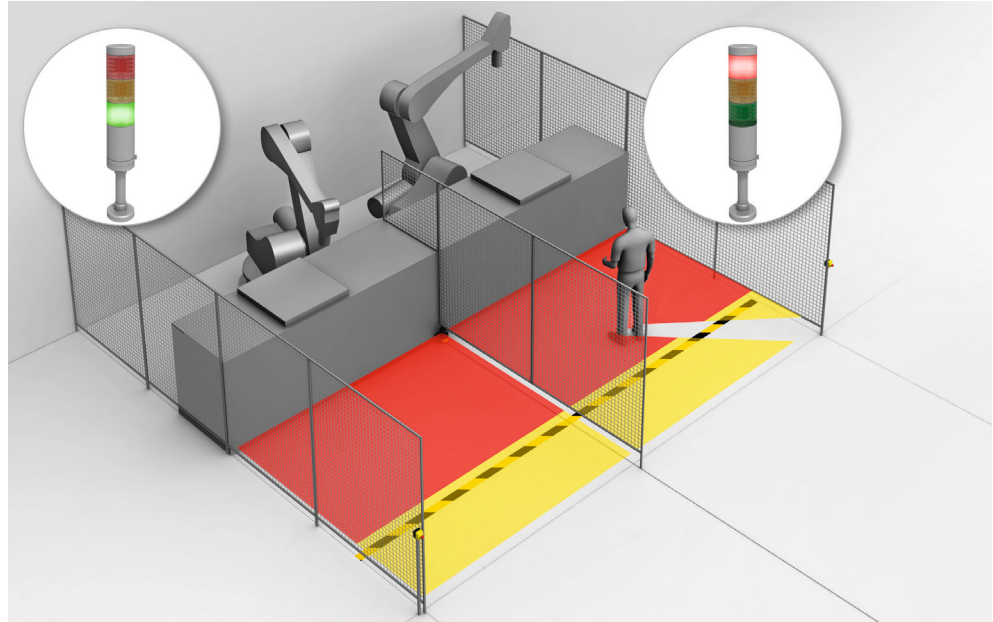


Figure 11: Simultaneous monitoring

3.5 Example applications

Important information



DANGER

Hazard due to lack of effectiveness of the protective device

Persons or parts of the body to be protected may not be recognized or not recognized in time in case of non-observance.

- ▶ Only use the safety laser scanner as follows:
 - Hazardous area protection (stationary or mobile)
 - Horizontal scan plane
 - Leg detection and detection of persons in a lying position

Hazardous area protection

In hazardous area protection, people are detected if they stay in a defined area.

This type of protective device is suitable for machines, where it is possible to see a hazardous area completely from the reset pushbutton. When the hazardous area is entered, a stop signal is triggered and starting is prevented.

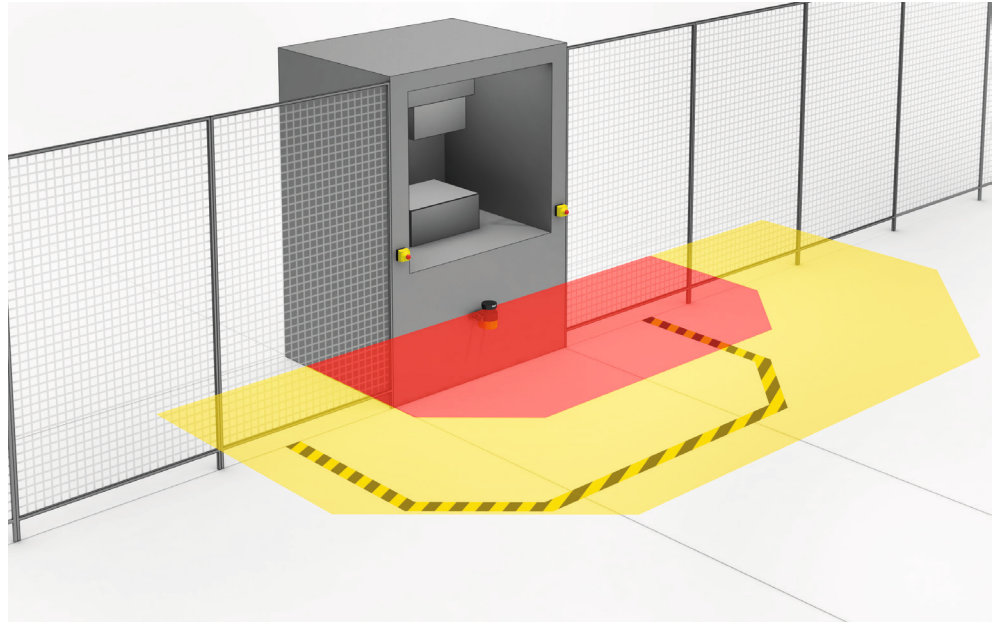


Figure 12: Hazardous area protection: detection of the presence of a person in the hazardous area

Mobile hazardous area protection

Mobile hazardous area protection is suitable for AGVs (automated guided vehicles), cranes, and forklift trucks to protect people when vehicles are moving or docking at a fixed station.

The safety laser scanner monitors the area in the direction of travel and stops the vehicle as soon as an object is located in the protective field.

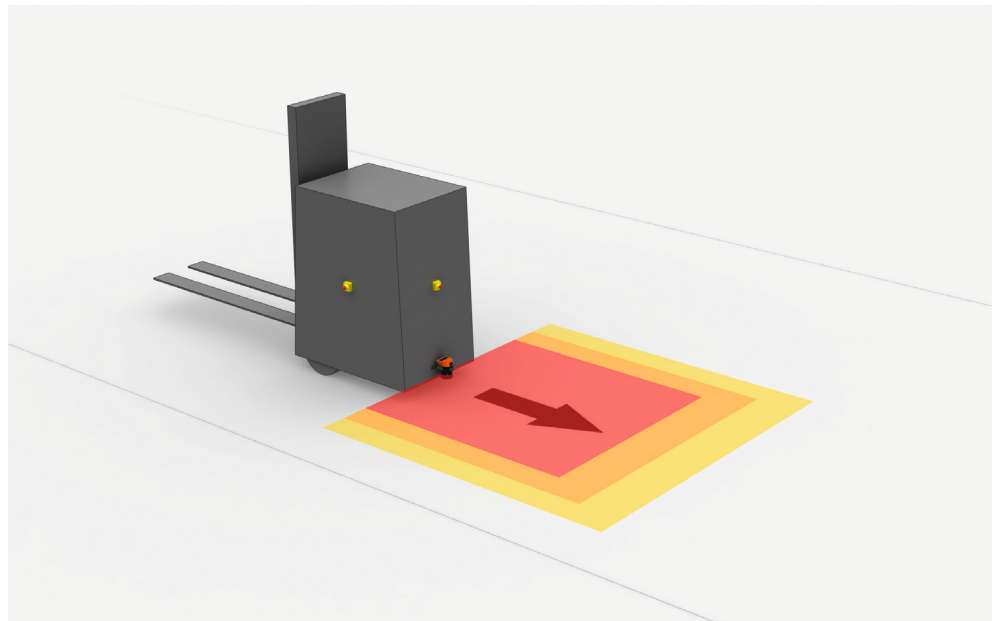


Figure 13: Mobile hazardous area protection: detection of a person when a vehicle approaches

4 Project planning

4.1 Manufacturer of the machine



DANGER

Hazard due to lack of effectiveness of the protective device

Persons and parts of the body to be protected may not be recognized in case of non-observance.

- ▶ Use of the safety laser scanner requires a risk assessment. Check whether additional protective measures are required.
 - ▶ Comply with the applicable national regulations derived from the application (e.g., work safety regulations, safety rules, or other relevant safety guidelines).
 - ▶ Apart from the procedures described in this document, the components of the safety laser scanner must not be opened.
 - ▶ The safety laser scanner must not be tampered with or changed.
 - ▶ Improper repair of the protective device can lead to a loss of the protective function. The protective device must only be repaired by the manufacturer or by someone authorized by the manufacturer.
-

4.2 Operator of the machine



DANGER

Hazard due to lack of effectiveness of the protective device

Persons and parts of the body to be protected may not be recognized in case of non-observance.

- ▶ Changes to the electrical integration of the safety laser scanner in the machine control and changes to the mechanical mounting of the safety laser scanner necessitate a new risk assessment. The results of this risk assessment may require the entity operating the machine to meet the obligations of a manufacturer.
 - ▶ Changes to the device's configuration may impair the protective function. The effectiveness of the protective device must be checked after any change to the configuration. The person carrying out the change is also responsible for maintaining the protective function of the device.
 - ▶ Apart from the procedures described in this document, the components of the safety laser scanner must not be opened.
 - ▶ The safety laser scanner must not be tampered with or changed.
 - ▶ Improper repair of the protective device can lead to a loss of the protective function. The protective device must only be repaired by the manufacturer or by someone authorized by the manufacturer.
-

4.3 Outdoor applications

4.3.1 Permissible outdoor use



DANGER

Hazard due to lack of effectiveness of the protective device

Persons or parts of the body to be protected may not be recognized or not recognized in time in case of non-observance.

- ▶ Only use the safety laser scanner as follows:
 - Hazardous area protection (stationary or mobile)
 - Horizontal scan plane
 - Leg detection and detection of persons in a lying position

4.3.2 Ambient conditions when used outdoors

Overview

Table 4: Ambient conditions when used outdoors

Ambient conditions ¹⁾	
Rain	≤ 10 mm/h ²⁾
Snowfall	≤ 3 mm/h (SWE, Snow Water Equivalent) ³⁾
Fog	≥ 50 m (MOR, Meteorological Optical Range)

1) Under the specified ambient conditions, a 99% availability can generally be achieved using the following settings:

- Multiple sampling: n = 4
- Protective field size: 4 m at 275°
- Object resolution: d = 70 mm

These values were determined statistically using a simulation based on real measurements.

A high availability is achieved when using smaller protective fields and a higher multiple sampling setting.

2) Equivalent to strong rain.

3) Equivalent to moderate snowfall.

Ambient conditions can affect the safety laser scanner. This may have a negative impact on the availability of the machine. That is to say, the safety laser scanner switches off the machine even though there are no people in the protective field. When using the device for outdoor applications, you need to take the ambient conditions into account and take suitable remedial measures.

Direct weather influences can prematurely age the device.

To protect the device from ambient conditions, it is necessary to implement one of the following measures:

- ▶ Attach a weather protection hood, see ["Accessories", page 165](#).
- ▶ Mount the device in a protected area of the vehicle or machine, see ["Mounting in the machine or vehicle's paneling", page 33](#).

Further remedial measures:

- ▶ Set multiple sampling to n ≥ 4 if the resultant response time permits this, see ["Multiple sampling", page 84](#).
- ▶ Set multiple sampling after monitoring case switching to a higher value if the resultant response time permits this, see ["Multiple sampling after monitoring case switching", page 85](#).
- ▶ Set multiple sampling after object detection to a lower value, see ["Multiple sampling after object detection", page 85](#).
- ▶ Configure the protective field to be as small as possible. (The smaller the monitored area, the higher the availability of the machine.)

- ▶ Make provisions to transfer the safety function across to another monitoring system.
- ▶ If permissible, make provisions to allow the safety system to be manually bypassed if a suitably trained person is monitoring safe operation.

Temperature

The temperature of the device must be at least $-10\text{ }^{\circ}\text{C}$ when switched on. At lower temperatures the device must be warmed up before it is switched on.

Wind

Strong winds can further cool the device. If exposed to strong winds, the device may switch off even at temperatures within specification.

Remedial measures:

- ▶ Use a weather hood.
- ▶ Mount the device in a protected area of the vehicle or machine.

Ice on the optics cover

Ice on the optics cover can affect the safety laser scanner. This may have a negative impact on the availability of the machine. That is to say, the safety laser scanner switches off the machine even though there are no people in the protective field.



NOTICE

Mechanical action can damage the optics cover.

- ▶ Do not mechanically remove ice from the optics cover.

Remedial measures:

- ▶ Mount the device in a protected area of the vehicle or machine.
- ▶ Install additional heating.

Ice in the protective field

Ice in the protective field, for example icicles on the weather protection hood, can affect the safety laser scanner. This may have a negative impact on the availability of the machine. That is to say, the safety laser scanner switches off the machine even though there are no people in the protective field.



NOTICE

Mechanical action can damage the optics cover.

- ▶ Do not mechanically remove ice from the optics cover.

Remedial measures:

- ▶ Direct running water so that it does not flow or drip through the protective field.
- ▶ Install additional heating.
- ▶ Regularly remove the ice, for example icicles on the weather hood.

Condensation

Condensation on the optics cover can affect the safety laser scanner. This may have a negative impact on the availability of the machine. That is to say, the safety laser scanner switches off the machine even though there are no people in the protective field.

Moisture can condense on the optics cover, in particular when moving the device between indoors and outdoors, due to the rapid change in temperature.

Remedial measures:

- ▶ Mount the device in a protected area of the vehicle or machine.
- ▶ Install an air circulator on the device.
- ▶ Install additional heating.

Precipitation and water spray on the device

Direct weather influences can prematurely age the device.

Remedial measures:

- ▶ Use a weather hood.
- ▶ Mount the device in a protected area of the vehicle or machine.

Water spray on the optics cover

Direct water spray on the optics cover can affect the safety laser scanner. This may have a negative impact on the availability of the machine. That is to say, the safety laser scanner switches off the machine even though there are no people in the protective field.

Remedial measures:

- ▶ Avoid the creation of water spray in the vicinity of the device, for example by keeping other vehicles at a distance.
- ▶ Use a weather hood.
- ▶ Mount the device in a protected area of the vehicle or machine.
- ▶ Clean the optics cover using airWiper.

Water spray, precipitation, dust on the contamination measurement feature

The device continuously measures the contamination on the optics cover. If the optics cover becomes severely contaminated, the device switches all safety outputs to the OFF state.

The sensors for the contamination measurement feature are located on the base of the optics cover. When the sensors are obscured, the device detects the contamination even if the optics cover is clean.

Remedial measures:

- ▶ Avoid the creation of water spray in the vicinity of the device, for example by keeping other vehicles at a distance.
- ▶ Mount the device with the optics cover facing downward.
- ▶ Use a weather hood.
- ▶ Mount the device in a protected area of the vehicle or machine.
- ▶ Clean the optics cover using airWiper.

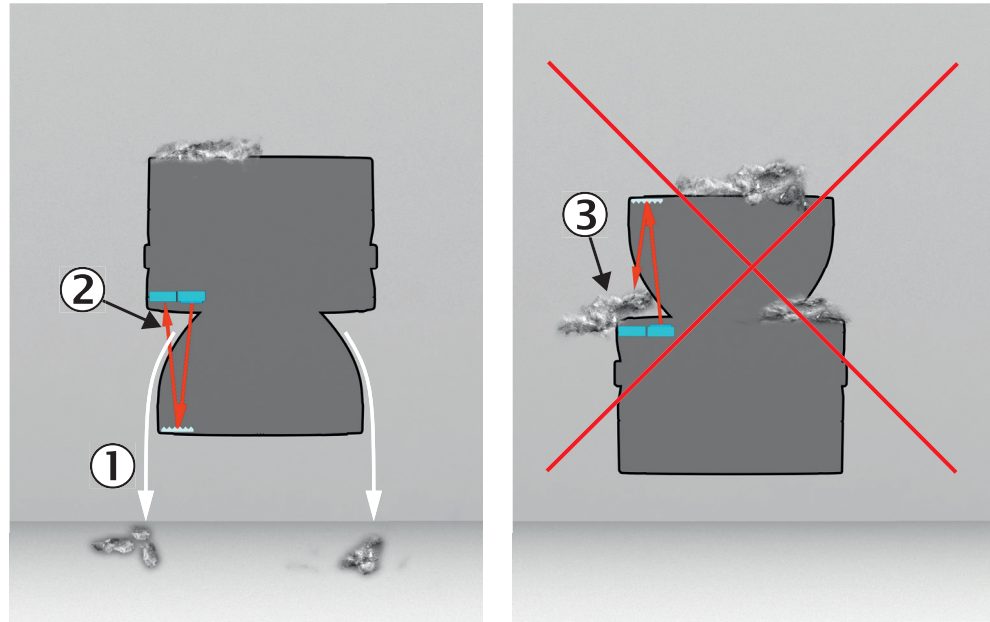


Figure 14: Device mounted with the optics cover facing downwards to prevent accumulation of contaminants on the contamination measurement feature

- ① Contaminants fall past the optics cover, water flows off
- ② Contamination measurement feature remains unobscured
- ③ Contamination or water collects on the base of the optics cover and triggers the contamination measurement feature

When using other suitable measures, the device can be mounted with the optics cover facing upwards.

Fog or particles in the protective field



NOTICE

Fog with a visual range of less than 50 m (MOR, Meteorological Optical Range) can affect the safety laser scanner.

- ▶ In case of heavy fog, use a protective field with the following parameters:
 - Length ≤ 2 m
 - Width ≥ 1.5 m
 - Object resolution = 50 mm

Fog, rain, snow, dripping water, insects, leaves or other particles in the protective field can affect the safety laser scanner. This may have a negative impact on the availability of the machine. That is to say, the safety laser scanner switches off the machine even though there are no people in the protective field.

Remedial measures:

- ▶ Set multiple sampling to $n \geq 4$ if the resultant response time permits this.
- ▶ Set Multiple sampling after monitoring case switching to a higher value if the resultant response time permits this.
- ▶ Set Multiple sampling after object detection to a lower value.
- ▶ Configure the protective field to be as small as possible. (The smaller the monitored area, the higher the availability of the machine.)
- ▶ Mount the device in such a way that no water from the weather hood, roofs, etc. can flow or drip through the protective field.

- ▶ Direct running water so that it does not flow or drip through the protective field.
- ▶ Configure the protective field to exclude areas where running water or water spray are likely to arise.

Gases, aerosols, chemicals, and salt spray

Gases, aerosols, chemicals, and salt spray (e.g., in the vicinity of the ocean) can prematurely age the device.

Gases, aerosols, chemicals, and salt spray (e.g., in the vicinity of the ocean) can lead to contamination on the optics cover. This may have a negative impact on the availability of the machine. That is to say, the safety laser scanner switches off the machine even though there are no people in the protective field.

Remedial measures:

- ▶ Keep gases, aerosols, chemicals, and salt spray away from the device.
- ▶ Mount the device in a protected area of the vehicle or machine.

Direct exposure to sunlight

Direct exposure to sunlight can prematurely age the device.

Direct exposure to sunlight can affect the safety laser scanner. This may have a negative impact on the availability of the machine. That is to say, the safety laser scanner switches off the machine even though there are no people in the protective field.

Recommendation:

- ▶ Use a weather hood, or mount the device in a protected area of the vehicle or machine.

Further remedial measures:

- ▶ Prevent direct exposure to sunlight in the beam direction, e.g., align the scan plane horizontally or slightly downwards.

Vibrations, knocks

Vibrations or knocks that exceed the values for vibration resistance and shock resistance specified in the technical data, e.g., in the case of suspension-less vehicles or uneven roads, can affect the safety laser scanner. This may have a negative impact on the availability of the machine. That is to say, the safety laser scanner switches off the machine even though there are no people in the protective field.

Remedial measures:

- ▶ Use suitable damping measures, e.g. for vehicles:
 - damping elements in the chassis
 - Damping elements between the chassis and the safety laser scanner bracket
 - soft tires (e.g., pneumatic tires)

Environment with few objects

If the safety laser scanner does not detect any objects within the measuring range for an extended period of time, the integrated tamper protection switches the safety outputs to the OFF state.



DANGER

Hazard due to lack of effectiveness of the protective device

Persons or parts of the body to be protected may not be recognized or not recognized in time in case of non-observance.

The tampering protection is switched off for the application type **Large areas**. Tampering by positioning objects at close range (< 50 mm in front of the optics cover) may not be detected.

- ▶ Take the risk of tampering into account in the risk assessment.
- ▶ When using the **Large areas** application type, perform regular checks to ensure that there are no objects at close range (< 50 mm from the optics cover) impairing the line of sight of the device.

If the device is used in an environment with few objects, the tamper protection can be deactivated by using the **Large areas** application type, [see "Application", page 82](#). When using this application type, the risk of tampering must be taken into account in the risk assessment, and regular checks must be performed to ensure that there are no objects at close range (< 50 mm from the optics cover) impairing the line of sight of the device.

4.4 Assembly

Important information



DANGER

Hazard due to lack of effectiveness of the protective device

Persons and parts of the body to be protected may not be recognized in case of non-observance.

The optical beam path must not be disrupted, e.g. if the system is incorporated into paneling.

- ▶ Do not apply an additional front screen.
- ▶ If a viewing slit is required, make sure that it is adequately dimensioned, [see "Dimensional drawings", page 160](#).



NOTE

If you are not integrating the product in accordance with ISO 13855:2010, you must carry out an individual impact analysis.



NOTE

Certain optical and electromagnetic ambient conditions can affect the safety laser scanner. This may have a negative impact on the availability of the machine. That is to say, the safety laser scanner switches off the machine even though there are no people in the protective field.

For high availability:

- ▶ Avoid having strong electric fields in the vicinity of the safety laser scanner. These may be caused by nearby welding or induction cables, for example.
- ▶ Avoid condensation on the optics cover.

Prerequisites

- The safety laser scanner must be affixed so that people or parts of the body are reliably detected upon entry into the hazardous area.
- The safety laser scanner must be affixed so that no mirrors or other exceedingly reflective objects are in the protective field.

- The safety laser scanner must be affixed so that no small objects (e.g. cables) are in the protective field, even if the safety outputs do not switch to the OFF state as a result.
- The safety laser scanner must be affixed so that no obstacles disrupt the field of view of the safety laser scanner. Take additional protective measures if a risk arises due to unavoidable obstacles.
- If people can stay between the protective device and the hazardous point without being detected, check if additional protective measures (e.g. restart interlock) are required.
- Reaching under, over and around, crawling beneath and stepping over the safety laser scanner, as well as moving it, must be prevented.

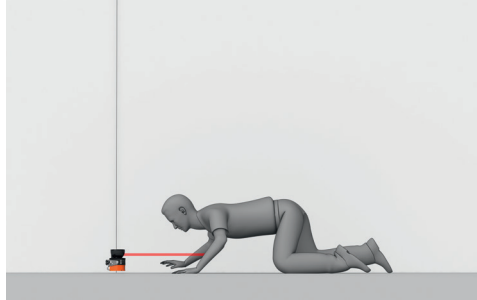


Figure 15: Prevent crawling beneath



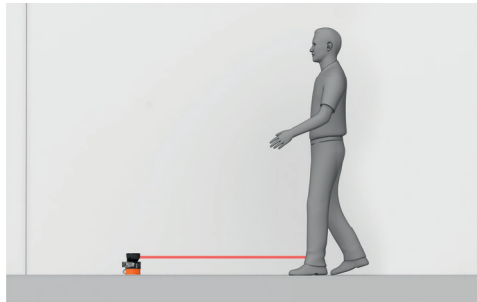


Figure 16: Prevent stepping over

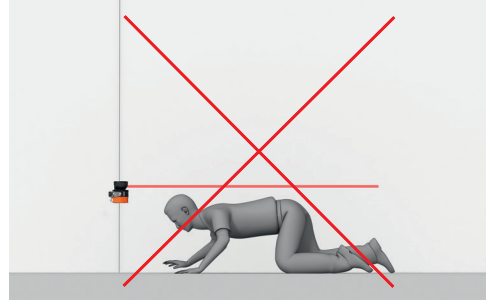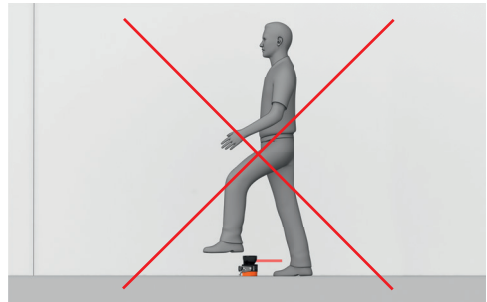

Further topics

- ["Mounting", page 60](#)

4.4.1 Protection from influences

A safety laser scanner can be influenced by the beams from a different laser source in close proximity to it, e.g. by another laser scanner. This may impair the machine's availability. That is to say, the affected safety laser scanner switches the machine off, although no people are situated in the protective field.

A safety laser scanner may be dazzled by a strong external light source in the scan plane. This may have a negative impact on the availability of the machine. That is to say, the safety laser scanner switches off the machine even though there are no people in the protective field.

You can use the following measures to increase the availability:

- Higher multiple sampling reduces the likelihood of a laser source influencing the safety laser scanner. You can increase the availability by setting multiple sampling to the highest value permitted in your application, while taking minimum distances into account, [see "Multiple sampling", page 84](#).
- You can further increase the availability by choosing a suitable mounting method, [see "Mounting methods for protection from interference from systems in close proximity", page 173](#).
- Avoid external light sources in the scan plane. Mount the safety laser scanner so that it cannot be dazzled by incoming sunlight. Do not position halogen lights, infrared light sources or stroboscopes directly on the scan plane.



NOTE

You must comply with the standard ISO 13855:2010 when choosing the mounting method.

4.4.2 Preventing unprotected areas



DANGER

Hazard due to lack of effectiveness of the protective device

Persons and parts of the body to be protected may not be recognized in case of non-observance.

The safety laser scanner must be mounted in such a way that people cannot enter unsecured areas without being detected.

- ▶ Attach deflector plates to prevent anyone standing behind.
 - ▶ Mount the safety laser scanner in an undercut.
 - ▶ Mount the safety laser scanner in the paneling of the machine or vehicle.
 - ▶ Mount a frame to prevent access to the area.
-

Unsecured areas behind the safety laser scanner

Depending on the mounting situation, areas may result, which cannot be detected by the safety laser scanner.

The undetected areas become larger if the safety laser scanner is mounted using a mounting kit.

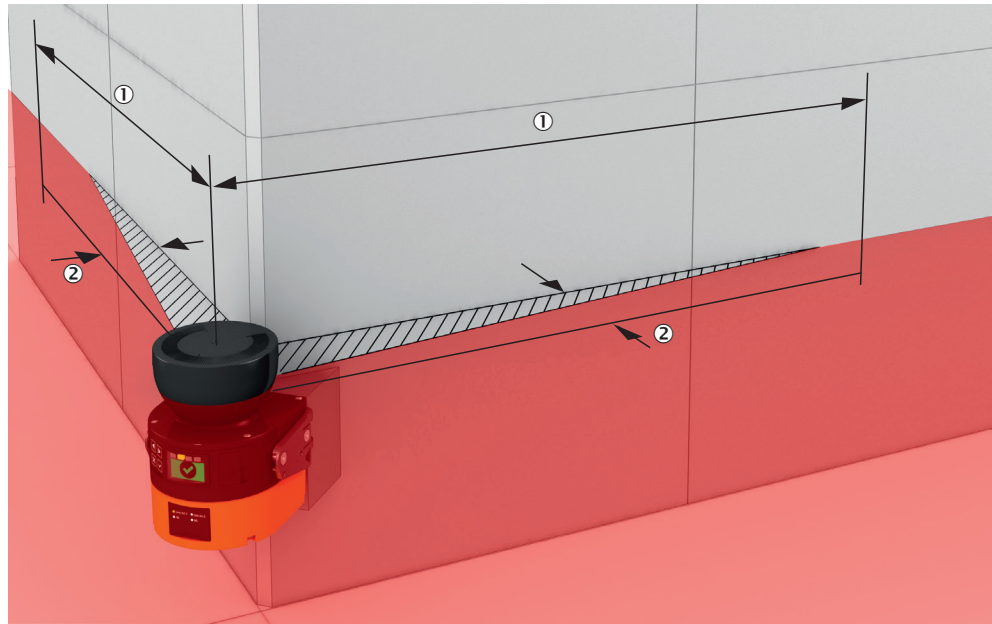


Figure 17: Unsecured areas

- ① Length of the unsecured area
- ② Width of the unsecured area

Area where detection capability is restricted

In close proximity (50 mm-wide area in front of the optics cover), the detection capability of the safety laser scanner may be restricted. If required, this area must be secured using an undercut or frame, for example.

Mounting with deflector plates



Figure 18: Mounting with deflector plates (example)

- Attach the deflector plates ① so that it is not possible to step into unsecured areas.
- Attach the deflector plates so that they lie outside the scan plane.

Mounting in an undercut

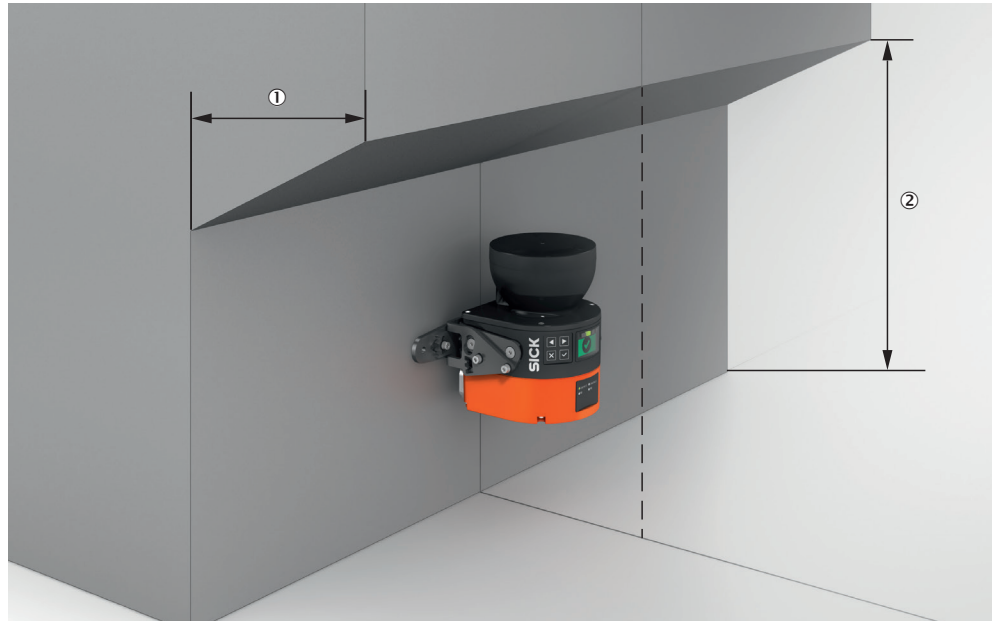


Figure 19: Mounting in an undercut (example)

- ▶ Mount the safety laser scanner in an undercut so that no-one can enter the unsecured areas.
- ▶ Make the undercut at least deep enough ①, that it covers the unsecured areas completely and no one can enter the unsecured areas.
- ▶ Prevent crawling beneath the undercut. Design the undercut to be so low ②, that no one can crawl into it.

Mounting in the machine or vehicle's paneling

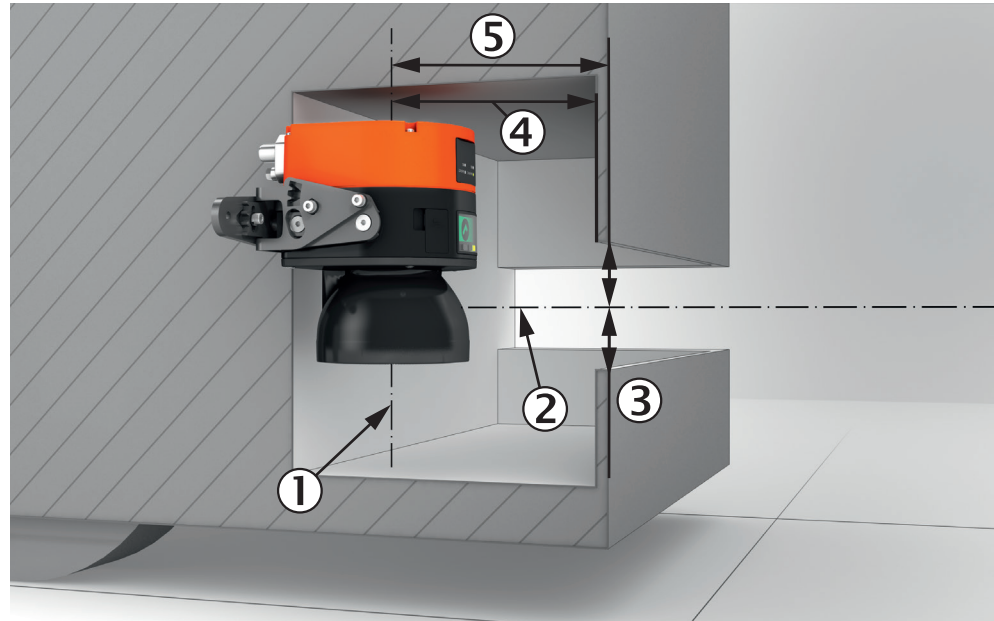


Figure 20: Mounting in vehicle paneling (example)

- ① Mirror rotational axis
- ② Scan plane
- ③ Required viewing slit
- ④ Space for mounting or replacing the device
- ⑤ Overrun

If no weather hood is used, the device must be protected against direct weather influences by other suitable measures.

- ▶ The weather protection should prevent rain and water spray from getting onto the device.
- ▶ The weather protection should protect the device from direct sunlight.
- ▶ The weather protection should ensure that no running water flows or drips through the protective field.
- ▶ Adequately dimension the viewing slit, [see "Dimensional drawings", page 160](#). For overrun ⑤ > 200 mm: Take the scan field flatness into account when dimensioning the viewing slit.
- ▶ In environments with very low ambient temperatures or rapid changes in temperature, equip the weather protection with thermal insulation.

4.4.3 Response time of the safety laser scanner

The safety laser scanner's response time must be taken into account, among other things, so that the safety laser scanner can be positioned in a suitable location and the protective fields can be sized correctly.

The response times are specified in the technical data, [see "Response times", page 145](#).

The response time of the safety laser scanner resulting from current settings is shown in Safety Designer.

4.4.4 Monitoring case switching time

When switching between monitoring cases, it is possible that a person may already be in the newly activated protective field when switching takes place. Only switching in time (namely before the danger arises for the person at this location) ensures protection.



DANGER

Hazard due to lack of effectiveness of the protective device

- ▶ Switching of the monitoring case should be timed so that the safety laser scanner detects a person in the protective field with a sufficient minimum distance, before the dangerous state occurs.



DANGER

Hazard due to lack of effectiveness of the protective device

Persons or parts of the body to be protected may not be recognized or not recognized in time in case of non-observance.

In addition to the parameters considered below, the switching signal's propagation delay time up to the protective device also influences the switching duration. These include the network cycle time and the processing time of a control, for example.

- ▶ Take account of the switching signal's propagation delay time up to the protective device.

In some cases, the process of switching between monitoring cases takes so long that the new monitoring case is not available inside the response time provided. This means that it may not be possible to detect a person in the protective field in time. In cases like this, you must start switching between monitoring cases earlier.

The following parameters influence the duration of the process:

- The processing time for the chosen input.

You calculate when to switch between monitoring cases as follows

1. First calculate how long it takes to switch between monitoring cases:
 $t_{CSR} = t_l$
 where:
 - t_{CSR} = time required for switching between monitoring cases in milliseconds (ms)
 - t_l = processing time for the selected switching type in milliseconds (ms)
 - Switching signal via network: $t_l = 28 \text{ ms}$
2. Then calculate how much time is available in the response time for switching between monitoring cases:
 $t_{CSA} = (n - n_{CS}) \times t_s$
 where:
 - t_{CSA} = time available for switching between monitoring cases in milliseconds (ms)
 - n = set multiple sampling (default: $n = 2$)
 - n_{CS} = multiple sampling after switching between monitoring cases (with setting **Fast** (default): $n_{CS} = 1$, with setting **Reliable**: $n_{CS} = n - 1$, with setting **User-defined**: $n_{CS} \leq n - 1$)
 - t_s = scan cycle time in milliseconds (ms)

3. Then check whether there is enough time available for switching between monitoring cases:
 - If $t_{CSA} \geq t_{CSR}$: earlier start is not necessary.
 - If $t_{CSA} < t_{CSR}$: you must start switching between monitoring cases earlier. The time advance t_{CSP} required is: $t_{CSP} = t_{CSR} - t_{CSA}$

**NOTE**

In some cases, it is not possible to define when to switch (for example because processing times of the machine vary) or the time advance means that the monitoring of an area finishes too early. Follow one of the following recommendations in these cases:

- ▶ Allow the two protective fields to partially overlap.
- ▶ Temporarily monitor both hazardous areas simultaneously.

4.4.5 Hazardous area protection

The safety laser scanner is mounted with a horizontal scan plane in a stationary application. This is, for example, on a machine where the hazardous area is not completely surrounded by a physical guard. During hazardous area protection, the safety laser scanner detects a person's legs. The protective field is parallel to the person's direction of approach.

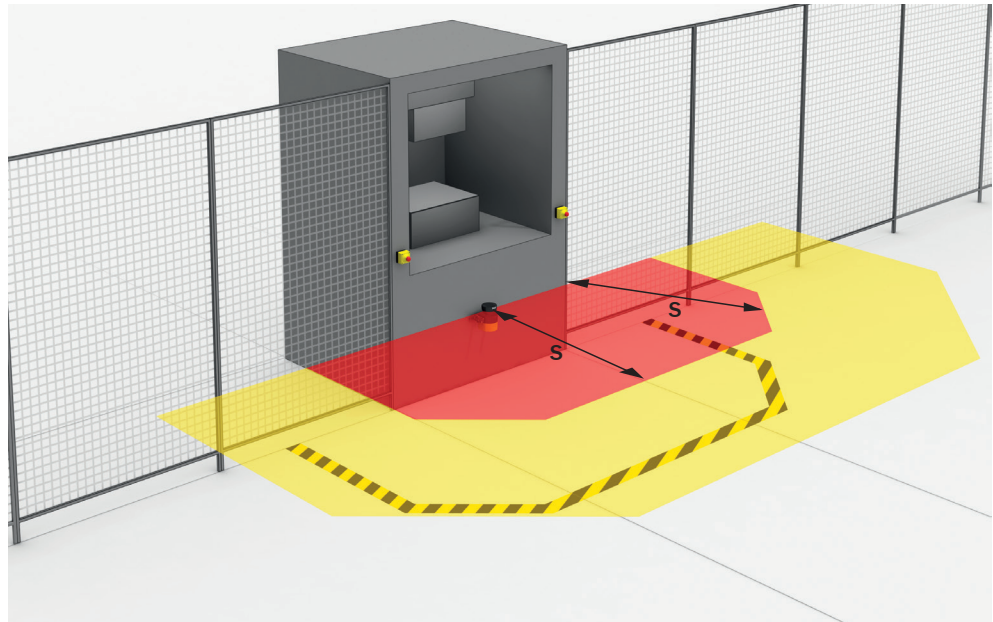


Figure 21: Stationary application with horizontal scan plane for hazardous area protection

**NOTE**

Mark the outline of the protective field boundaries on the floor after you have worked out the protective field size. By doing this, you allow machine operators to see the protective field boundaries and make it easier to thoroughly check the protective function at a later date.

4.4.5.1 Protective field

Overview

The protective field must be designed so that it detects a person at a minimum distance from the hazardous point. This distance is required to prevent a person or part of their body from reaching the hazardous area before the end of the machine's dangerous state.

In hazardous area protection, the minimum distance typically defines the protective field size required.

If you define a number of monitoring cases with different protective fields, you must calculate the protective field size separately for each protective field used.

In many cases, a resolution of 50 mm to 70 mm is suitable for hazardous area protection.

Important information



DANGER

Hazard due to lack of effectiveness of the protective device

In the case of non-compliance, it is possible that the dangerous state of the machine may not be stopped or not stopped in a timely manner.

1. Calculate the required minimum distance for your machine using the following formulas and examples.
 2. Take this calculation and the specifications in these instructions into account when mounting the safety laser scanner.
 3. Take this calculation and the specifications in these instructions into account when configuring the safety laser scanner.
-



DANGER

Hazard due to lack of effectiveness of the protective device

Persons and parts of the body to be protected may not be recognized in case of non-observance.

Body parts to be protected may not be detected under coarse resolution.

- Use a resolution of 70 mm or finer for hazardous area protection.
 - For hazardous area protection with a resolution of 70 mm: make sure that it is possible to detect a human leg.
 - For hazardous area protection with a resolution of 70 mm: mount the safety laser scanner at a height of at least 300 mm (height of the scan plane).
 - If it is not possible to mount the safety laser scanner at a height of at least 300 mm, use a finer resolution, [see "Calculating required resolution", page 40](#).
-

4.4.5.2 Calculating minimum distance

Overview

The calculation of the minimum distance is based on international or national standards and statutory requirements applicable at the place of installation of the machine.

If the minimum distance is calculated according to ISO 13855:2010, then it depends on the following points:

- Machine stopping time (time interval between triggering the sensor function and the end of the machine's dangerous state, including signal propagation times in the network and processing time in the control)
- Response time of the protective device, [see "Response times", page 145](#)
- Reach or approach speed of the person

- Resolution (detection capability) of the safety laser scanner
- Type of approach: parallel
- Parameters specified based on the application
- Supplements for general and, possibly, reflection-based measurement errors
- Supplement to protect against reaching over
- Height of the scan plane
- Switching time between monitoring cases

Important information



NOTE

Additional information is available in the ISO 13855:2010 standard and in the Guide for Safe Machinery.



NOTE

SICK offers a stopping/run-down time measurement service in many countries.

Example calculation of the minimum distance S according to ISO 13855:2010

The example shows the calculation of the minimum distance for parallel approach to the protective field. Depending on the application and the ambient conditions a different calculation may be required. (e.g., a protective field or at an arbitrary angle to the direction of approach or an indirect approach)

- Calculate S using the following formula:

$$S = 1,600 \text{ mm/s} \times T + TZ + Z_R + C_{RO}$$

where:

- S = minimum distance in millimeters (mm)
- T = stopping/run-down time for the entire system in seconds (s)
(Response time of the safety laser scanner + machine stopping time, incl. response time of the machine control system and signal propagation time)
- TZ = tolerance zone of the safety laser scanner, [see "Data sheet", page 141](#)
- Z_R = supplement for reflection-based measurement errors in millimeters (mm)
- C_{RO} = supplement to protect against reaching over, in millimeters (mm)

The reach/approach speed is already included in the formula.

Supplement Z_R for reflection-based measurement errors

All devices: If there is a retroreflector in the vicinity of the protective device (distance of the retroreflector from protective field ≤ 6 m), you must take the supplement $Z_R = 350$ mm into account.

Supplement C_{RO} to protect against reaching over

Under certain circumstances, a person can reach the hazardous area by reaching over, before the protective device stops the dangerous state. Supplement C_{RO} prevents this.

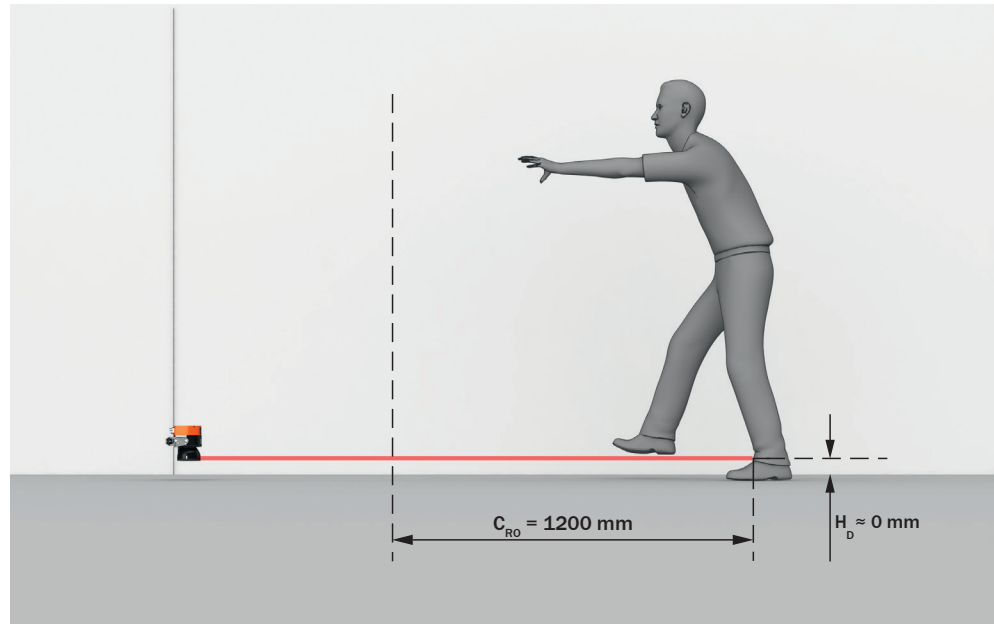


Figure 22: Protection against reaching over when mounted low (dimensions in mm)

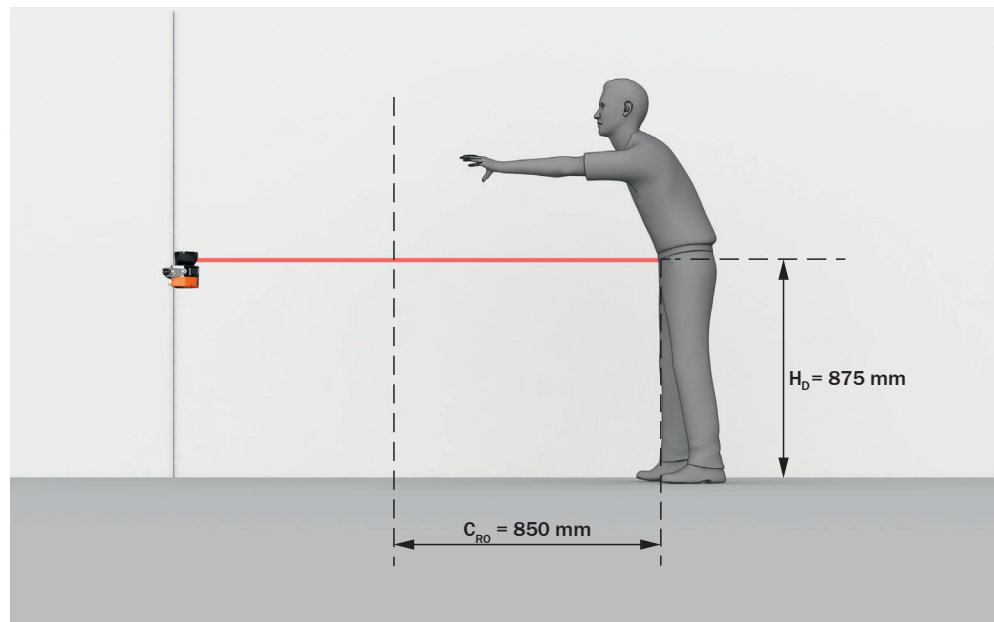


Figure 23: Protection against reaching over when mounted high (dimensions in mm)

The necessary supplement to the minimum distance depends on the height of the protective field's scan plane. The supplement is larger if the safety laser scanner is affixed low-down than if it is affixed high-up.

Calculating the supplement C_{R0}

- ▶ If you have sufficient free space in front of your machine, use value 1,200 mm as the supplement C_{R0} .
- ▶ If you want to keep the minimum distance as low as possible, use the following formula to calculate C_{R0} :

$$C_{R0} = 1,200 \text{ mm} - (0.4 \times H_D)$$
 where:
 - H_D = height of the protective field above the floor in millimeters (mm).

- ✓ If the result is $C_{RO} \geq 850$ mm, then use the calculated value as supplement C_{RO} .
- ✓ If the result is $C_{RO} < 850$ mm, then use $C_{RO} = 850$ mm (this value corresponds to an arm's length and is valid as a minimum supplement to protect against reaching over).

4.4.5.3 Height of the scan plane

Overview

If you choose a resolution of 70 mm for hazardous area protection, it is not possible to detect a human leg under certain circumstances. This is because a beam does not hit the leg. Rather, the beams pass by the sides of the ankle (see figure 24, page 39). If you mount the safety laser scanner at a height of at least 300 mm (height of the scan plane), the scan plane is at calf height and the leg is detected even at a resolution of 70 mm (see figure 25, page 40).

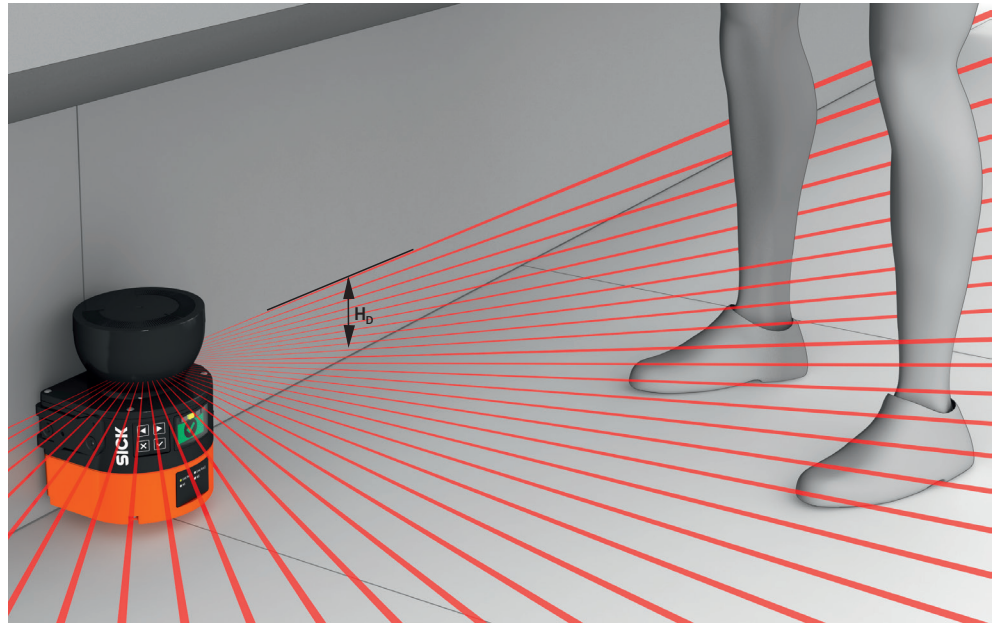


Figure 24: Scan plane at ankle height

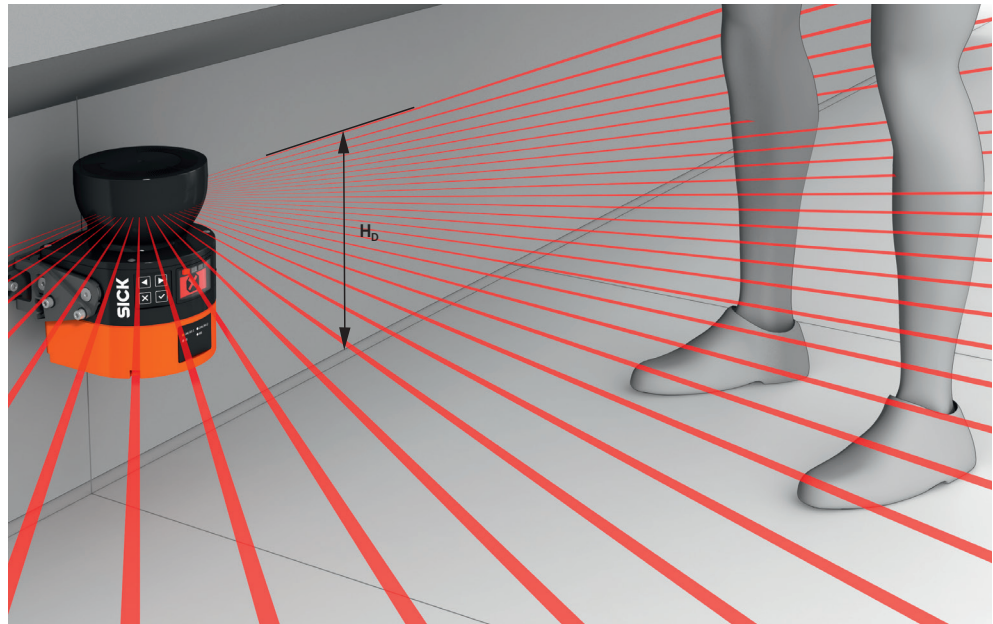


Figure 25: Scan plane at calf height

Important information



DANGER

Hazard due to lack of effectiveness of the protective device

It is possible to get around the protective device by crawling beneath.

- ▶ Prevent people from being able to crawl beneath the protective field by mounting the safety laser scanner appropriately.
- ▶ If you mount the protective device higher than 300 mm, you must use additional measures to prevent people crawling underneath.



DANGER

Hazard due to lack of effectiveness of the protective device

Persons and parts of the body to be protected may not be recognized in case of non-observance.

Body parts to be protected may not be detected under coarse resolution.

- ▶ Use a resolution of 70 mm or finer for hazardous area protection.
- ▶ For hazardous area protection with a resolution of 70 mm: make sure that it is possible to detect a human leg.
- ▶ For hazardous area protection with a resolution of 70 mm: mount the safety laser scanner at a height of at least 300 mm (height of the scan plane).
- ▶ If it is not possible to mount the safety laser scanner at a height of at least 300 mm, use a finer resolution, see ["Calculating required resolution"](#), page 40.

Calculating required resolution

If the height of the protective field (scan plane) is predefined and is less than 300 mm, you can calculate the required resolution using the following formula:

$$d_r = H_D / 15 + 50 \text{ mm}$$

where:

- d_r = coarsest permissible resolution of the safety laser scanner in millimeters (mm)
- H_D = height of the protective field above the floor in millimeters (mm)
- ▶ The safety laser scanner's resolution can be set to the predefined value d . If the result d_r does not match any of these values, choose a finer resolution ($d \leq d_r$).

4.4.5.4 Distance from walls

Overview

The availability may be impaired if the protective field stretches as far as a wall or a different object. So, plan to have a space between the protective field and the object. A distance of the TZ value is recommended to ensure availability. (TZ = tolerance zone of the safety laser scanner, see "Data sheet", page 141.)

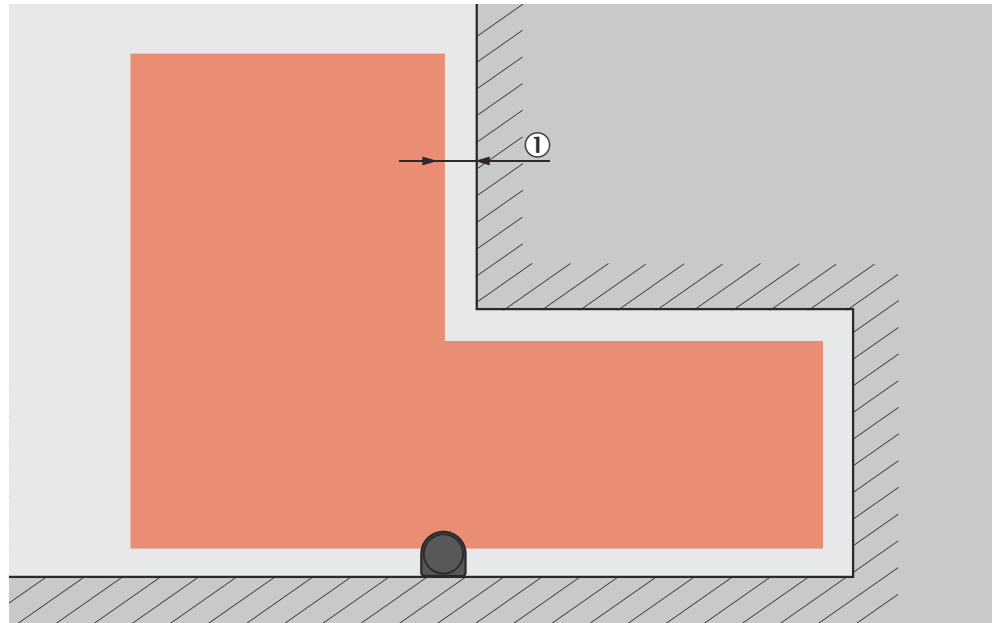


Figure 26: Distance of the protective field from the wall

- ① Recommended distance of the protective field from the wall.

Important information



DANGER

Hazard due to lack of effectiveness of the protective device

Persons and parts of the body to be protected may not be recognized in case of non-observance.

If the distance between the protective field and the wall is so large that a person can stand in it, this person might not be detected. If needed, take suitable measures to prevent this such as:

- ▶ Attaching deflector plates
- ▶ Attaching fence

4.4.6 Mobile hazardous area protection

The safety laser scanner is mounted with a horizontal scan plane in a mobile application, like on an automated guided vehicle. In mobile hazardous area protection, the safety laser scanner protects the hazardous area created by the vehicle's movement. The safety laser scanner detects a person's legs. The protective field is parallel to the direction of approach.

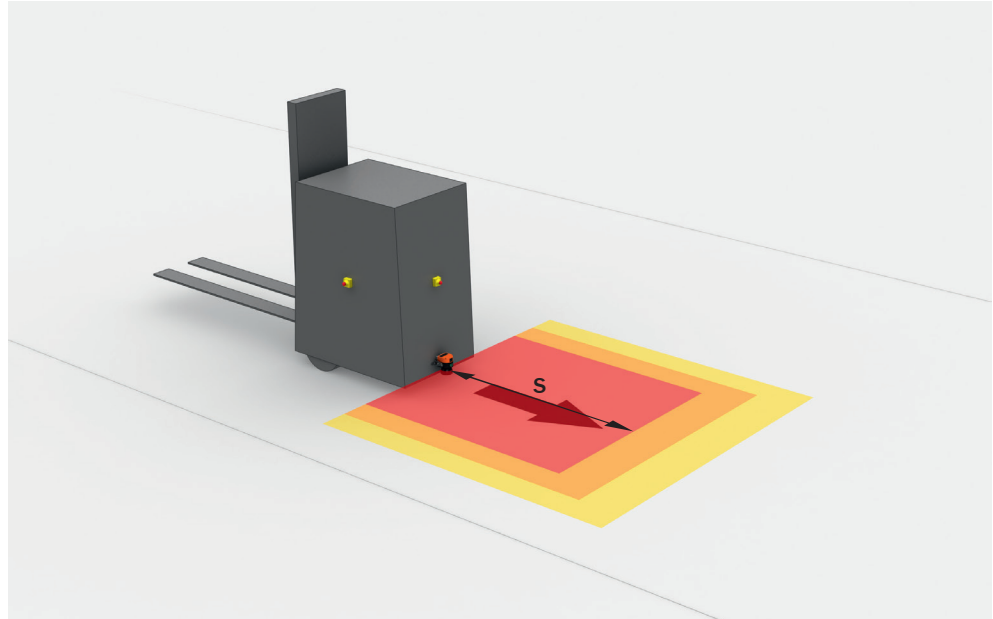


Figure 27: Mobile application in horizontal operation for hazardous area protection



DANGER

Hazard due to lack of effectiveness of the protective device

In the case of non-compliance, it is possible that the dangerous state of the machine may not be stopped or not stopped in a timely manner.

1. Calculate the minimum dimensions required for the protective field taking into account the supplements described in the following text along with the specific requirements imposed by your application.
2. Take this calculation and the specifications in these instructions into account when mounting the safety laser scanner.
3. Take this calculation and the specifications in these instructions into account when configuring the safety laser scanner.



NOTE

- In a mobile application, a resolution of 70 mm (leg detection) is sufficient for detecting people. By contrast with stationary hazardous point protection, this is also true for a low mounting height, as the safety laser scanner moves together with the vehicle.
- In the following calculation examples, only the vehicle speed is taken into account, not the speed of a walking person. This is based on the assumption that the person recognizes the danger and stands still.

4.4.6.1 Protective field length

The protective field must be designed so that it detects a person at a minimum distance from the hazardous point. This distance is required to ensure that the vehicle comes to a stop before it reaches a person or an object.

In mobile hazardous area protection, the minimum distance typically defines the protective field length required. When calculating the protective field length, the impact of turning must be considered separately.

If the calculated protective field length value is greater than the protective field range of the device, the vehicle speed must be reduced. The protective field length must then be recalculated based on the reduced speed.

If you define a number of monitoring cases with different protective fields, you must calculate the protective field size separately for each protective field used.

Supplement Z_R for reflection-based measurement errors

All devices: If there is a retroreflector in the vicinity of the protective device (distance of the retroreflector from protective field ≤ 6 m), you must take the supplement $Z_R = 350$ mm into account.

Supplement Z_F for lack of ground clearance

This supplement is necessary, because, generally, a person is detected above the foot and so the braking process cannot take account of the length of the foot in front of the point of detection. A person's foot could be injured if a vehicle has no ground clearance.

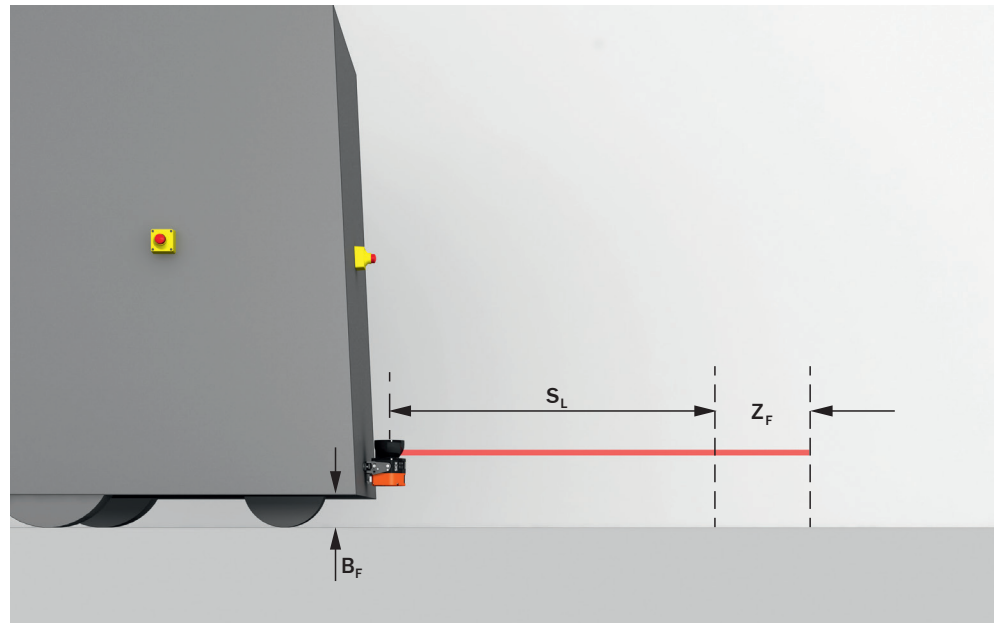


Figure 28: flat-rate supplement Z_F for lack of ground clearance

B_F ground clearance

S_L protective field length without a supplement for lack of ground clearance

Z_F supplement for lack of ground clearance

The lump supplement for ground clearance under 120 mm is 150 mm. This supplement may be reduced further in individual cases. Read the supplement actually required for your vehicle's ground clearance from the following graph.

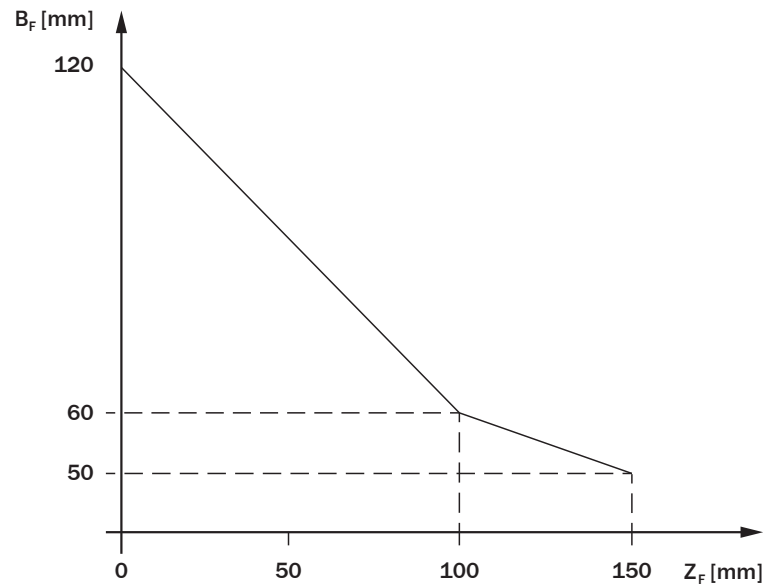


Figure 29: Minimum supplement for lack of ground clearance

B_F ground clearance in mm

Z_F supplement for lack of ground clearance in mm

Calculation example for the protective field length S_L

$$S_L = S_A + TZ + Z_R + Z_F + Z_B$$

where:

- S_L = protective field length in millimeters (mm)
- S_A = stopping distance in millimeters (mm)
- TZ = tolerance zone of the safety laser scanner, [see "Data sheet", page 141](#)
- Z_R = supplement for reflection-based measurement errors in millimeters (mm)
- Z_F = supplement for lack of ground clearance of the vehicle in millimeters (mm)
- Z_B = supplement for the decreasing braking force of the vehicle, from the vehicle documentation, in millimeters (mm)

Stopping distance S_A

The stopping distance comprises the vehicle's braking distance and the distance covered during the safety laser scanner's response time and the vehicle control's response time (including signal propagation time).



NOTE

A vehicle's braking distance does not increase linearly with increasing speed, but rather in a squared relationship.



NOTE

When calculating the stopping distance, the braking distance of the vehicle under unfavorable conditions must be taken into account if there is a possibility that the road might be slippery, e.g., due to water, snow or ice.

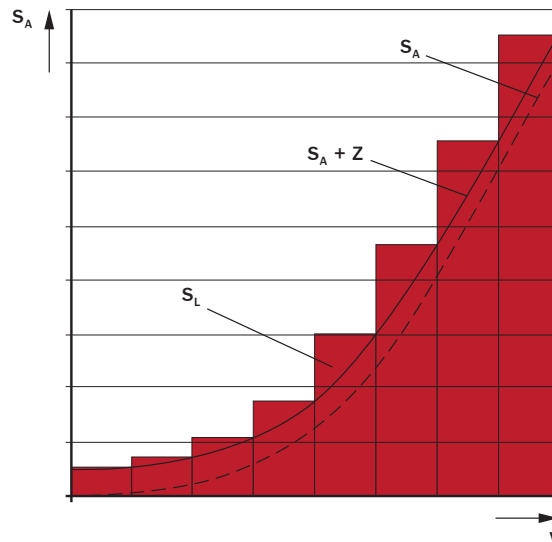


Figure 30: Stopping distance as a function of the vehicle's speed

v speed
 S_A stopping distance
 Z supplements
 S_L protective field length for the relevant range of speeds

$$S_A = S_{Br} + S_{AnF} + S_{AnS}$$

where:

- S_A = stopping distance in millimeters (mm)
- S_{Br} = braking distance, from the vehicle documentation, in millimeters (mm)
- S_{AnF} = distance covered during the vehicle control's response time (including signal propagation time), from the vehicle documentation, in millimeters (mm)
- S_{AnS} = distance covered during the safety laser scanner's response time in millimeters (mm)

The distance S_{AnS} depends on the safety laser scanner's response time and the vehicle's speed. The distance S_{AnS} is calculated using the following formula:

$$S_{AnS} = t_R \times V_{max}$$

where:

- t_R = safety laser scanner's response time in seconds (s) (see "Response times", page 145)
- V_{max} = maximum speed of the vehicle, from the vehicle documentation, in millimeters per second (mm/s) (If you define a number of monitoring cases with different protective fields: V_{max} = maximum speed of the vehicle in the current monitoring case)

4.4.6.2 Protective field width

The protective field must be wide enough to cover the width of the loaded vehicle with supplements for measurement error and the lack of ground clearance. When calculating the protective field width, the impact of turning must be considered separately.

Supplement Z_R for reflection-based measurement errors

All devices: If there is a retroreflector in the vicinity of the protective device (distance of the retroreflector from protective field ≤ 6 m), you must take the supplement $Z_R = 350$ mm into account.

Supplement Z_F for lack of ground clearance

This supplement is necessary, because, generally, a person is detected above the foot and so the braking process cannot take account of the length of the foot in front of the point of detection. A person's foot could be injured if a vehicle has no ground clearance, see ["Supplement \$Z_F\$ for lack of ground clearance"](#), page 43.

Calculation example for the protective field width S_B

$$S_B = F_B + 2 \times (TZ + Z_R + Z_F)$$

where:

- S_B = protective field width in millimeters (mm)
- F_B = vehicle width in millimeters (mm)
- TZ = tolerance zone of the safety laser scanner, see ["Data sheet"](#), page 141
- Z_R = supplement for reflection-based measurement errors in millimeters (mm)
- Z_F = supplement for lack of ground clearance of the vehicle in millimeters (mm)



NOTE

In many cases, the safety laser scanner is mounted in the center of the vehicle. If this is not the case, you must define the protective field asymmetrically. Make sure that the supplements are located on the right and left of the vehicle.

4.4.6.3 Height of the scan plane



DANGER

Hazard due to lack of effectiveness of the protective device

Persons and parts of the body to be protected may not be recognized in case of non-observance.

- Mount the safety laser scanner so that the maximum scan plane height is 200 mm.
-

People who are lying down are reliably detected if the scan plane is at a height of no more than 200 mm.

In many cases, a mounting height of 150 mm above the floor (height of the scan plane) is suitable.

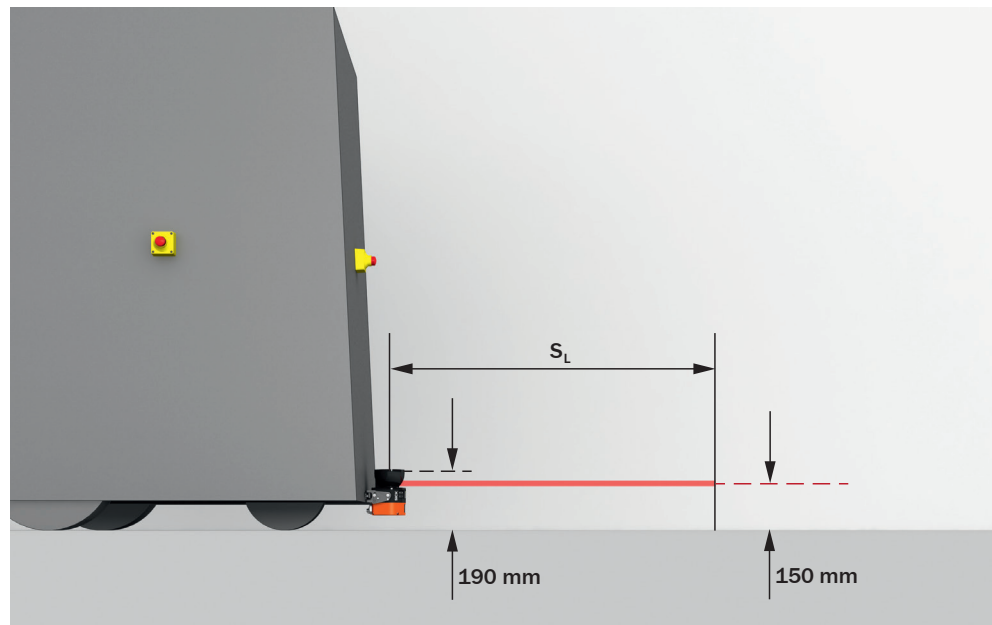


Figure 31: Recommended fitting height

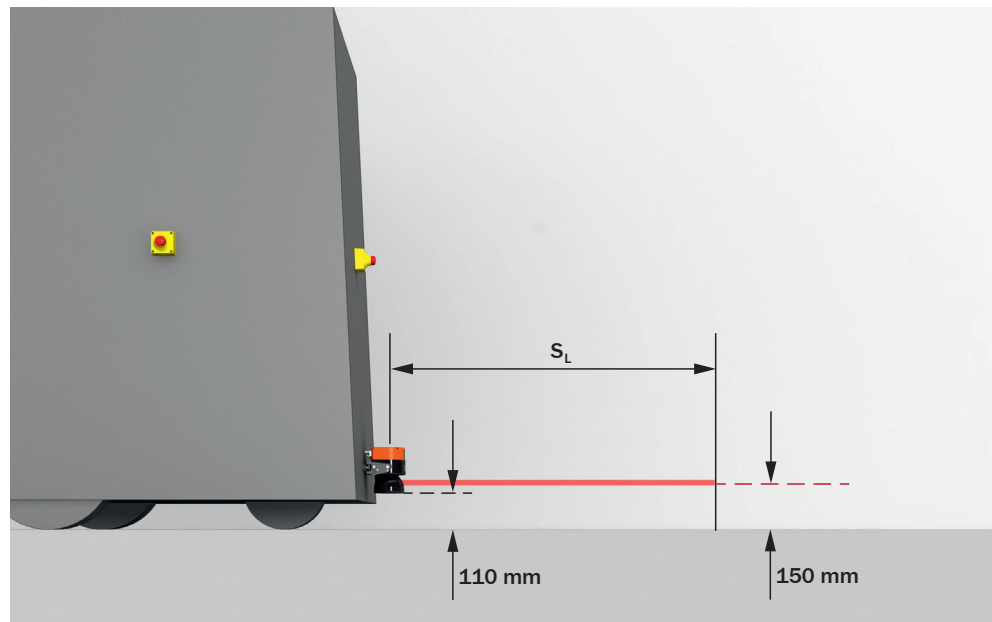


Figure 32: Recommended fitting height for inverted mounting ²⁾

Further topics

- ["Scan plane", page 148](#)

4.5 Integration in the electrical control system

This section contains important information about integration into the electrical control system. Information about the individual steps for the electrical installation of the device: see ["Electrical installation", page 65](#).

Information about pin assignment: see ["Pin assignment", page 66](#).

²⁾ Inverted mounting is recommended for outdoor applications.

Requirements for use

The protective device delivers safety-related shut-off signals via the network. Reliable evaluation and switch-off of the machine must be realized in the machine controller.



DANGER

Hazard due to lack of effectiveness of the protective device

In the case of non-compliance, it is possible that the dangerous state of the machine may not be stopped or not stopped in a timely manner.

- ▶ Make sure that the following control and electrical requirements are met so the safety laser scanner can fulfill its protective function.
-
- It must be possible to electrically influence the control of the machine.
 - Use the same earthing method for all devices that are electrically connected to the safety laser scanner.
 - All earthing points must be connected with the same ground potential.
 - Voltage must be supplied in accordance with SELV/PELV (IEC 60204-1) for all devices that are electrically connected to the safety laser scanner.
 - The control that is connected and all devices responsible for safety must comply with the required performance level and the required category (for example according to ISO 13849-1).

The safety laser scanner complies with the regulations for electromagnetic compatibility (EMC) for the industrial sector (Radio Safety Class A).

4.5.1 Electromagnetic compatibility

Overview

Safety components switch all safety outputs to the OFF state in the event of errors in order to rule out potentially dangerous situations. For example, faulty data transmission must lead to a shutdown for safety-related devices, even if it can be tolerated for non-safety-related devices.

To avoid electromagnetic interference as much as possible, a consistent earthing method is required for the entire system. In particular, the functional earth must be connected using suitable conductors. Cables susceptible to interference and sources of interference should be routed separately.

Electromagnetic interference depends on the environment in which the product is used. The product is tested and certified according to common standards. It is therefore reliable when used in industrial environments.

Shielded cables

For shielded cables, the shielding should be applied on both sides and over a large area. Deviations are only permitted in exceptional and justified cases. Especially when using motors or other inductive consumers, one-sided support of the shielding is not sufficient because it does not act against inductive interferers.

Functional earth

The functional earth must be connected. The connection must be made in accordance with the earthing method of the system.

Options for connecting the functional earth:

- Pin or thread on M12 plug connector
- M5 threaded holes on the rear or side of the housing

The functional earth must be connected with low inductance, i.e. with a sufficient wire cross-section and the shortest possible length of cable.

Complementary information

For more information, see the "Background knowledge on EMC" technical information (part number 8027030).

4.5.2 Voltage supply



DANGER

Hazard due to lack of effectiveness of the protective device

In the case of non-compliance, it is possible that the dangerous state of the machine may not be stopped or not stopped in a timely manner.

- Make sure that the following control and electrical requirements are met so the safety laser scanner can fulfill its protective function.
-
- The power supply unit must be able to jumper a brief power failure of 20 ms as specified in IEC 60204-1.
 - The safety laser scanner requires a supply voltage of 24 V. For details about tolerances and further connected loads, [see "Data sheet", page 141](#).
 - The power supply unit must provide safe isolation according to IEC 61140 (SELV/PELV as per IEC 60204-1). ³⁾
 - Make sure that the safety laser scanner is provided with an appropriate electrical fuse protection. Electrical data for calculating what fuse is required, [see "Data sheet", page 141](#).
 - Use the same earthing method for all devices that are electrically connected to the safety laser scanner.
 - Voltage must be supplied in accordance with SELV/PELV (IEC 60204-1) for all devices that are electrically connected to the safety laser scanner.

4.5.3 USB connection

The safety laser scanner has a USB connection for configuration and diagnostics. The USB connection complies with the USB 2.0 mini-B standard (female connector). The USB connection may only be used temporarily and only for configuration and diagnostics. More information: [see "Configuration", page 67](#) and [see "Troubleshooting", page 127](#).

4.5.4 PROFINET

PROFINET (Process Field Protocol) is an Ethernet-based network used in industrial automation.

With PROFIsafe, PROFINET is also suitable for safety-oriented data communication.

The connection can also be used for configuration, diagnostics, and data output.

Information about pin assignment: [see "Network for PROFINET PROFIsafe, data output, configuration, and diagnostics \(XF1, XF2\)", page 66](#)

4.5.5 Restart interlock

Depending on the regulations which apply at the place of installation, a restart interlock may be required.

The restart interlock prevents the machine from automatically starting up, for example after a protective device has responded while the machine is operating or after changing the machine's operating mode.

First, the operator must press a reset pushbutton to return the protective device to monitoring status. Then, in a second step, the operator can restart the machine.

³⁾ The voltage supply according to SELV has proven to be more reliable in demanding environments.

Depending on applicable national regulations, a restart interlock must be available if it is possible to stand behind the protective field.

Reset

The reset brings the protective device back to the monitoring state after it has sent a stop command. The reset also quits the start-up or restart interlock of a protective device, so that the machine can be restarted in a second step.

The reset must only be possible, when all safety functions and protective devices are functional.

The reset of the protective device must not introduce any movement or dangerous situations itself. The machine is only permitted to start after the reset once a separate start command has been sent.

- Manual resets are performed using a separate, manually operated device, such as a reset pushbutton.
- Automatic resets by the protective device are only permitted in special cases, if one of the following conditions is met:
 - It must not be possible for people to be in the hazardous area without triggering the protective device.
 - It must be ensured that no people are in the hazardous area during or after the reset.

Internal restart interlock

Each safety output of the safety laser scanner is equipped with a configurable internal restart interlock.

With safety outputs via the network, resetting is done via a network signal.

When the internal restart interlock is used, the following sequence is the result for the machine operator:

- 1 A safety output of the safety laser scanner switches to the OFF state, if there is an interruption in the protective field.
- 2 The safety output remains in the OFF state when there is no longer an object in the protective field.
- 3 The safety output only switches back to the ON state when the operator presses the reset pushbutton, which is outside the hazardous area. If there is an object in the protective field when the reset pushbutton is pressed, the safety output stays in the OFF state.
- 4 After the reset, the operator can restart the machine in a second step.



DANGER

Hazard due to unexpected starting of the machine

- ▶ Affix the control switch for resetting the restart interlock outside the hazardous area.
 - ▶ Make sure that the control switch cannot be activated by a person who is in the hazardous area.
 - ▶ Also make sure that the person activating the control switch has a complete view of the hazardous area.
-

4.6 Integration into the network

4.6.1 Network topology

The device is suitable for the following network topologies:

- Star
- Line
- Ring
- Tree

4.6.2 Network services and ports

Table 5: Network services and ports

Use	Protocol	Source	Source port	Target	Destination port
SNMP	UDP	SNMP client	Selected by the client	outdoorScan3	161
		outdoorScan3	161	SNMP client	Selected by the client
DHCP	UDP	outdoorScan3	68	DHCP server	67
		DHCP server	67	outdoorScan3	68
SNTP	UDP	outdoorScan3	123	NTP server	123
		NTP server	123	outdoorScan3	123
PROFINET (RPC communication)	UDP	RPC client	Selected by the client	outdoorScan3	34964
		outdoorScan3	34964	RPC client	Selected by the client
PROFINET (RPC communication)	UDP	RPC client	Selected by the client	outdoorScan3	49152
		outdoorScan3	49152	RPC client	Selected by the client
CoLa2 (protocol from SICK, configuration and diagnostics)	TCP	CoLa2 client, e.g. computer with Safety Designer	Selected by the client	outdoorScan3	2122
		outdoorScan3	2122	CoLa2 client, e.g. computer with Safety Designer	Selected by the client
CoLa2 (protocol from SICK, device search)	UDP	Computer with Safety Designer	30718 ... 30738	outdoorScan3 or Limited Broadcast or Directed Broadcast	30718
		outdoorScan3	30718	Computer with Safety Designer (if in the same subnet) or Broadcast (if in a different subnet)	30718 ... 30738
Data output in transmit mode continuous	UDP	outdoorScan3	Randomly selected	Target computer	Configurable

4.6.3 Integration of the safety laser scanner into the network

Important information



DANGER

Danger due to unintended use of SIL 2 data of the safety laser scanner in SIL 3 applications

- Ensure that the safety-related data of the safety laser scanner is only used in applications which do not exceed safety integrity level SIL 2 (IEC 61508) of the safety laser scanner.

Prerequisites

- Before integrating an already-configured safety laser scanner into a safety-related network: reset the safety laser scanner to its factory settings, [see "Factory settings", page 109](#).

Addressing

The safety laser scanner needs a unique IP address, the sub-network mask and, possibly, the IP address of the router to be able to exchange data with other devices in the network.

The safety laser scanner also requires a PROFINET name.

As long as no configuration has been transferred to the device, you can change the network settings via a network connection without logging in to the device.

Options for assigning the data to the safety laser scanner:

- In Safety Designer in the **Addressing** dialog
- With a configuration software for PROFINET networks
- With a PROFINET control unit

If you store the IP address remanently, it is retained even after switching the system off and on again. It can be changed, however, from the PROFINET control unit.

4.6.4 Configuring control

Overview

You will find information below on entries in the configuration software for the control unit.

Information about the configuration of the safety laser scanner [see "Configuration", page 67](#).

Important information



NOTE

At www.sick.com, you'll find the latest GSDML file for integrating the safety laser scanner in the control unit.

Procedure

1. Import the GSDML file to the control unit's configuration software.
2. Search the hardware catalog to find the desired device, e.g. use the search function and enter "SICK" or "outdoorScan3".
3. Add the device to the project and connect to the control unit.
4. To use a different process image, select a different module, if necessary.
5. Assign PROFINET names.
6. Set the PROFIsafe parameters in the submodule.

Table 6: PROFIsafe parameters

Parameter	Meaning	Setting
F_SIL	Safety integrity level (NoSIL, SIL1 or SIL2) of the safety laser scanner	Depends on application
F_CRC_Length	PROFIsafe data integrity assurance	Depends on the process image used: 3 bytes for PROFIsafe V2.4 4 bytes for PROFIsafe V2.6.1
F_Block_ID	Value 1 of the parameter indicates that the data record for the value of F_iPar_CRC was expanded to 4 bytes. You may not change this parameter.	1
F_Par_Version	PROFIsafe operating mode. You may not change this parameter.	1
F_Source_Add	F source address. Must be clear in connection with F_Dest_Add. The safety laser scanner checks whether an applicable value was entered.	1 ... 65534
F_Dest_Add	F target address. For PROFIsafe communication, the safety laser scanner needs a clear F_Dest_Add. The F_Dest_Add used must also be used in the configuration of the laser safety scanner.	1 ... 65534
F_WD_Time	Watchdog time (monitoring time) for the cyclical service. Watchdog time should be long enough to tolerate shorter delays in communication. It nevertheless (e.g. in case of an error) has an effect on the response time of the overall system and is therefore safety-relevant.	1 ms ... 65535 ms (depends on application)

Parameter	Meaning	Setting
F_iPar_CRC	Checksum of the safety configuration. Is used to check whether the safety-relevant settings were changed. Only has to be changed, if a process image with check of F_iPar_CRC is used.	Checksum of the configuration of the laser safety scanner. F_iPar_CRC is output at the following points: - In the Safety Designer, Dialog Overview, checksum of configuration (function and network) - In the Safety Designer, Dialog Report, checksum of configuration (function and network) (in the report, the character string can be highlighted and copied) - In the I&M data record 4 (IM_Signature)

7. If it has not yet been done: configure, test, and verify the safety laser scanner, see ["Configuration"](#), page 67, see ["Checking the configuration"](#), page 106, see ["Verifying configuration"](#), page 106.
8. Configure the control as usual. Then transmit the configuration into the control (download).

Complementary information

No PROFIsafe parameters are required to use the non-safety-related PROFINET process image.

4.6.5 Available data

The cyclical data transmission between the controller and the safety laser scanner occurs via the process image, see ["Process images"](#), page 54.

The safety laser scanner provides I&M data and alarms, e.g. for diagnostic purposes.

Details:

- ["I&M data"](#), page 159
- ["Alarms"](#), page 157

4.6.5.1 Process images

Overview

The cyclical data transmission between the controller and the safety laser scanner occurs via the process image.

The safety laser scanner allows users to select between different process images. You can choose a suitable process image depending on the controller used and the application.

The desired process image is selected in the setup of the control unit. The process images are displayed as modules.

During configuration of the safety laser scanner, you only have to enter whether you have selected a 6-byte long or 12-byte long process image, see ["Inputs and outputs"](#), page 96.

You can select the process map based on the following criteria:

- Version of PROFIsafe specification (2.4 or 2.6.1)
- Length of process image (12-byte or 6-byte)
- With or without test of F_iPar_CRC

Content of the process image**Data available (input of the device, output of the control):**

- Start safety function
- Stop Event history
- Activate sleep mode
- Monitoring case number
- Reset
- Restarting safety function and connections
- Restart device completely

Data available (output of the device, input of the control):

- Status of safety function
- Status sleep mode
- Contamination warning
- Contamination error
- Reference contour monitoring
- Manipulation
- Cut-off path (safety-oriented)
- Cut-off path (Not safety-related)
- Current monitoring case
- Reset required
- Application error
- Device error

Complementary information

In addition to the safety-related PROFIsafe process image, you can use a non-safety-related PROFINET process image at the output of the device (input of the control).

Information on using the non-safety-related PROFINET process image:

- The PROFINET process image is available with a length of 12 or 6 Bytes.
- The PROFINET process image must have the same length as the PROFIsafe process image.
- The content of the PROFINET process image is identical to the content of the PROFIsafe process image.
- The PROFINET process image must not be used for safety-related tasks.
- When using the PROFINET process image, the user must set a timeout appropriate for the specific application in the control.

Further topics

- ["Process images in detail", page 150](#)

4.7 Testing plan

The protective device must be tested by appropriately qualified safety personnel when commissioning, after modifications and at regular intervals.

The manufacturer and user must define the type and frequency of the thorough checks of the machine on the basis of the application conditions and the risk assessment. Determination of the thorough checks must be documented in a traceable manner.

The following tests must be planned:

- Before commissioning the machine and after making changes, you must check whether the safety functions are fulfilling their planned purpose and whether persons are being adequately protected.
- The regular tests of the safety laser scanner must fulfill certain minimum requirements.

A test object is required for some thorough checks. An optically opaque cylinder with a black surface can be used as a suitable test object. The diameter must match the configured resolution.

4.7.1 Planning the thorough check during commissioning and in certain situations

Minimum requirements

The protective device and its application must be thoroughly checked in the following situations:

- Before commissioning
- After changes to the configuration or the safety function
- After changes to the mounting, the alignment or the electrical connection
- After exceptional events, such as after manipulation has been detected, after modification of the machine, or after replacing components

The thorough check ensures the following:

- Compliance with all relevant regulations and effectiveness of the protective device for all of the machine's operating modes. This includes the following points:
 - compliance with standards
 - correct use of the protective device
 - suitable configuration and safety function
 - correct alignment
- The documentation matches the state of the machine, incl. the protective device
- The verified configuration report corresponds to the desired project planning ([see "Verifying configuration", page 106](#))

The thorough checks must be carried out by qualified safety personnel or specially qualified and authorized personnel and must be documented in a traceable manner.

In many cases, other data must be documented, [see "Reports", page 108](#).

Recommended thorough checks

In many cases, it makes sense to carry out the following thorough checks during commissioning and in certain situations:

- Thorough check of the relevant points on the checklist, [see "Checklist for initial commissioning and commissioning", page 172](#)
- ["Thorough visual check of the machine and the protective device", page 59](#)
- ["Thorough check of the principal function of the protective device", page 58](#)
- ["Thorough check of the area to be protected", page 58](#)
- Make sure that the operating personnel has been instructed in the protective device's function before starting work on the machine. The instruction is the responsibility of the machine operator and must be carried out by qualified personnel.

4.7.2 Planning the regular thorough check

Overview

The purpose of regular tests is to detect defects due to changes or external influences (e.g. damage or manipulation) and to ensure that the protective measure provides the necessary protection.

Important information



DANGER

Hazard due to lack of effectiveness of the protective device

Persons and parts of the body to be protected may not be recognized in case of non-observance.

- ▶ Carry out tests at least once a year.
- ▶ Assign qualified safety personnel to carry out the tests or persons specifically authorized for this purpose.
- ▶ Document tests in a traceable manner.

Minimum requirements

The following thorough checks must be carried out at least once a month:

- ["Checking the field of view", page 57](#)
- ["Checking for secure mounting", page 57](#)

The following thorough checks must be carried out at least once a year:

- ["Thorough check of the principal function of the protective device", page 58](#)
- Testing of the detection capability (resolution) in the context of the ["Thorough check of the area to be protected", page 58](#)

Recommendations for further thorough checks

In many cases, depending on the application conditions, the risk assessment of the machine determines that further thorough checks are required or that some thorough checks must take place more frequently.

In many cases, it makes sense to carry out the following thorough checks together with the regular thorough check:

- ["Thorough visual check of the machine and the protective device", page 59](#)
- Test of the relevant points on the checklist, see ["Checklist for initial commissioning and commissioning", page 172](#)

In many cases, it makes sense to carry out the following thorough checks daily:

- ["Thorough visual check of the machine and the protective device", page 59](#)
- ["Thorough check of the principal function of the protective device", page 58](#)

Complementary information

If a thorough check reveals an error, the machine should be shut down immediately. In this case, the mounting and electrical installation of the safety laser scanner must be checked by appropriately qualified safety personnel.

4.7.3 Notes on the tests

Checking the field of view

SICK recommends the following procedure:

- ▶ Check that the area in front of the optics cover is free of contamination, objects, and animals (e.g., insects). Check, in particular, the area inside the weather hood or other cladding, etc.

Checking for secure mounting

SICK recommends the following procedure:

- ▶ Manually check whether the device and its mechanical mount are secure and do not wobble.

Thorough check of the principal function of the protective device

SICK recommends the following procedure:

- ▶ Watch the display and the status LEDs above the safety laser scanner's display. If, when the machine is switched on, at least one LED above the safety laser scanner's display does not light up permanently, you must assume that there is an error.
 - ▶ Test the function of the protective device by triggering the protective function once and observing the safety output's reaction using the reaction of the machine, for example.
 - All applications: during the thorough check, observe whether the safety laser scanner displays the interruption of the protective field using the LEDs and/or the display.
 - Stationary application (hazardous area protection):
 - Interrupt the protective field using the supplied test object and observe whether the machine stops.
 - Mobile application (mobile hazardous area protection):
 - Place the supplied test object in the path of the vehicle and observe whether the vehicle stops.
- OR
- Activate a protective field, which is interrupted by at least one test object and check the expected reaction (for example by an automatic thorough check in the safety controller).

If the thorough check reveals an error, the machine should be shut down immediately. In this case, the mounting and electrical installation of the safety laser scanner must be checked by appropriately qualified safety personnel.

Thorough check of the area to be protected

The area to be protected and the detection capability are examined during this thorough check.

The thorough check covers the following points:

- Changes in the detection capability (thorough check of all configured fields)
- Modifications, tampering and damage to the protective device or the machine, which lead to changes in the area to be protected or the position of the protective field

SICK recommends the following procedure:

Hazardous area protection

- ▶ Position the supplied test object at a number of points at the edges of the area to be protected. The safety laser scanner must detect the test object at each position and indicate the detection. How it is indicated depends on the configuration. The number and position of sites where the thorough check is carried out must be chosen so that undetected access to the hazardous area is impossible.
- ▶ If a number of protective fields are used (in different monitoring cases for example), check the edges of all protective fields.

Mobile hazardous area protection

- ▶ Place the supplied test object in the path of the vehicle and check whether the vehicle comes to a stop in time.
- ▶ If a number of protective fields are used (in different monitoring cases for example), check whether the vehicle comes to a stop in time in all of the protective fields.

- ▶ If necessary, change the position of the test object so that a thorough check is carried out for each monitoring case to determine whether the protective field is active over the whole of the required width.
- ▶ Check the height of the scan plane. The scan plane must be at a height of at least 200 mm so that people lying down can be reliably detected. For this purpose, position the supplied test object at a number of points at the edges of the area largest protective field. The safety laser scanner must detect the test object at each position and indicate the detection. How it is indicated depends on the configuration.

If the thorough check reveals an error, the machine should be shut down immediately. In this case, the mounting and electrical installation of the safety laser scanner must be checked by appropriately qualified safety personnel.

Thorough visual check of the machine and the protective device

SICK recommends the following procedure:

- ▶ Check whether the machine or the protective device has been modified or manipulated so that the effectiveness of the protective device may be impaired.
- ▶ Check the following points in particular.
 - Has the machine been retrofitted?
 - Have machine parts been removed?
 - Have modifications been made to the machine's surroundings?
 - Are there any defective cables or open cable ends?
 - Have the protective device or its parts been dismantled?
 - Is the protective device damaged?
 - Is the protective device severely contaminated?
 - Is the optics cover contaminated, scratched or destructed?
 - Has the protective device's alignment been changed?
 - Are there any objects (e.g. cables, reflective surfaces) in the protective field?

If one of the points applies, the machine should be shut down immediately. In this case, the machine and the protective device must be checked by appropriately qualified safety personnel.

5 Mounting

5.1 Safety

For information about the requirements for properly mounting the safety laser scanner, see ["Assembly", page 28](#).

**DANGER**

Death or severe injury due to electrical voltage and/or an unexpected startup of the machine

- ▶ Make sure that the machine is (and remains) disconnected from the voltage supply during mounting and electrical installation.
- ▶ Make sure that the dangerous state of the machine is and remains switched off.

**DANGER**

Hazard due to lack of effectiveness of the protective device

If unsuitable brackets are used or if subjected to excessive vibrations, the device may become detached or damaged.

Persons or parts of the body to be protected may not be recognized or not recognized in time in case of non-observance.

- ▶ Only use SICK-approved brackets for mounting.
- ▶ Take appropriate measures for vibration damping if vibration and shock specifications exceed the values and test conditions specified in the data sheet, see ["Data sheet", page 141](#).

**DANGER**

Improper work on the product

A modified product may not offer the expected protection if it is integrated incorrectly.

- ▶ Apart from the procedures described in this document, do not repair, open, manipulate or otherwise modify the product.

**NOTICE**

The optics cover of the safety laser scanner is an optical component.

- ▶ Do not contaminate or scratch the optics cover during unpacking and mounting.
- ▶ Prevent fingerprints on the optics cover.

**NOTE**

Mount the device in the following order.

5.2 Unpacking

Procedure

- ▶ Check the components for completeness and the integrity of all parts.
- ▶ In the event of complaints, contact the responsible SICK subsidiary.

Further topics

- ["Ordering information", page 162](#)

5.3 Mounting procedure

The following options for mounting the safety laser scanner are available:

- mounting directly without a mounting kit
- mounting using mounting kit 1
- mounting using mounting kits 1 and 2
- Mounting with mounting kit 3 (suitable for weather hood)

The mounting kits 1 and 2 are built upon one another. This means that for mounting using mounting kit 2, you also need mounting kit 1.

Each mounting kit consists of a bracket, and the screws needed to mount the safety laser scanner on the bracket.



DANGER

Hazard due to lack of effectiveness of the protective device

Persons or parts of the body to be protected may not be recognized or not recognized in time in case of non-observance.

- ▶ You must take account of the minimum distances calculated for your machine, [see "Assembly", page 28](#).
- ▶ Mount the safety laser scanner so that crawling beneath, climbing over and standing behind the protective fields is impossible.

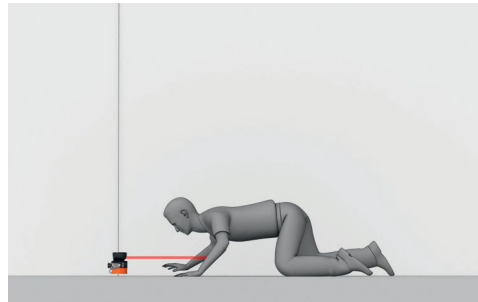


Figure 33: Prevent crawling beneath



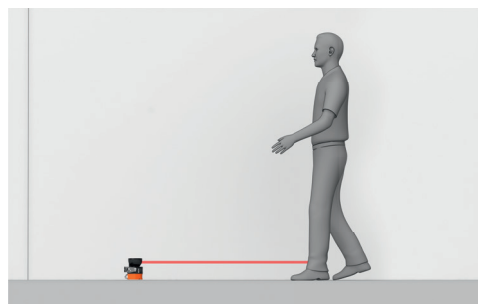


Figure 34: Prevent stepping over

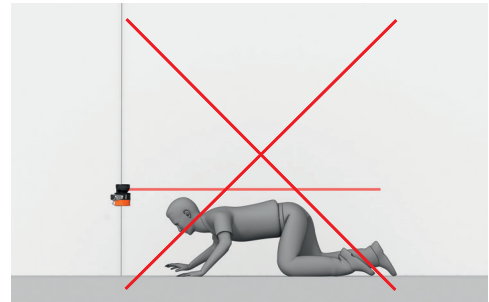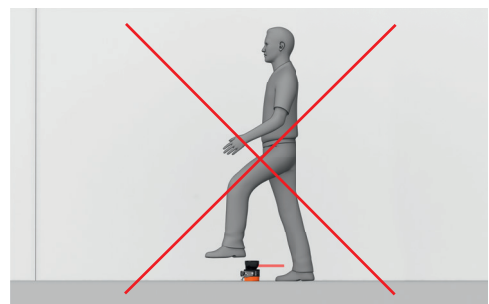

NOTE

- ▶ Read this section completely before mounting the safety laser scanner.

Mounting instructions

- ▶ The optics cover of the safety laser scanner is an optical component. Make sure that the optics cover does not become dirty or scratched during unpacking and mounting. Prevent fingerprints on the optics cover.
- ▶ Mount the safety laser scanner so that it is protected from moisture, dirt and damage.
- ▶ Make sure that the safety laser scanner's field of view is not restricted.
- ▶ Make sure that there are not mirrors or other very reflective objects in the protective field.
- ▶ Make sure that no small objects (e.g. cables) are in the protective field, even if the safety outputs do not switch to the OFF state as a result.
- ▶ When mounting the safety laser scanner, ensure that the optics cover is easily accessible for cleaning.
- ▶ Mount the safety laser scanner so that the status indicators are clearly visible.
- ▶ Mount the safety laser scanner so that you can plug in and pull out the system plug.
- ▶ Take appropriate measures for vibration damping if vibration and shock specifications exceed the values and test conditions specified in the data sheet, [see "Data sheet", page 141](#).
- ▶ For machines that vibrate heavily, use thread-locking compounds to prevent the possibility of fixing screws coming loose unintentionally.
- ▶ Make sure that the safety laser scanner is aligned correctly, even during mounting: if the safety laser scanner is intended to monitor an area of 270° on a corner, the safety laser scanner may be mounted rotated by a maximum of 2.5° about the vertical axis.
- ▶ Location of the scan plane: [see "Dimensional drawings", page 160](#).
- ▶ Take account of the tightening torque for the fixing screws:
 - M5 at rear/at side = 4.5 Nm ... 5.0 Nm
 - M4 at rear/at side = 2.2 Nm ... 2.5 NmHigher tightening torques may damage the thread. Lower tightening torques do not offer sufficient protection against slipping of the safety laser scanner due to vibrations, for example.

5.3.1 Changing position of the system plug

Overview

The system plug is installed at the bottom or rear when the safety laser scanner is delivered. You can change the position of the system plug if needed.

Prerequisites

Tool required:

- TX20 Torx wrench

Procedure

1. Loosen the screws of the system plug.
2. Carefully remove the system plug from the safety laser scanner.

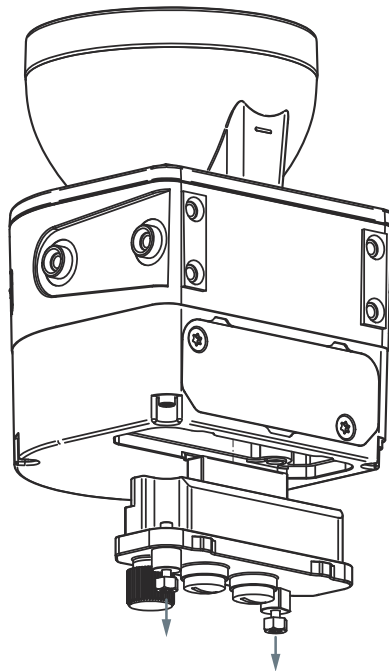


Figure 35: Remove the system plug from below.

3. Loosen the cover plate screws.
4. Remove the cover plate from the safety laser scanner.

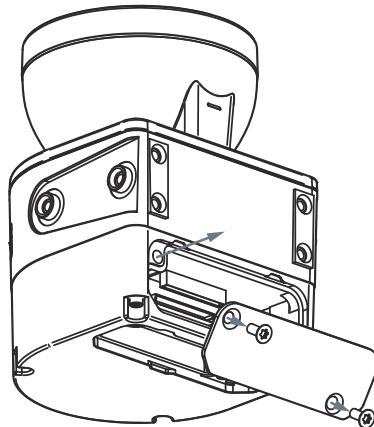


Figure 36: Remove the cover plate from the rear.

5. Carefully remove the desiccant bag from the housing.
6. Carefully slide the new system plug into the safety laser scanner at the desired position (bottom or rear).
7. Screw in the system plug using the captive screws. Tightening torque: 2.25 Nm ... 2.75 Nm.
8. Carefully place the desiccant bag in the housing and apply the cover plate. Make sure the desiccant bag is not pinched.
9. If the desiccant bag is damaged, contact your local SICK subsidiary.

10. Install the cover plate on the safety laser scanner. Tightening torque: 2.25 Nm ... 2.75 Nm.

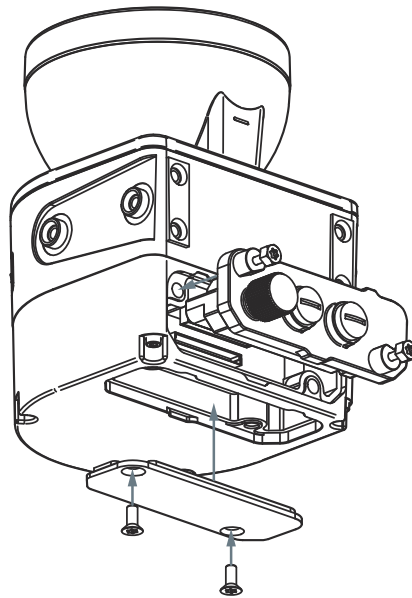


Figure 37: Installing the rear system plug

5.3.2 Direct mounting

The safety laser scanner has 4 M5 threaded holes on the back. If you are able to drill through the mounting surface from the rear, you can mount the safety laser scanner directly using these threaded holes.

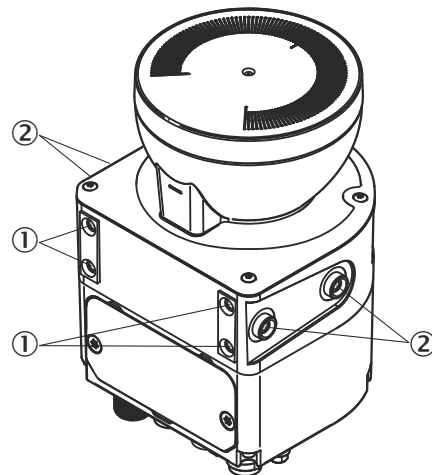


Figure 38: Mounting the safety laser scanner directly

- ① Rear M5 threaded hole
- ② Side M5 threaded hole

- ▶ Use either the rear or the side M5 threaded holes for direct mounting, [see figure 38, page 64](#).
- ▶ Use all four rear or all 4 side M5 threaded holes for direct mounting, so that the values given in the data sheet for vibration and shock resistance are achieved.
- ▶ Maximum depth of thread engagement: 7.5 mm ([see "Dimensional drawings", page 160](#)).
- ▶ Tightening torque: 4.5 Nm to 5.0 Nm.

6 Electrical installation

6.1 Safety

For information on the requirements that must be met for safe integration of the safety laser scanner into the controller and electronics of the machine: see ["Integration in the electrical control system", page 47](#).

Mounting should be completed before electrical installation.



DANGER

Death or severe injury due to electrical voltage and/or an unexpected startup of the machine

- ▶ Make sure that the machine is (and remains) disconnected from the voltage supply during mounting and electrical installation.
- ▶ Make sure that the dangerous state of the machine is and remains switched off.



DANGER

Hazard due to lack of effectiveness of the protective device

In the case of non-compliance, it is possible that the dangerous state of the machine may not be stopped or not stopped in a timely manner.

- ▶ Make sure that the following control and electrical requirements are met so the safety laser scanner can fulfill its protective function.
- ▶ Use suitable power supply.
- ▶ Use the same earthing method for all devices that are electrically connected to the safety laser scanner.
- ▶ Check that all earthing points are connected with the same ground potential.
- ▶ Voltage must be supplied in accordance with SELV/PELV (IEC 60204-1) for all devices that are electrically connected to the safety laser scanner.
- ▶ Connect functional earth correctly.



NOTICE

Enclosure rating IP65 only applies if the safety laser scanner is closed and the system plug is mounted.

- ▶ Mount the system plug and the cover plate.
- ▶ Close each M12 plug connector on the safety laser scanner using a male cable connector or a protective cap.
 - Tightening torque for plug connector: 0.4 Nm ... 0.6 Nm.
 - Tightening torque for protective caps: 0.6 Nm ... 0.7 Nm.
- ▶ When mounting the connecting cables, ensure the seals are intact and seated correctly.

6.2 Connection overview




NOTE

The USB connection may only be used temporarily and only for configuration and diagnostics.

6.2.1 outdoorScan3 – PROFINET

Table 7: System plug and connections

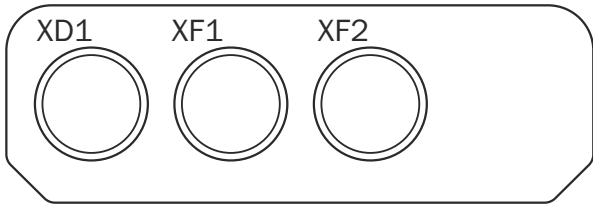Safety laser scanner	Suitable system plug	Plug connector
outdoorScan3 – PROFINET	 MICSX-RANNZZZ1 (part number: 2102812)	- XD1: Voltage supply, page 66 - XF1, XF2: 2 × network for PROFINET PROFI-safe, data output, configuration, and diagnostics, page 66

6.3 Pin assignment

You will find the pin assignment for the individual plug connectors in the following.

6.3.1 Voltage supply (XD1)

Voltage supply is supplied via a 4-pin, A-coding M12 male connector on the device side.

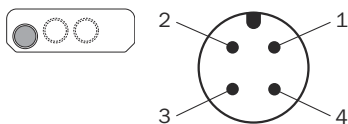


Figure 39: Pin assignment of the voltage supply (male connector, M12, 4-pin, A-coded)

Table 8: Pin assignment of the voltage supply

Pin	Designation	Function
1	24 V DC	24 V DC supply voltage
2	nc	Not connected
3	0 V DC	Supply voltage 0 V DC
4	FE	Functional earth/shield

6.3.2 Network for PROFINET PROFI-safe, data output, configuration, and diagnostics (XF1, XF2)

On the device side, Ethernet and PROFINET are connected via 4-pin, D-coded M12 female connectors. There is a network switch in the safety laser scanner which connects the two female connectors. The two female connectors therefore have the same function. The pin assignment corresponds to EN 61918, Appendix H.

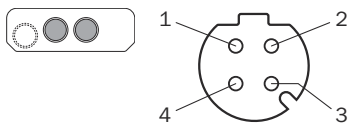


Figure 40: Network pin assignment (M12 female connector, 4-pin, D-coding)

Table 9: Network pin assignment

Pin	Designation	Function
1	TX+	Send data +
2	RX+	Receive data +
3	TX–	Send data –
4	RX–	Receive data –
Thread	SH	Shielding

7 Configuration

7.1 Delivery state

The device is not configured in the delivery state.

7.2 Safety Designer configuration software

The safety laser scanner is configured using the Safety Designer.

For information on the Safety Designer, see the operating instructions for the Safety Designer item no. 8018178.

7.2.1 Installing Safety Designer

Prerequisites

- Your Windows user account has rights for installing software.

Procedure

1. Call up the download web page and enter **Safety Designer** in the search field on www.sick.com.
2. Take note of the system requirements on the download page.
3. Download the installation file from the download page. Extract it and run it.
4. Follow the notes from the setup assistant.

7.2.2 Projects

Using Safety Designer, you can configure one or more devices in a project. You can save the configuration data in a project file on the computer.

Creating a project

- Click on **Create new project**.
- ✓ This creates and opens an empty project.

Configuring a device online (device connected to computer)

The following interfaces are suitable for configuration:

- USB ⁴⁾
- Ethernet

If a device is connected to the computer, Safety Designer can establish a connection to the device. ⁵⁾

You will then configure the device online. In this case, you can transfer the configuration to the devices directly and use diagnostic functions.

- Click on **Search**.
- ✓ Safety Designer searches for connected devices, with which it can establish a connection.

Configuring a device offline (device not connected to computer)

If the device is not connected to the computer, select it from the device catalog.

You will then configure the device offline. Diagnostics functions are not available.

⁴⁾ The USB connection may only be used temporarily and only for configuration and diagnostics.

⁵⁾ If the device is only connected via the network and has no network address, Safety Designer can find the device but cannot establish a connection to it. You first need to assign the device a valid network address.

You can connect the computer to the device later, assign a device to the device tile, and transfer the configuration to the device.

7.2.2.1 Saving verified configuration

When you save a project, information is saved for each device as to whether the configuration is verified. When you open a project file, each device tile and the **Overview** dialog box of the device window show whether the configuration is verified.

You can transfer a verified configuration to the same or an identical device again.

7.2.3 User interface

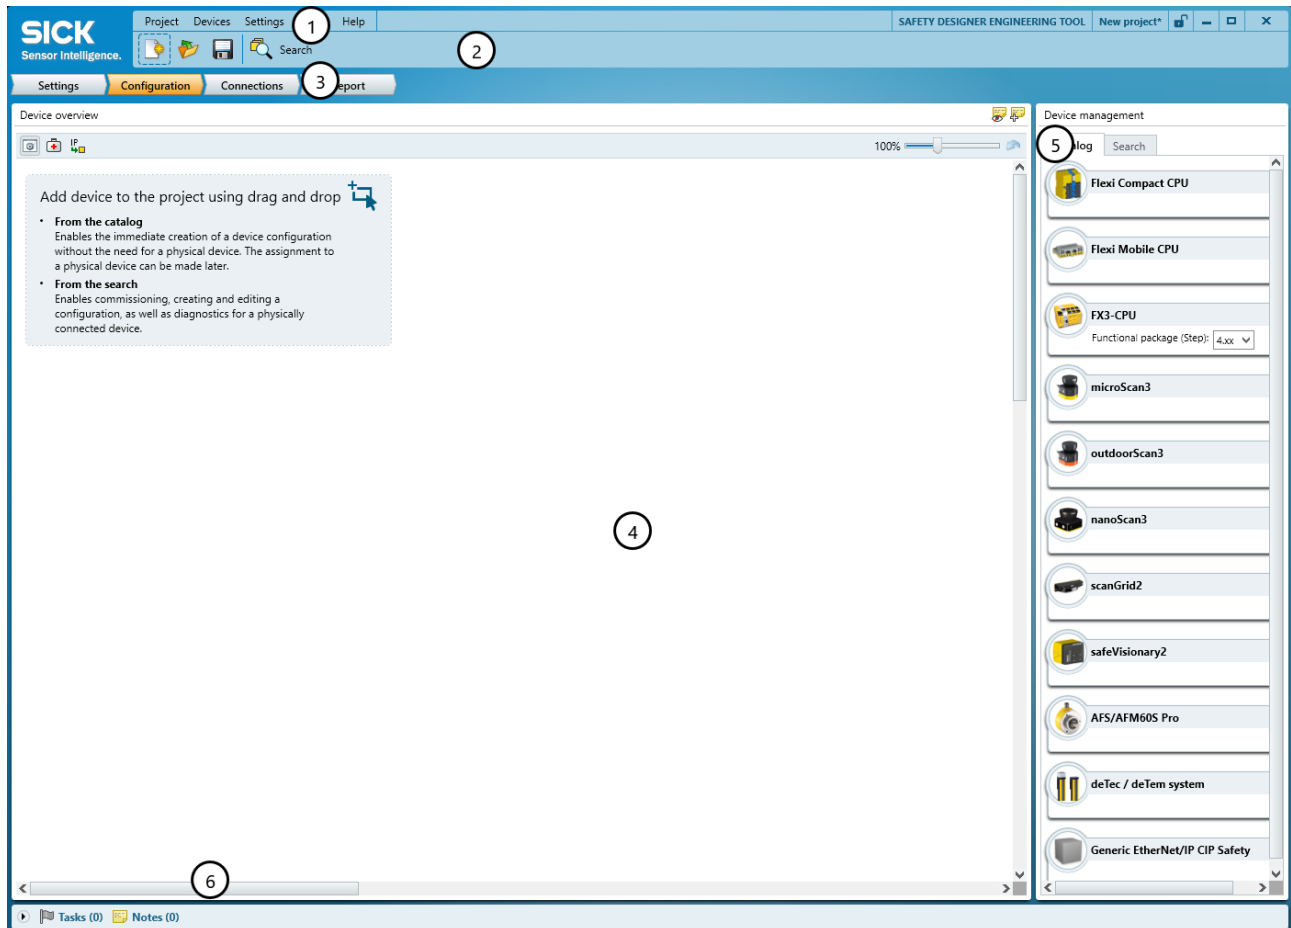


Figure 41: Software controls

- ① Menu bar
- ② Toolbar
- ③ Main navigation
- ④ Working range
- ⑤ Device catalog
- ⑥ Task list and notes

7.2.4 User groups

Overview

The devices contain a hierarchy of user groups that regulate access to the devices.

For certain actions (e.g., transferring a configuration to the device), you are requested to log onto the device with the respective user group.

Important information

**NOTICE**

When you log into a device, the configuration software stores the password so that you do not need to re-enter it for other configuration steps.

If you do not change any other settings in the login dialog, the password is deleted as soon as you exit the configuration software, or log out in the main window or Device window.

If you enable the **Temporarily store password for login on additional devices.** function, the password will be retained even if you log out in the device window only.

If you leave the computer unattended, you must log off to prevent unwanted access to the device.

Table 10: User groups

User group	Password	Authorization
 Operator	No password required. Anyone can log on as a machine operator.	• May read configuration from the device.
 Maintenance personnel	Deactivated ex-works, i.e. it is not initially possible to log on as a maintenance technician. The user group can be activated by the user group administrator and provided with a password.	• May read configuration from the device. • May transmit verified configuration to the device. • Change own password allowed.
 Authorized client	Deactivated ex-works, i.e. it is not initially possible to log on as an authorized customer. The user group can be activated by the user group administrator and provided with a password.	• May read configuration from the device. • May transmit verified and unverified configuration to the device. • May verify configuration. • Resetting the safety function and communication settings to factory defaults is allowed. • Change own password allowed. • Changing the password of the Maintenance personnel user group is allowed.
 Administrator	The password SICKSAFE is created at the factory. ► Change this password to protect the device against unauthorized access.	• May read configuration from the device. • May transmit verified and unverified configuration to the device. • May verify configuration. • Resetting whole device to factory settings allowed. • Activating and deactivating device functions is allowed. • Activating and deactivating the Maintenance personnel and Authorized client user groups is allowed. • Change own password allowed. • Changing the passwords of the Maintenance personnel and Authorized client user groups is allowed.

Complementary information

The maintenance engineer is permitted to reset the safety function to factory settings.

The configuration of the device is saved in the system plug. Therefore, the passwords are retained when the device is replaced if the system plug is still used.

7.2.5 Settings

Information on the functionality and basic operation of the software and on the settings in the main window can be found in the operating instructions of the Safety Designer (part number 8018178).

7.2.6 Configuration

You collect the devices of a project in the **Configuration** area. The available devices can be found in the Device Catalog. The devices are displayed as Device tiles in the working range.

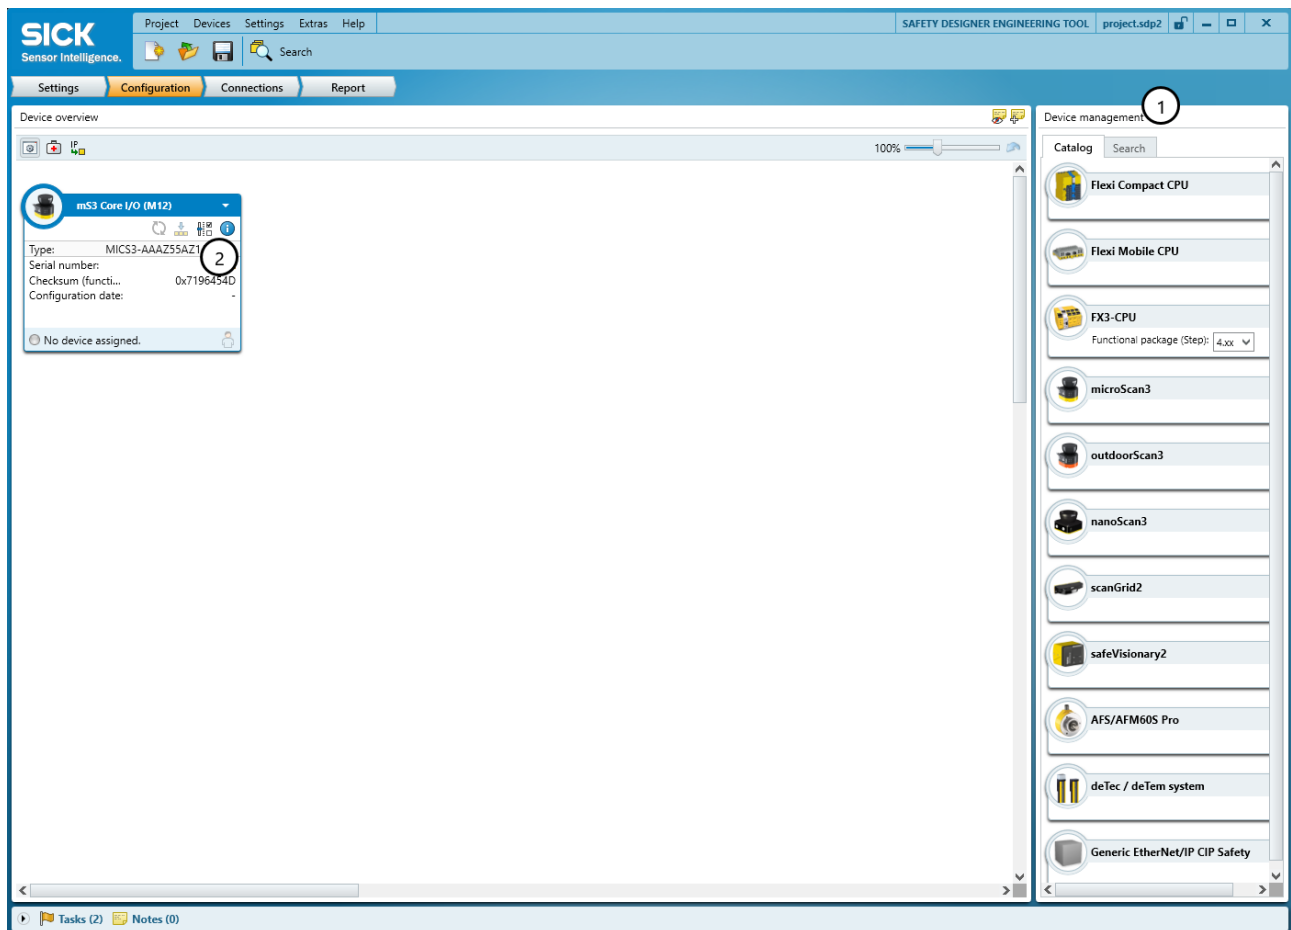


Figure 42: Configuration

- ① Device management
- ② Device tile

7.2.6.1 Device Catalog

Overview

Device Management contains all available devices:

- The **Catalog** tab contains the devices installed in Safety Designer.
- The **Search** tab contains the devices found during a search.

Procedure

The devices from the device catalog can be added to a project in the workspace:

- ▶ Drag a device into the working area using drag and drop.
- Or:
- ▶ Double-click on a device in the device catalog.
- ✓ The device is shown as a tile in the working area.

Complementary information

When a device is configured offline for the first time, the device selection wizard opens for devices with multiple variants (device types). This is where you select the exact type of device to be configured.

7.2.6.2 Open the device window – configure devices

Overview

To configure the device, perform diagnostics or create reports, open a device window.

Procedure

You have the following options:

- ▶ Double-click on the Device tile.
- Or:
- ▶ Open the tile menu and choose **Configure**.
- ✓ The device window opens.

Complementary information

When a device is configured offline for the first time, the device selection wizard opens for devices with multiple variants (device types). This is where you select the exact type of device to be configured.

7.2.7 Networking

Information on the functionality and basic operation of the software and on the settings in the main window can be found in the operating instructions of the Safety Designer (part number 8018178).

7.3 Overview

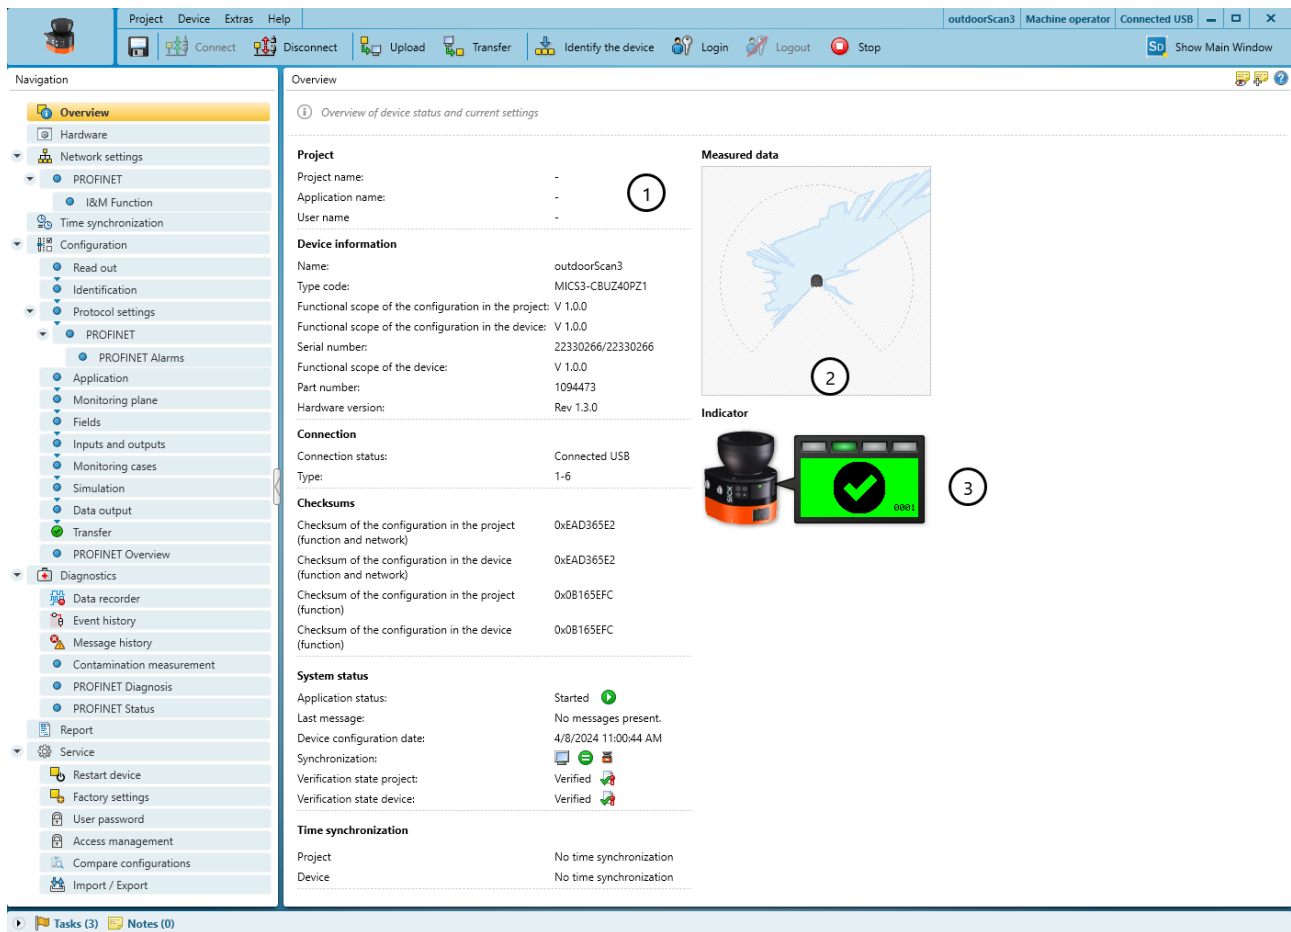


Figure 43: Overview

- ① Device information
- ② Current measurement data
- ③ Display with device status

The **Overview** dialog box contains information about the safety laser scanner.

Project

- Project name: the same name should be chosen for all devices in the project
- Application name: this name can be the same for a number of devices in the project. It highlights that these devices realize an application together, by responding to one another for example.

Device information

- Name, identifies the specific device ⁶⁾
- Type code of the safety laser scanner
- Functional scope of the configuration in the project
- Functional scope of the configuration in the device
- Serial number of the safety laser scanner
- Functionality of the device
- Part number
- Revision

⁶⁾ The name used here is independent of the PROFINET name.

Connection

- Connection status ⁷⁾
- Type of connection

Checksums

A checksum is used as a unique identification for a configuration. Using the checksum, it is possible to work out whether a setup was changed or whether two devices have the same configuration.

The checksum of the configuration in the project may not match the checksum in the device, for example if a field geometry has been modified, but not yet transmitted to the device.

If a process image with check of F_iPar_CRC is used, the F_iPar_CRC value must be provided in the software configuration.

F_iPar_CRC is output at the following points:

- In Safety Designer, **Overview**, **Checksum of the configuration (function and network)** dialog box
- In Safety Designer, **Report** dialog box, **Checksum of the configuration (function and network)** (the character string can be highlighted and copied into the report)
- In the I&M data record 4 (IM_Signature)

System status

- Application status
- Current notification of the safety laser scanner
- Configuration date for the configuration in the device
- Synchronization: shows whether the configuration in Safety Designer and the configuration in the device are identical
- Verification status of the configuration in the project
- Verification status of the configuration in the device

Time synchronization

- Configured value in the project
- Configured values in the device

Measurement data

Shows the measurement data when a device is connected.

Display

Shows the status of the display and LEDs when a device is connected.

Establishing connection

1. Check whether the safety laser scanner is connected correctly.
 2. Click on **Connect** in the toolbar.
- ✓ Safety Designer establishes the connection to the safety laser scanner.

7.3.1 Functional scope

Older versions of the Safety Designer potentially do not support the full functionality of the latest devices. Vice versa, older devices might not support the full functionality of the latest Safety Designer.

To identify the different levels of the functionality, we use a 3-digit version number. The version number is marked with the letter V on the device.

⁷⁾ If the device is only connected via the network and has no network address, Safety Designer can find the device but cannot establish a connection to it. You first need to assign the device a valid network address.

A configuration in the Safety Designer or in a system connector must match the device for which it is to be used. If the configuration fits, it can be transferred from the Safety Designer to the device and the system connector with the configuration can be used for the device.

The configuration matches the device if the following points apply:

- The 1st digit of the two version numbers must be identical.
- The 2nd digit of the version numbers on the device must be at least as large as that of the configuration in Safety Designer or in the system plug.
- The 3rd digit is not relevant for compatibility.

The functional scope of the device can be read at the following locations:

- Label on the device
- Display, entry in **Device info** menu at **Hardware**
- Safety Designer, **Overview** dialog (only with connected device)
- Safety Designer, report



Figure 44: Functional scope

① Functional scope of the device

If you configure a device offline, you must define the functional scope of the configuration when adding the device in the device selection wizard in the Safety Designer.

If you add a device to the project via the device search, the functionality of the device will be carried over. If the device has already been configured, the functional scope of the configuration is adopted in the device.

Further topics

- ["Version numbers and functional scope", page 140](#)

7.4 Hardware

Overview

On the **Hardware** page, you can view details of the safety laser scanner and the system plug.

If several functionally identical products with different part numbers exist, you can select your product. The selected product is shown in the report under **Bill of materials**. The selection does not affect anything else.

7.5 Network settings

7.5.1 PROFINET

Overview

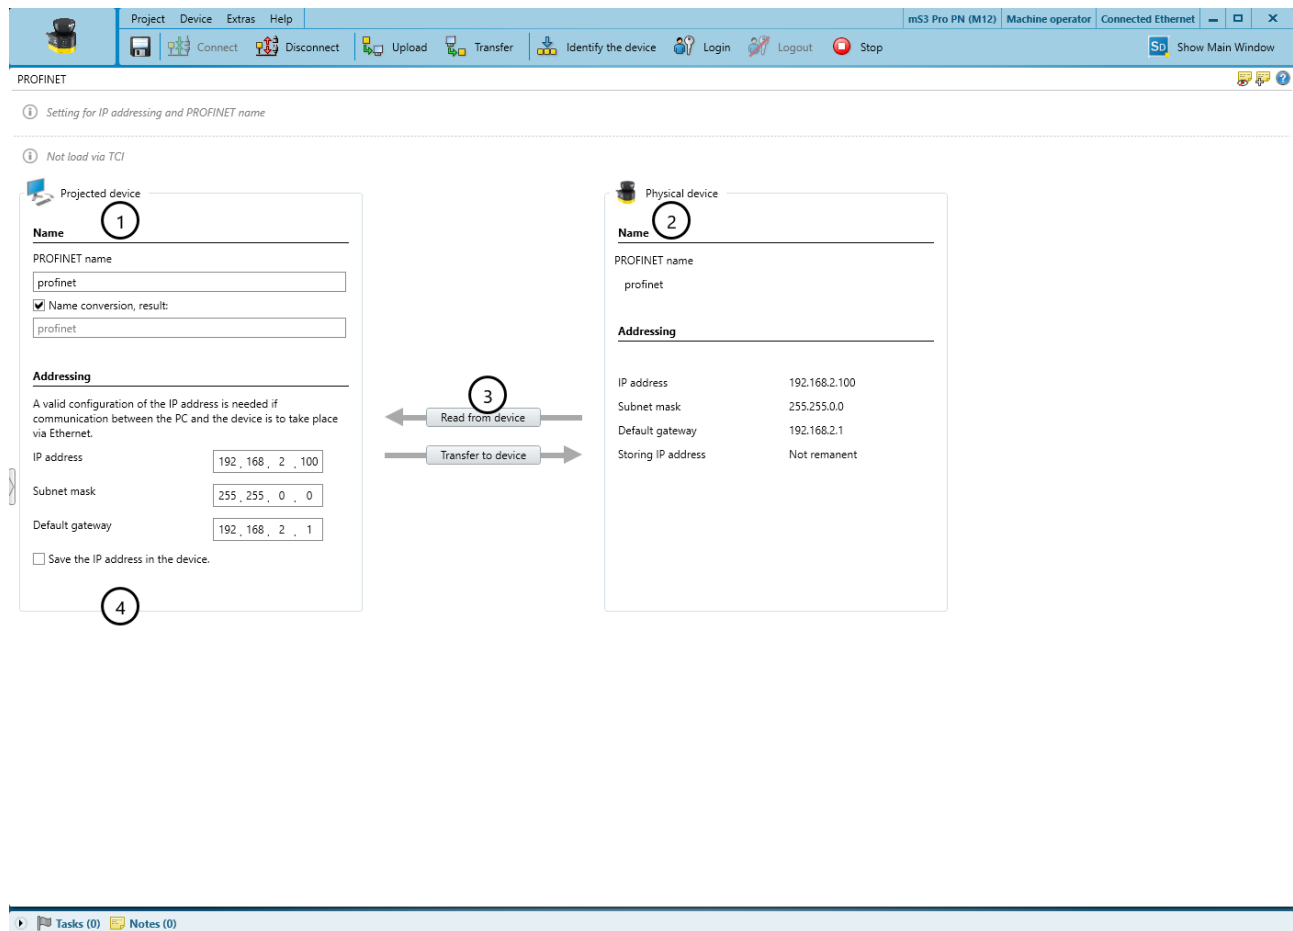


Figure 45: Network settings: PROFNET

- ① Values in the project
- ② Values in the device
- ③ Buttons to read or transmit values
- ④ Save the IP address set retentively in the device

Name

Allows you to assign a PROFINET name that is unique in the network. The name may not be in use already for another device in the PROFINET. It can only contain lowercase letters, numerals, and periods and hyphens. The Safety Designer stores the PROFINET name retentively in the device.

- Enter a PROFINET name unique to the network.

If you enter a PROFINET name that does not comply with the PROFINET naming rules, Safety Designer can convert this name into a character string that is stored in the device as a valid PROFINET name. The same character string must be used in the PROFINET controller. Some other configuration software for PROFINET controllers besides Safety Designer also convert the PROFINET name and can also calculate and display the originally entered name from the character string.

Addressing

If communication between the device and a controller or a computer will be established via TCP/IP, please enter the IP settings here.

- ▶ Enter **IP address**, **Subnet** and, if applicable, **Router**.
- ▶ Activate the **Save the IP address in the device**. option.
- ✓ The IP address will be stored in the device so that it is retained even after switching the system off and on again. It can be changed, however, from the PROFINET controller.

Reading and transmitting values

If the values in the project and the values in the device differ, you can read the values out from the device and adopt them in the project. Alternatively, you can transmit values from the project to the device.

- ▶ Click on **Read from device**.
- ✓ The values are read from the device and adopted in the project.
- ▶ Click on **Transfer to device**.
- ✓ The values from the project are transmitted to the device.

7.5.1.1 Identification and maintenance

Overview

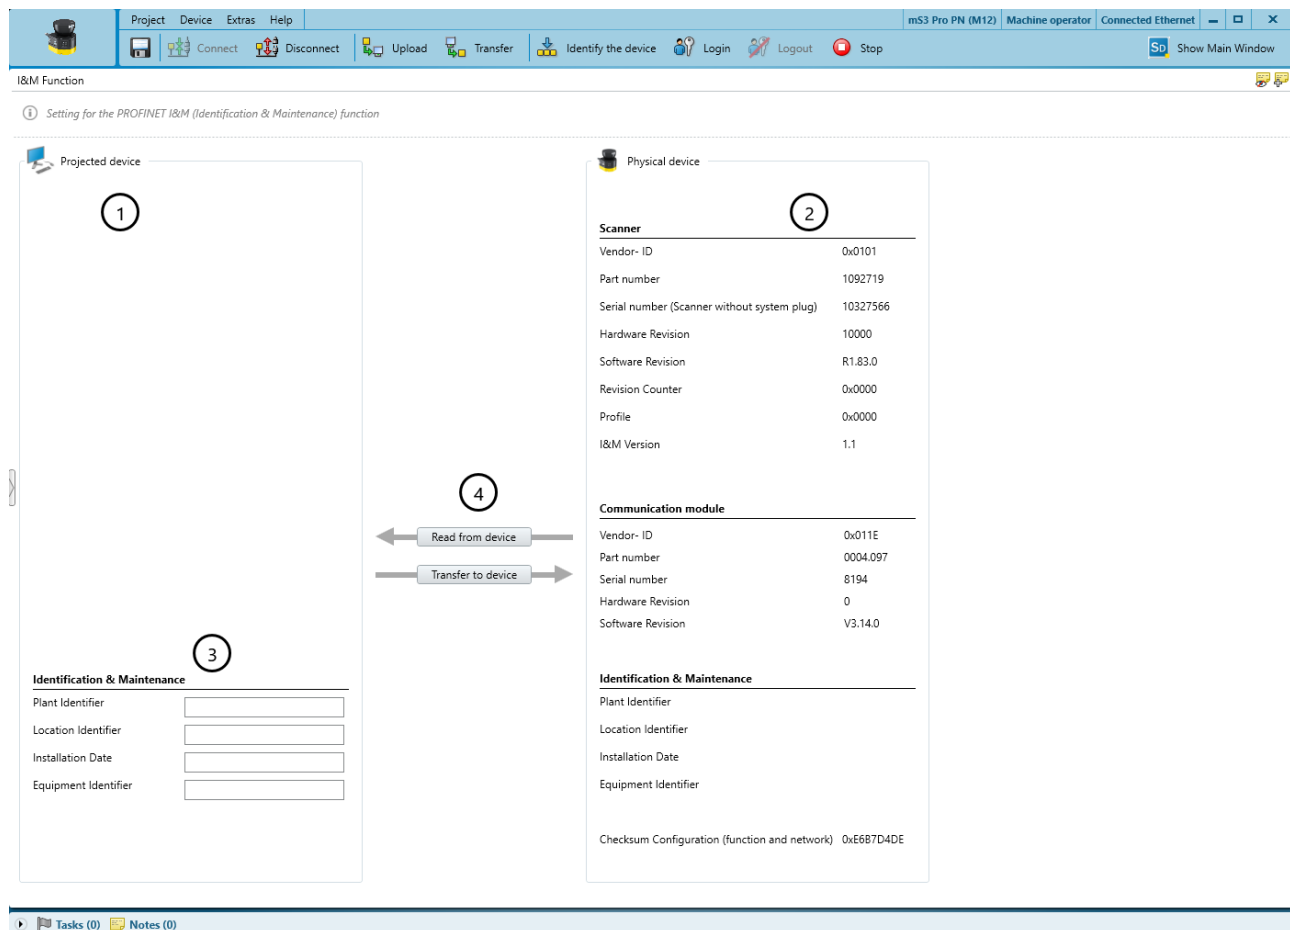


Figure 46: Identification and maintenance function in PROFINET

- ① Values in the project
- ② Values in the device
- ③ Editable data
- ④ Buttons to read or transmit values

The **I&M Function** dialog box contains the data for the identification and maintenance function in PROFINET.

The data for the safety laser scanner and communication module are permanently assigned and cannot be changed. Function, installation site, installation date and description can be configured.

Plant Identifier, Location Identifier, Installation Date and Equipment Identifier

The data entered can help identify the device in PROFINET and facilitate maintenance or repair work.

If the values in the project and the values in the device differ, you can read the values out from the device and adopt them in the project. Or you can transmit values from the project to the device.

- Click on **Read from device**.
- ✓ The values are read from the device and adopted in the project.

- ▶ Click on **Transfer to device**.
- ✓ The parameters from the project are transmitted to the device.

7.6 Time synchronization

Time synchronization

You can synchronize the time and date of the devices in the network. This is important, amongst other things, for ensuring that diagnostics and reports have synchronized and correct time stamps.

You can configure the time synchronization in the main window of the Safety Designer or in the device window.

Information on the functionality and basic operation of the software and on the settings in the main window can be found in the operating instructions of the Safety Designer (part number 8018178).

7.7 Reading configuration

Overview

At the left, you see the values configured in the project for the device. If the device is connected, you see the values saved in the device at the right.

If the values in the project and the values in the device differ, you can read the values out from the device and adopt them in the project.

Procedure

1. Click on **Read from device**.
- ✓ The values are read from the device and adopted in the project.

Complementary information

Configuration:

- **Name**
If a number of devices are used in an application or in a project, a unique device name helps to tell the individual devices apart.
- **Checksums**
A checksum is used as a unique identification for a configuration. Using the checksum, it is possible to work out whether a setup was changed or whether two devices have the same configuration.
The checksum of the configuration in the project may not match the checksum in the device, for example if a field geometry has been modified, but not yet transmitted to the device.

7.8 Identification

Overview

Figure 47: Identification

- ① Parameters for the project and the device

In the **Identification** dialog box, you can optionally enter names and information to uniquely identify the application, project, and devices.

Device name

If a number of safety laser scanners are used in an application or in a project, a unique device name helps to tell the individual devices apart.⁸⁾

- Give each device a unique device name.

Project name

The project name is used to identify an entire project. The same project name should be chosen for all devices in the project.

- Enter a project name.

Application name

The application name can be the same for a number of devices in the project. It highlights that these devices realize an application together, by responding to one another for example.

⁸⁾ The name used here is independent from PROFINET names.

- ▶ Enter an application name.

User name

The optional user name helps later users to find a contact for the application.

- ▶ Enter a user name.

Application image

An image helps to identify the application more quickly. The application image is saved in the project file on the PC and transmitted to the device. The Safety Designer supports the following file formats: BMP, GIF, JPG, PNG, TIF.

1. Click on the pencil icon.
 2. Select an image file for the application.
- ✓ The image is incorporated as a thumbnail.

Description

A description makes it easier to understand an application's context more quickly.

- ▶ Enter a description with a maximum of 1000 characters.

7.9 Protocol settings

7.9.1 PROFINET

F-destination address

For PROFIsafe communication, the safety laser scanner needs a unique F destination address (F_Dest_Add). The same F destination address must be used here as in the configuration of the controller.

- ▶ Please enter a whole number between 1 and 65,534.

7.9.1.1 PROFINET alarms

Overview

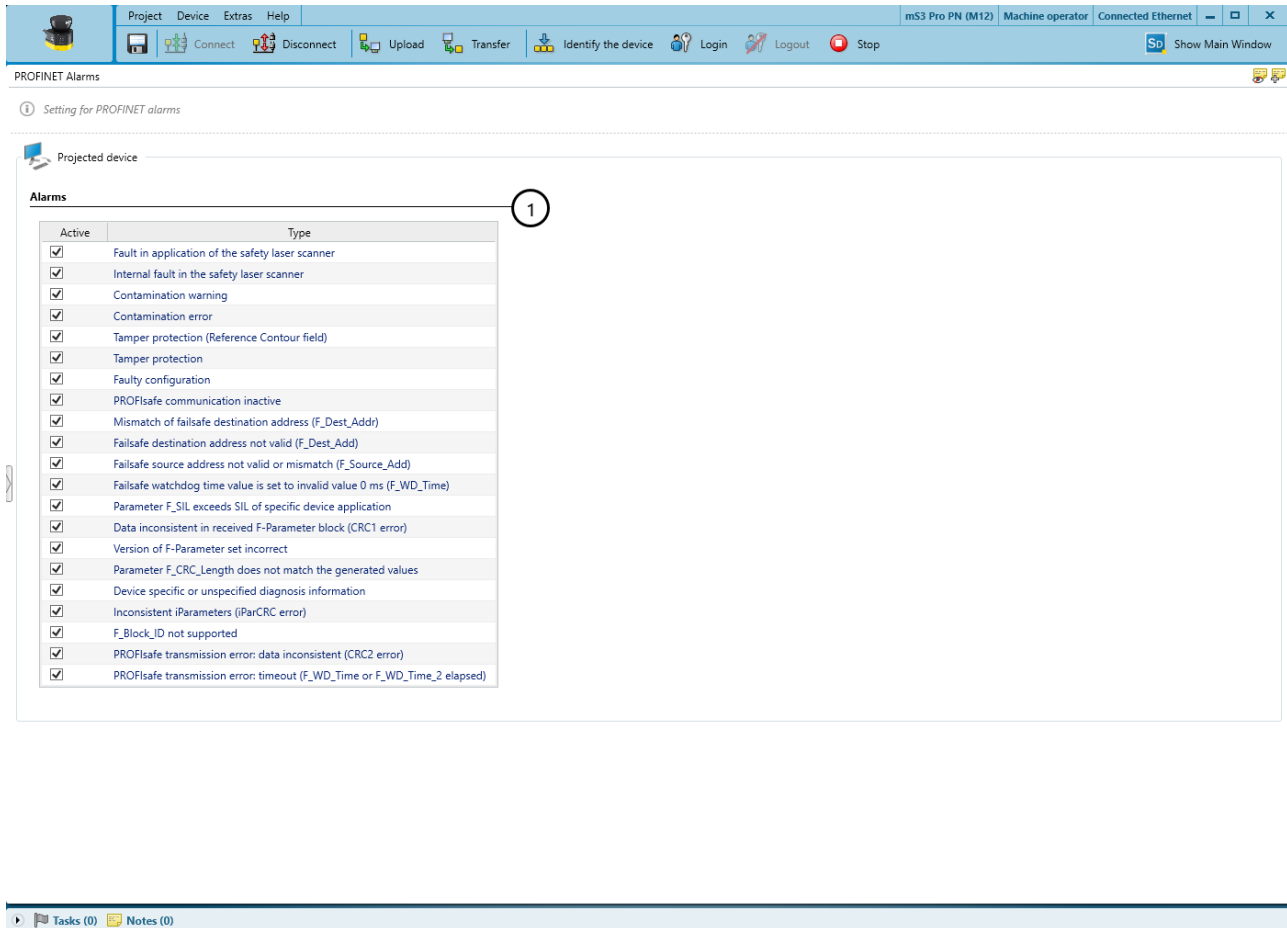


Figure 48: PROFINET alarms

① Table of all available alarms

You determine which alarms are transmitted to the PLC within the process data.

Procedure

1. In the **Active** column, set the respective check mark.
- ✓ The alarm is transmitted to the controller.

Further topics

- ["Alarms", page 157](#)

7.10 Application

Overview

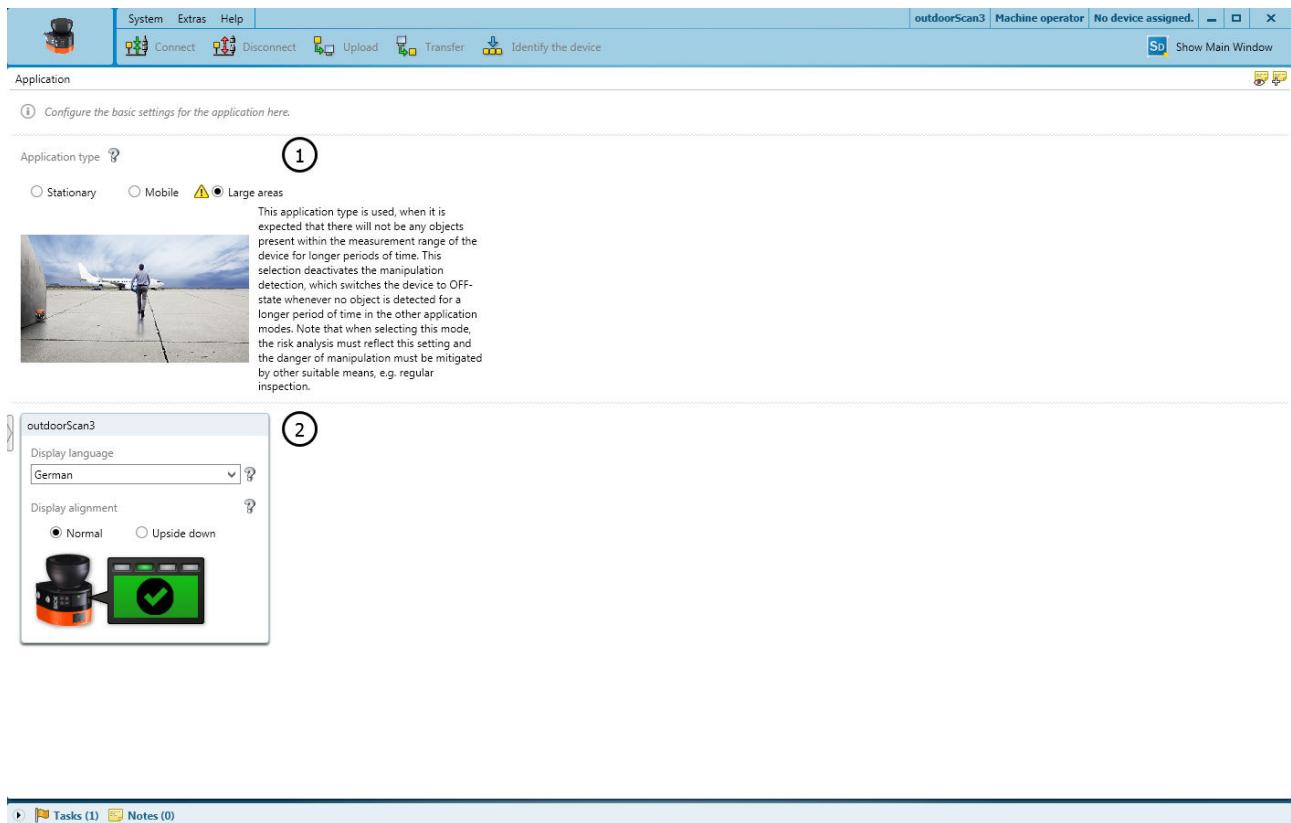


Figure 49: Application

- ① Basic settings for the application
- ② Settings for the display

Application type

The type of application depends on the application of the safety laser scanner:

- ▶ Select application type.
- ✓ **Mobile**
Mobile hazardous area protection is suitable for AGVs (automated guided vehicles), cranes, and forklifts to protect people when vehicles are moving or docking. The safety laser scanner monitors the area in the direction of travel and stops the vehicle as soon as an object is located in the protective field.
- ✓ **Stationary**
The position of the safety laser scanner is fixed. The safety laser scanner is mounted horizontally (for hazardous area protection).
- ✓ **Large areas**
This application type is suitable when the other application types result in a reduced availability because no objects appear within the measuring range over longer periods of time. The tampering protection used for the other application types, whereby the safety outputs are switched to the OFF state if no objects are detected over a longer period of time, is deactivated for this application type. When using this application type, the risk of tampering must be taken into account in the risk assessment, and regular checks must be performed to ensure that there are no objects at close range (< 50 mm from the optics cover) impairing the line of sight of the device.

Display language

The display of the safety laser scanner outputs notifications and states. Multiple languages are available for the display.

- ▶ Select a language that the operator understands.
- ✓ The safety laser scanner outputs the notifications in the set language.

Display alignment

If you mount the safety laser scanner with the optics cover downward, you can rotate the orientation of the display through 180°. The preview shows the selected orientation of the display.

- ▶ Choose the **Normal** or **Upside down** option to specify the display orientation.
- ✓ The preview shows the display's orientation.

7.11 Monitoring plane

Overview

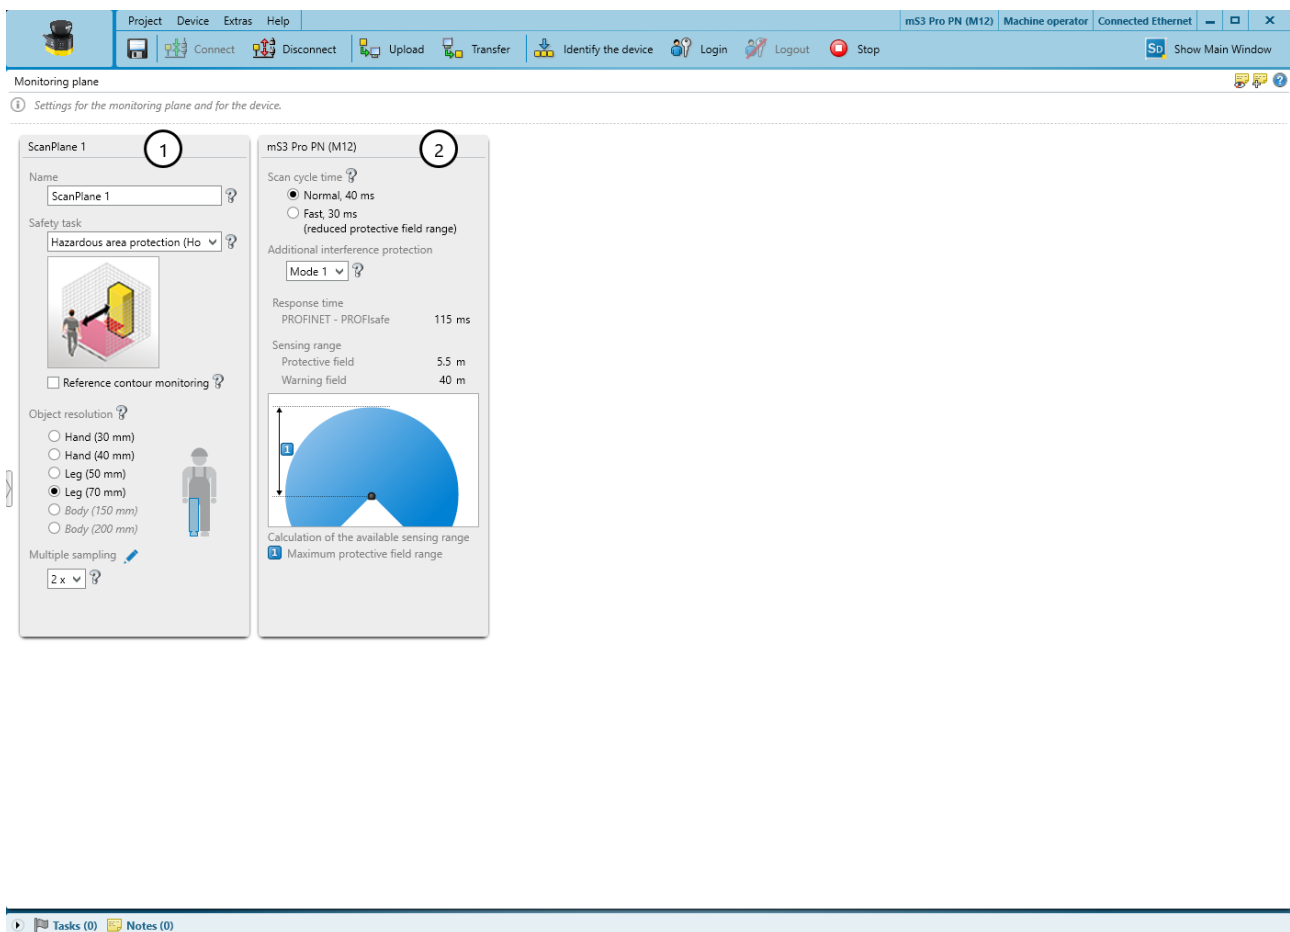


Figure 50: Monitoring plane

- ① Parameters for the monitoring plane
- ② Parameters for the safety laser scanner

The scan plane of a safety laser scanner forms its monitoring plane.

This dialog is used to define the following parameters:

- Parameters for the monitoring plane
- Parameters for the safety laser scanner

7.11.1 Parameters for the monitoring plane

Overview

Configure a name, the protection task, object resolution, and multiple sampling setting for the monitoring plane.

At first, the object resolution and multiple sampling configured for the monitoring plane apply for all fields. If necessary, make changes to each individually at a later date. If you do this, Safety Designer will indicate this in the settings for the monitoring plane.

Name

You can use the name to identify monitoring planes when creating fields and monitoring cases and also in reports.

- ▶ Enter a descriptive name for the monitoring plane (e.g., "Hazardous area on the right hand side").
- ✓ The name is used to identify the monitoring planes.

Safety task

- **Hazardous area protection (Horizontal)**
Typically, for a horizontal approach, the requirement is to detect the leg. The typical object resolution is leg (70 mm).

Object resolution

The object resolution defines the size that an object must be to allow it to be reliably detected. The following object resolutions are available:

- 50 mm = leg detection/arm detection
- 70 mm = leg detection/arm detection
- ▶ Choose the object resolution.
- ✓ Objects the same size as or larger than the chosen object resolution are reliably detected.



NOTE

The configurable object resolution has an influence on the protective field range available. The finer the object resolution configured for the safety laser scanner, the shorter the available protective field range.

The protective field range is shown to you, see ["Parameters for the safety laser scanner", page 86](#).

Multiple sampling



DANGER

Hazard due to lack of effectiveness of the protective device

Persons or parts of the body to be protected may not be recognized or not recognized in time in case of non-observance.

A higher multiple sampling increases the response time.

- ▶ Make a note of the new response time of the safety laser scanner in Safety Designer.
- ▶ Adjust the minimum distance from the hazardous point to the new response time.

Multiple sampling indicates how often an object has to be scanned before the safety laser scanner responds. A higher multiple sampling reduces the possibility that insects, weld sparks or other particles cause the machine to be shut down. You will increase the machine's availability.

A multiple sampling of 2 is the minimum setting.

- Increase the multiple sampling up to 16.
- ✓ An object must be this many times.

Table 11: Recommended multiple sampling

Application	Recommended multiple sampling
Indoor application: stationary or mobile hazardous area protection under clean ambient conditions	4×
Outdoor application: stationary or mobile hazardous area protection under dusty ambient conditions	8×

Multiple sampling after monitoring case switching



DANGER

Hazard due to lack of effectiveness of the protective device

If combined with very short switchover times, higher multiple sampling after switching between monitoring cases can result in a person or part of their body not being detected.

- Make sure that every monitoring case is active for at least the amount of time required for detection by the safety laser scanner (setting for multiple sampling after monitoring case switching multiplied by the configured scan cycle time including the supplement due to interference protection).

When switching between monitoring cases, it is possible that a person may already be in the newly activated protective field when switching takes place. In order to ensure that the person is detected quickly and the dangerous state is brought to an end swiftly, you can adjust the settings for multiple sampling immediately after switching between monitoring cases – regardless of any other multiple sampling in place.

- **Fast (1 scan)** (default setting): Multiple sampling after monitoring case switching $n_{CS} = 1$. An object needs to be scanned once before the safety laser scanner responds. Fastest response and safest behavior of the safety laser scanner.
- **Robust (multiple sampling - 1)**: Multiple sampling after monitoring case switching $n_{CS} = n - 1$. Multiple sampling after switching between monitoring cases is one scan fewer than any other multiple sampling in place. This reduces the possibility that insects, weld sparks, or other particles cause the machine to be switched off. This increases machine availability. The standard response time applies from the outset in the new field.
- **User-defined (please consult manual)**: You can adjust the settings for multiple sampling after monitoring case switching in line with your requirements on response time and reliability. Regardless of the exact settings here, multiple sampling after switching between monitoring cases is always at least one scan fewer than any other multiple sampling in place: $n_{CS} \leq n - 1$

Multiple sampling after object detection

The set multiple sampling also applies by default if a field becomes free again after an object detection. That means, when the field is free again, the free field is scanned the same number of times until the safety outputs switch back to the ON state.

If you activate the **Activate different multiple sampling rate after object detection** option, you can specify deviating values for the monitoring level or for individual fields. This may cause the outputs to switch back to the ON state faster or slower after a field has become free again.

The following case is only relevant if multiple sampling or different multiple sampling rate after object detection is set to a value $n < 6$: Regardless of whether a different multiple sampling rate after object detection is set, the multiple sampling after object detection will in some circumstances be increased to a value up to $n = 6$. This case arises if an object detection lasts for a longer period, i.e. if it takes a long time until the field is clear again.

7.11.2 Parameters for the safety laser scanner

Overview

All the values here have fixed settings.

7.12 Fields

Overview

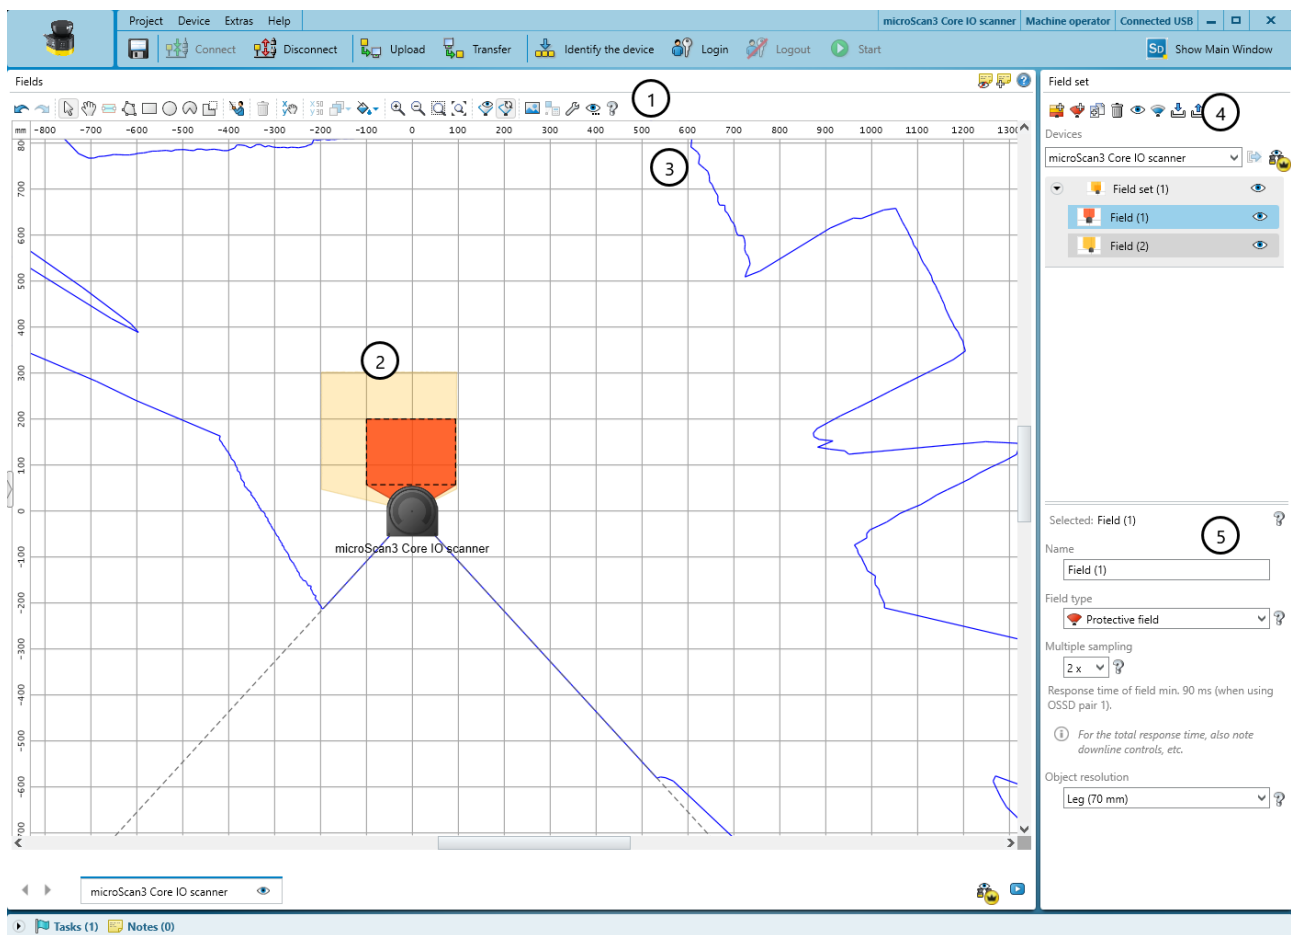


Figure 51: Field editor

- ① Toolbar
- ② Protective field (red) and warning field (yellow) created
- ③ Visible spatial contour
- ④ Create, duplicate, delete field set and fields
- ⑤ Define field type, name field, configure field

Using the field editor, you can configure the field sets of the safety laser scanner. The number of configurable fields depends on the safety laser scanner variant.

In the **Fields** area, you draw the fields in a field set using the tools in the toolbar. In the **Field set** area, you create the field sets and fields. In the area below, you configure details for the selected field set or field.

 
The edge length or the diameter of each field must be at least as large as the selected object resolution.

You can change the sequence of the fields in the **Field set** area using drag and drop. The fields of a field set are displayed in the monitoring case table in the same sequence in which you create them here.

Toolbar

Using the tools in the field editor, you can draw the fields in a field set or masked areas inside the fields.

Table 12: Buttons on the toolbar

	Arrow tool, for marking objects
	Hand tool, for moving the work space
	Measuring tool for measuring distances in the Fields area
	Draw field using points
	Draw rectangle
	Draw circle
	Draw circle segment
	Mask areas. Clicking this button shows the buttons for drawing fields with a hatched display. You can then draw in areas that cannot be monitored.
	Enable propose field
	Delete selected object
	Object transformation. Move, rotate or mirror one or more objects in the Fields area.
	Editing a field using coordinates
	Push the object into the foreground or background
	Selecting the color scheme for fields If a device is selected in the field editor: Select pattern for fields
	Zoom in
	Zoom out
	Zoom to area
	Zoom to work space
	Show snapshot of the spatial contour. Clicking again clears the spatial contour shown. For a virtual group, individual devices or all devices can be selected.

	Show live spatial contour For a virtual group, individual devices or all devices can be selected.
	Selecting a color for the displayed room contour For a virtual group, the color can be selected individually for each device.
	Insert background image
	Calculate field
	Open the device settings
	Editing grid settings

Field display

Safety Designer displays the field types in different colors.

Table 13: Colors of the field types

Protective field	Warning field
	
Red	Yellow

Create fields and field sets

Table 14: Buttons for field sets

	Add field set
	Add field to field set
	Duplicate field set
	Delete field or field set
	Hide or show field sets and fields
	Manage field set templates
	Importing field sets and fields
	Exporting field sets and fields
	Synchronize selection and visibility If a field or a field set is selected or hidden or shown for the current device and a field set of the same name exists in another device of the virtual group, the status is transferred to the other device.

Name

You can assign a unique name for each field set.

Name and Field type

You can assign a unique name and select a field type for each field.

Multiple sampling and Object resolution



DANGER

Hazard due to lack of effectiveness of the protective device

Persons or parts of the body to be protected may not be recognized or not recognized in time in case of non-observance.

A higher multiple sampling increases the response time.

- ▶ Make a note of the new response time of the safety laser scanner in Safety Designer.
- ▶ Adjust the minimum distance from the hazardous point to the new response time.

At first, the object resolution and multiple sampling configured for the monitoring plane apply for all fields. If necessary, you can change these settings for each individual field.

Tolerance band

A contour has a positive and a negative tolerance band. If the safety laser scanner does not detect the contour within the tolerance band, the field switches to the OFF state.

- **Positive tolerance (far):** The tolerance away from the safety laser scanner
- **Negative tolerance (near):** The tolerance toward the safety laser scanner

7.12.1 Drawing in points that cannot be monitored

Overview

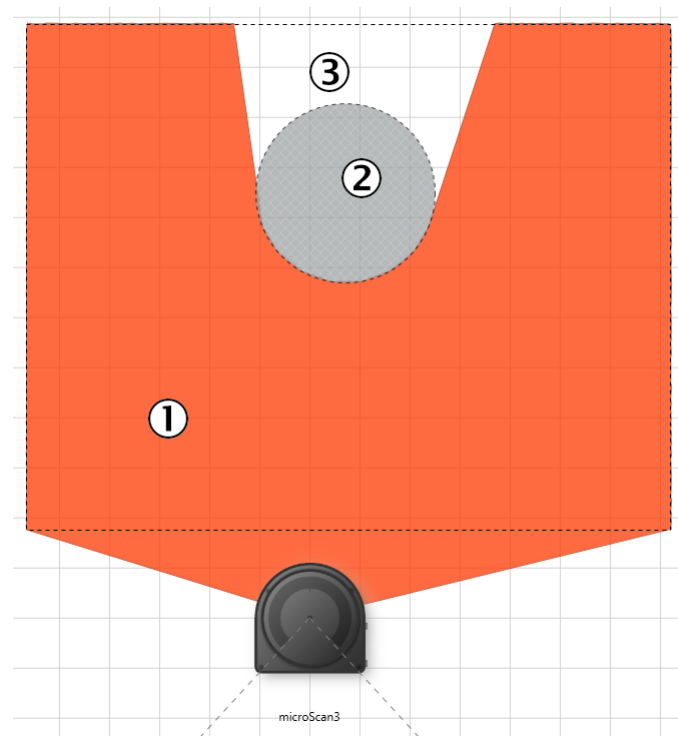


 
Figure 52: Area that cannot be monitored

- ① Protective field
- ② Marked column
- ③ Area that cannot be monitored

The area to be monitored is scanned radially ①. For this reason, shadows ③ are formed by objects in the room ② (support columns, separator grids, etc.). The safety laser scanner cannot monitor these areas.

You draw objects that limit the field of view of the safety laser scanner as masked areas.

Table 15: Mask areas

	Mask areas
	Hatched drawing tools

Procedure

1. Click on the **Mask areas** tool.
- ✓ The tools you can use to draw fields are shown crosshatched.
2. Choose a drawing tool.
3. Draw the masked area.
- ✓ The masked area is shown in gray.
- ✓ The field editor shows the shadowing of the masked area.

7.12.2 Enable propose field

Overview

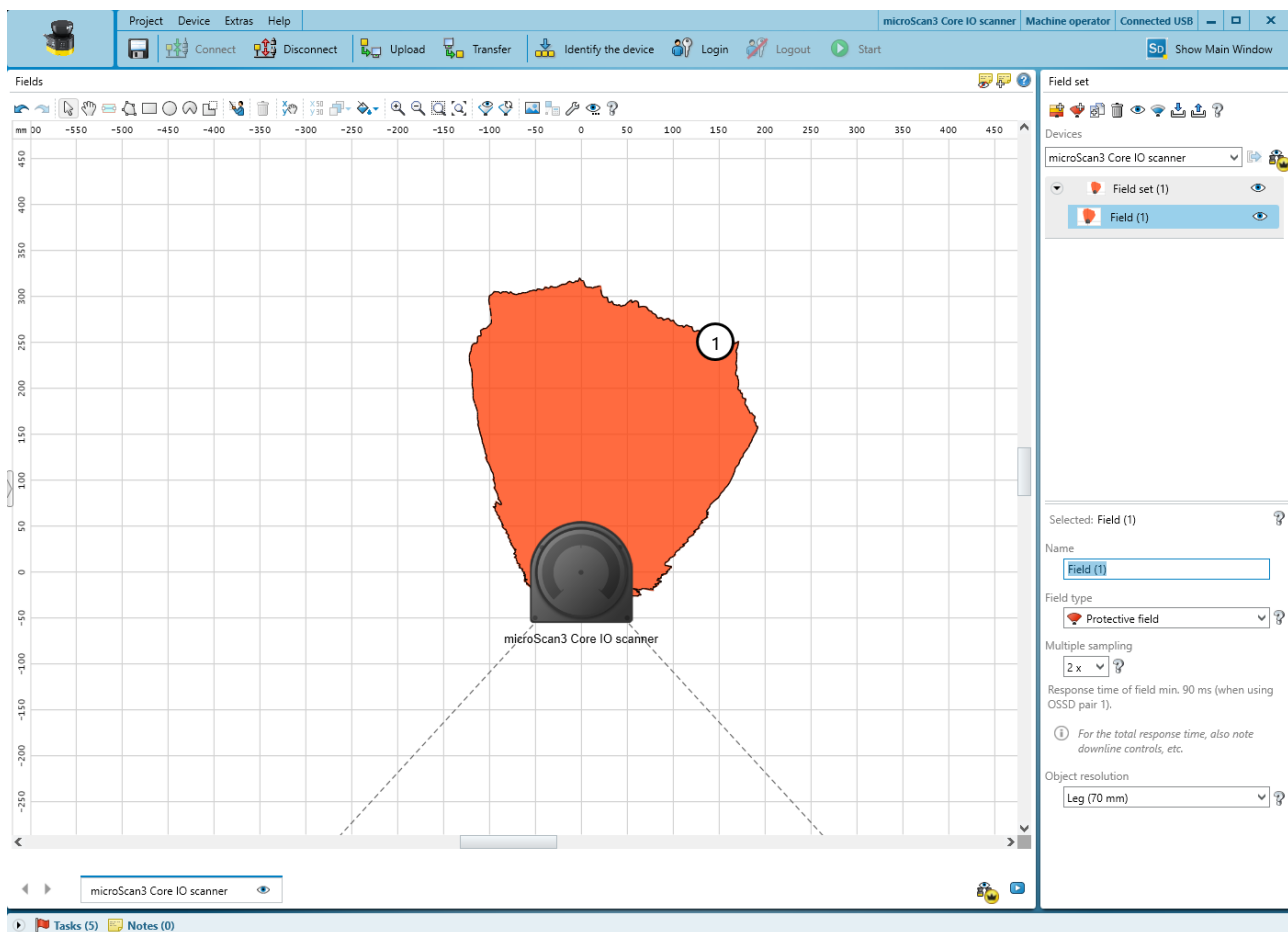


Figure 53: Enable propose field

- ① Proposal for a protective field

You can have a protective field or warning field suggested by Safety Designer.

For this purpose, the safety laser scanner scans the visible surrounding contour several times. Based on the data obtained, the Safety Designer suggests the contour and size of the field.



You can use the **Suggest field** tool to create a field.

Important information



NOTE

If you propose a protective field, the proposal does not replace calculation of the minimum distance. You must calculate the minimum distance and check whether the size of the proposed protective field is sufficient. You must also take into account the measurement tolerances of the safety laser scanner.

Existing field geometries

- **Delete existing shapes:** The field is redrawn according to the surrounding contour.
- **Refine existing shapes:** The existing field is adapted to the surrounding contour.

Measurement method

- **Use every single distance value:** Each scan of the surrounding contour is used individually to draw the field.
- **Use median of distance values:** The median of the last 25 scans is used to draw the field.

Type of teach-in

- **Only allow reduction:** The shortest measured distance is used at each angle. If you walk along the borders of the imaginary field and, e.g., hold a board or cardboard into the laser beam, this restricts the surrounding contour.
- **Allow expansion:** The surrounding contour is used as it is measured.

Automatic reduction

You can specify that the proposed field is drawn smaller than the measured surrounding contour so that the field will be at a distance from walls. The default value corresponds to the TZ value (tolerance zone of the safety laser scanner).

Smoothing by point reduction

The proposed contour may initially be uneven and consist of very many points. With the **Smoothing by point reduction** option, you can reduce the number of points and simplify the lines.

7.12.3 Object transformation

Overview

Table 16: Object transformation

	Object transformation
--	-----------------------

Procedure

1. In the area on the left, select the objects to be transformed.
2. In the area on the right, select the transformation to be performed (**Shifting**, **Rotation** or **Mirroring**) and enter values for the transformation.

3. In the area on the right, click on **Apply to selected objects**.
- ✓ The configured transformation is performed in the **Fields** area.

7.12.4 Editing fields using coordinates

You can use coordinates to edit fields. Depending on the form on which a field is based, the appropriate input fields are displayed. The example shows a dialog box for a rectangle.

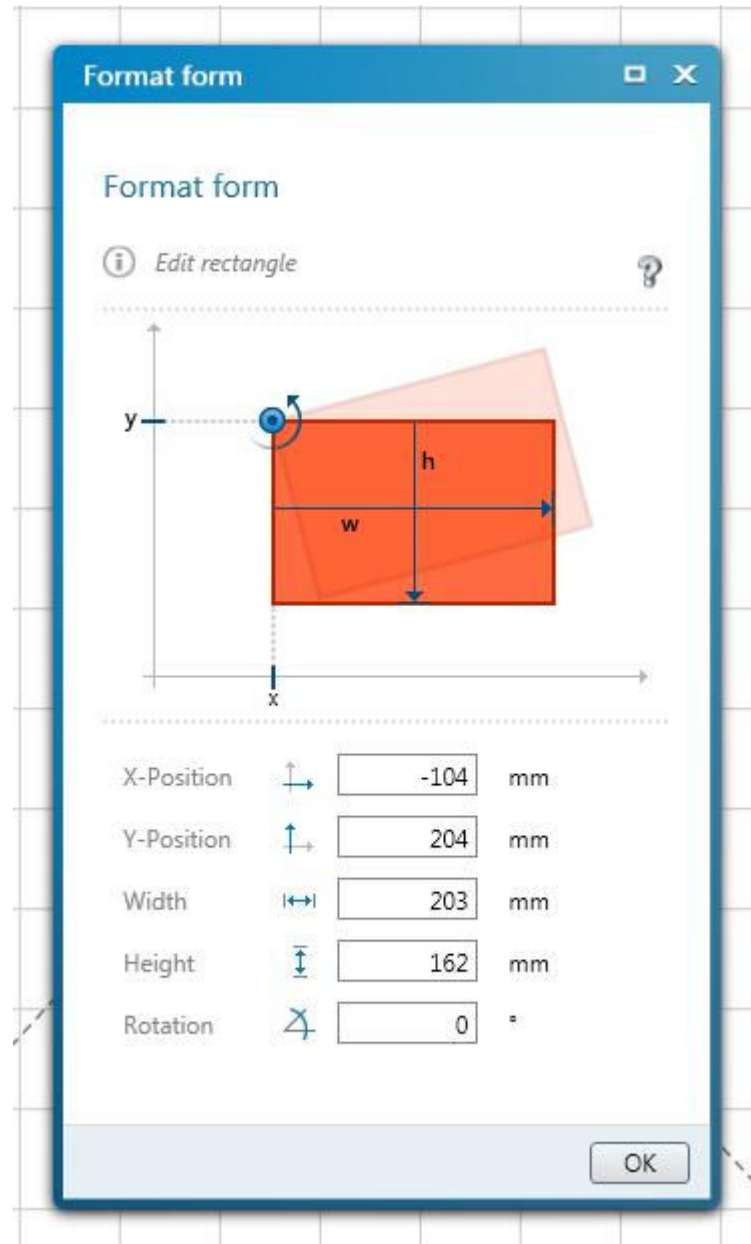


Figure 54: Editing fields using coordinates

The reference points for the X and Y values are as follows:

- Rectangle: top left corner
- Circle: center point
- Circle sector: center point
- Polygon: each point individually
- Contour line: each point individually

7.12.5 Background image

Overview

You can select a background image for the field editor. For example, the plan view of the machine to be protected can be used as a sample.

The background image is saved in the project file on the computer. It is not transmitted to the device.

Table 17: Background image

	Edit background image
---	-----------------------

The Safety Designer supports the following file formats: BMP, JPG, PNG.

Procedure

1. Click on **Edit background image** in the toolbar.
✓ The **Background image** dialog box opens.
2. Click on **Browse**
3. Select the file for the background image.
✓ Safety Designer displays the background image.
4. If necessary, use the pipette icon to select a color of the image to make this color transparent.
5. Adjust the size of the image with the scaling tool or by directly entering the dimensions. Use the scaling tool to move the tips of the blue arrow to two known points and then enter the distance between the points in the field.
6. Enter **X-Position**, **Y-Position** and **Rotation** in the coordinate system of the field editor. You can then freely move or rotate the background image in the field editor.
7. If necessary, click on the **Lock position of the image** option.
✓ It is no longer possible to change the background image in the field editor.

7.12.6 Device Settings

Overview

Table 18: Device Settings

	Device Settings
---	-----------------

Field calculation

You specify whether the fields are calculated manually or automatically after drawing.

If you select the **Manual** option, first draw the areas to be monitored. Then click on **Calculate field sets** so that the Safety Designer calculates the field that the safety laser scanner actually monitors.

If you select the **Automatic** option, the drawn areas are immediately converted into fields.

Use global geometry

You specify whether global geometries are used.

7.12.7 Defining global geometry

Overview

You draw field geometries and non-monitored areas as global geometry. The global geometry affects all protective fields and warning fields.

Procedure

1. Click on the **Device Settings** tool.
2. Activate the **Use global geometry** checkbox.
3. In the **Field set** area, select > **Global Geometry**.
4. Draw a global field geometry.
5. If applicable, draw non-monitored areas with the **Mask areas** tool.

7.12.8 Grid Settings**Overview***Table 19: Settings for the field editor*

	Grid Settings
---	----------------------

Drawing surface

You can use a Cartesian or a polar coordinates system and select the colors for the grid, the labels, and the drawing area.


7.12.9 Creating field set templates

If you require the same combination of fields a number of times, you can create a field set template.



You can edit field set templates using the **Manage field set templates** tool.

Example: you define a field set template with protective field, warning field1 and warning field2.

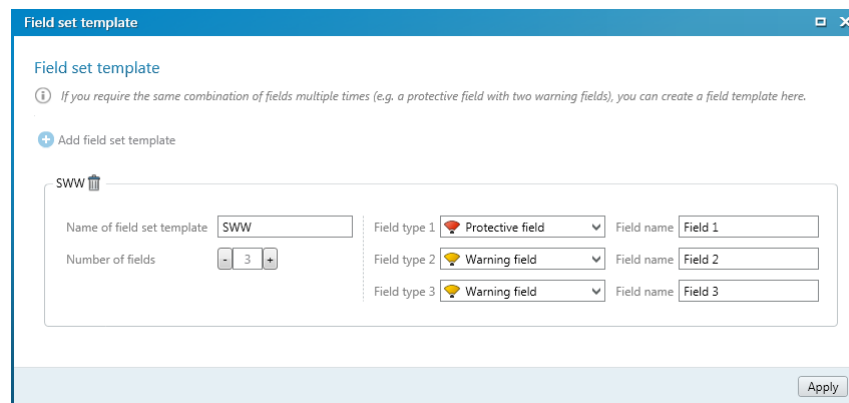
*Figure 55: Field set template***Procedure**

1. Click on **Add field set template**.
2. Enter the name for the template.
3. Define the number of fields.
- ✓ A selection field is shown for each field.
4. Select the Field types for the fields.
5. Enter the Field names.
6. Click on **Apply**.
- ✓ The field set template is saved.

7.12.10 Importing and exporting field sets and fields

Overview

If you need identical field sets or fields across different projects, you can export entire field sets or individual fields out of one project and import them into another project.

Importing field sets and fields

1. Click on **Import fields and field sets**.
2. Select exported file with field set information.
- ✓ A preview of the field sets and fields saved in the file will be shown.
3. Select the required field sets and fields.
4. Start the import.
- ✓ The field sets and fields will be imported.

Exporting field sets and fields

1. Click on **Export fields and field sets**.
2. Select the relevant folder and enter a file name for storing the field set information.
3. Select the required field sets and fields.
4. Start the export.
- ✓ The field sets and fields will be exported.

7.12.11 Virtual group

Overview

If you are configuring several safety laser scanners in a project, you can combine these safety laser scanners into a virtual group. You can then edit the fields for these safety laser scanners in a single field editor. A virtual group can be useful if the safety laser scanners have been mounted on the same level and are arranged in a common world coordinate system.

You need a license to use this function.

Table 20: Virtual group

	Manage devices
	Show/hide device and field decomposition
	Change to device window

Creating a virtual group

1. Click on **Manage devices**.
2. Activate the devices to be included in the virtual group.
3. Click **OK** to confirm.
- ✓ The devices in the virtual group are displayed at the bottom of the field editor.

Editing devices and associated fields in the field editor

1. Click on the desired device at the bottom of the field editor.
2. Edit the device and the associated fields in the field editor as usual.

Hiding or showing devices and associated fields in the field editor

1. Click on **Show/hide device and field decomposition** next to the desired device.
- ✓ If the device was previously visible in the field editor, it will be hidden.
- ✓ If the device was previously hidden in the field editor, it will now be shown.

Switching to another device window in the virtual group

1. Click on **Change to device window** next to the desired device.
- ✓ The device window of the desired device opens in the foreground.

Complementary information

For information on licenses, see the Safety Designer operating instructions.

7.13 Inputs and outputs

Overview

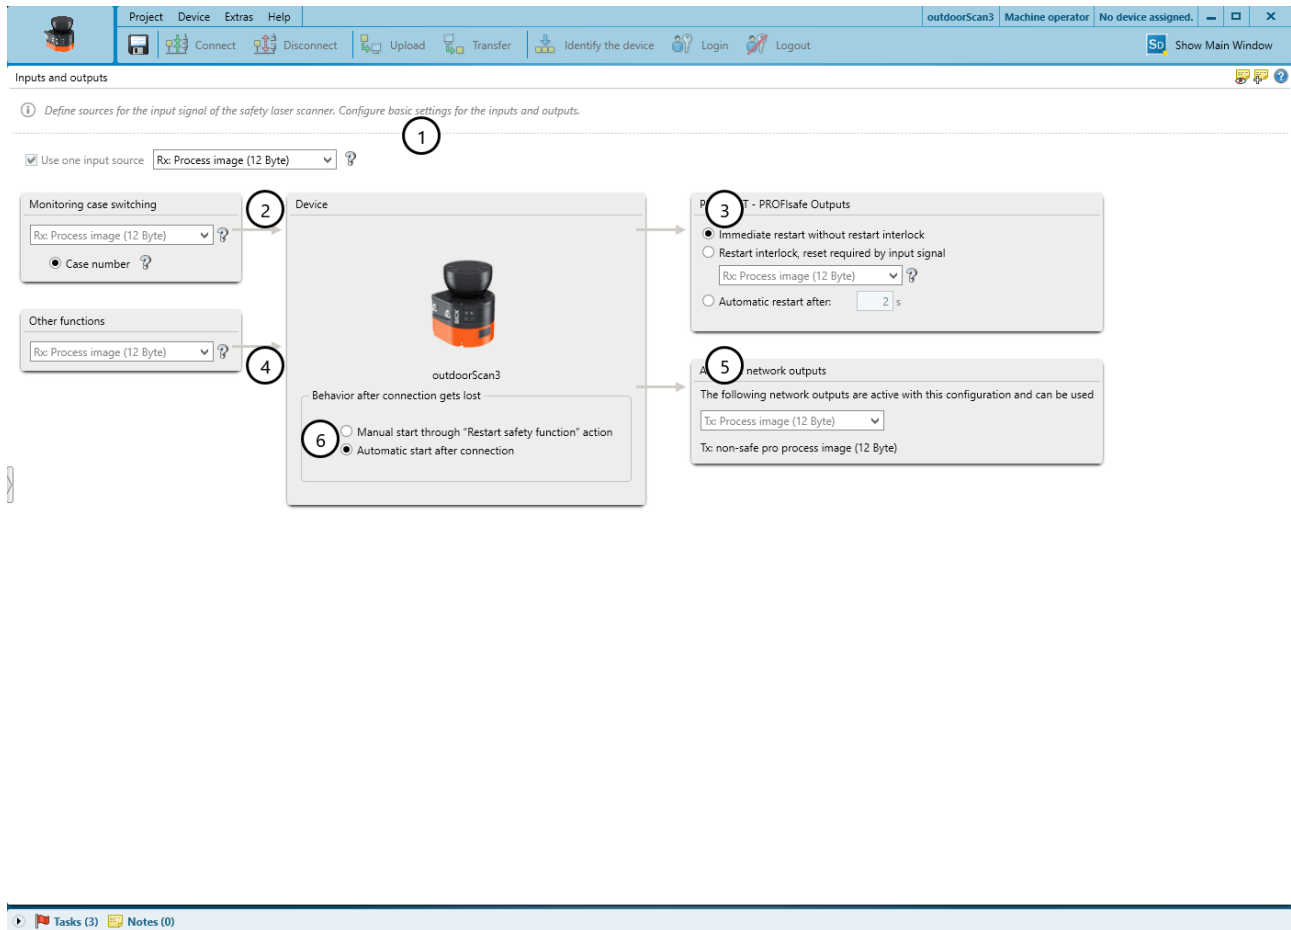


Figure 56: Inputs and outputs

- ① Input source
- ② Input for switching between monitoring cases
- ③ Restart behavior of the network outputs
- ④ Input for additional functions
- ⑤ Network outputs
- ⑥ Behavior during connection termination

Safety Designer provides a selection of the possible signal inputs.

Use one input source

You specify which process image is to be used.

The selected process image is used by the safety laser scanner as the input source for monitoring case switching, for the reset signal, and for other functions (restart the device or activate the sleep mode).

For its output data, the safety laser scanner automatically uses the process image that corresponds to the process map chosen as the input source (same length).

The process image chosen here must have the same length (6 bytes or 12 bytes) as the process image configured in the controller for the safety laser scanner.

Behavior after connection gets lost

If the PROFIsafe communication is reestablished after an interruption, the controller must be reintegrated.

You can configure the way in which the device behaves when secure communication is reestablished in the network after an interruption:

- **Manual start through “Restart safety function” action**
After canceling secure communication, the safety function is stopped and the device reports an application error. Once the connection is reestablished, you must, in addition to reintegration by the controller, send the command **Restart safety function** to the device via the process image or via the Safety Designer.
- **Automatic start after connection**
After aborting the safe communication, the safety laser scanner signals to **Wait for inputs**. As soon as the connection has been reestablished and the reintegration has taken place, the device automatically switches to the current monitoring case. No additional command is required.

Restart behavior

You define whether the internal restart interlock of the network outputs is used.

Available network outputs

Safety Designer displays which network outputs are available.

If you have not specified an input source, you can specify the network output here.

7.14 Monitoring cases

Overview

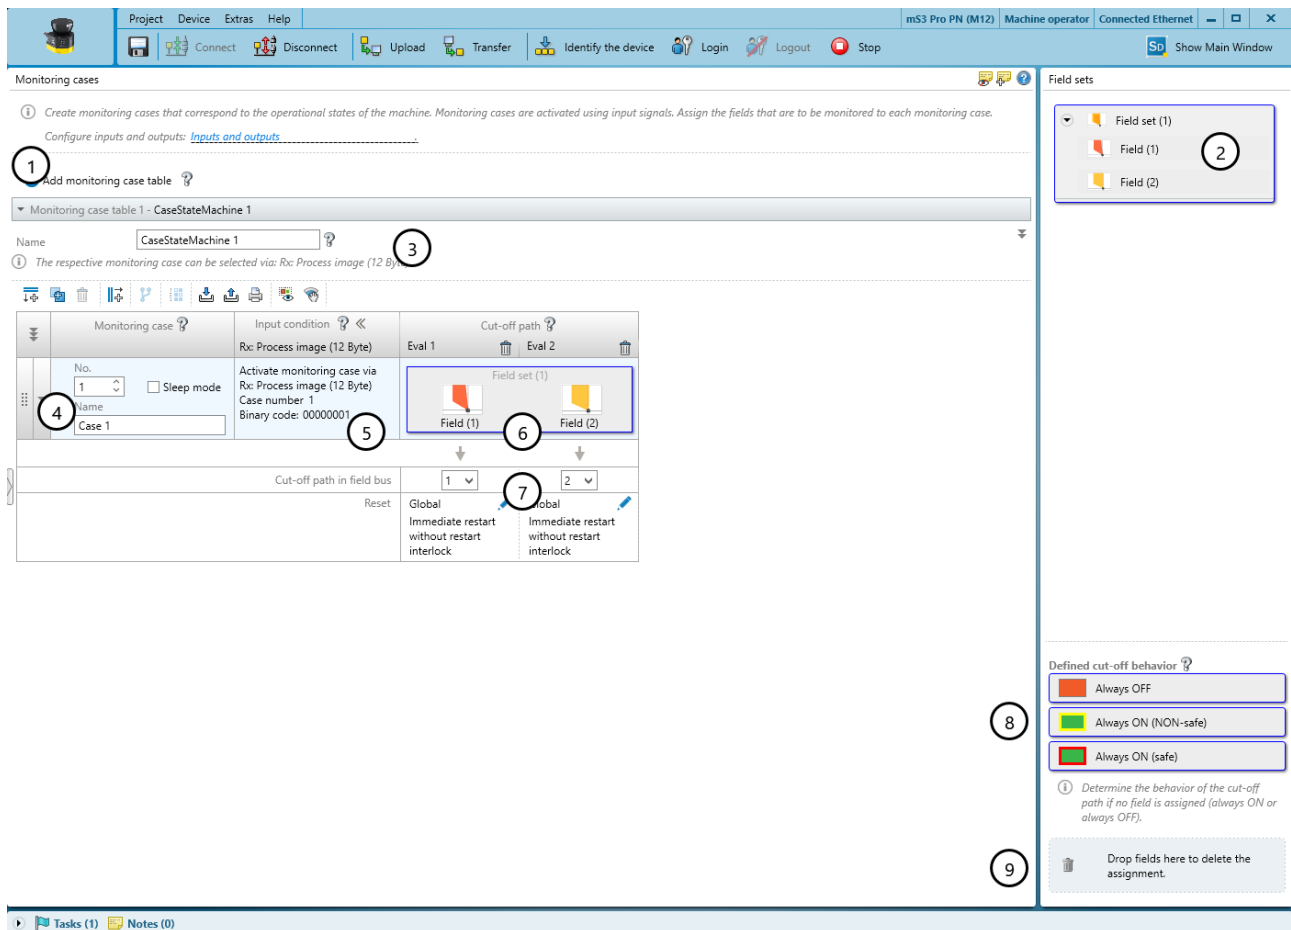


Figure 57: Monitoring cases

- ① Add monitoring case table
- ② Configured field sets
- ③ Settings for the whole monitoring case table
- ④ Settings for the individual monitoring case
- ⑤ Input conditions for a monitoring case
- ⑥ Field set in the monitoring case and in the cut-off path
- ⑦ Cut-off paths
- ⑧ Areas for defined cut-off behavior
- ⑨ Remove field set from a monitoring case

In the monitoring case editor, you can also define the monitoring cases with input conditions and assign the field sets.

Further topics

- "Monitoring case", page 19

7.14.1 Settings for monitoring case tables

Name

In the **Name** field, enter a name for the monitoring case table that is as descriptive as possible.

7.14.1.1 Configure switching sequence

Overview

You can specify the order in which the monitoring cases can be called.

You can specify one or two subsequent monitoring cases for each monitoring event. If you do not specify a subsequent monitoring case for a monitoring case, then any monitoring case may follow.

If input conditions are present that do not call up any of the defined subsequent monitoring cases, the safety laser scanner switches all safety outputs to the OFF state.

You can specify the order of the monitoring cases as a process or in individual steps.

Process

You define one or more sequences. You can use a sequence to map the sequence of work steps for your machine.

In all sequences, you can define a maximum of two subsequent monitoring cases for each monitoring case.

If you do not specify a subsequent monitoring case for a monitoring case, then any monitoring case may follow.

Individual steps

You define individually for each monitoring case which one or two monitoring cases may follow.

If you do not specify a subsequent monitoring case for a monitoring case, then any monitoring case may follow.

Complementary information

You can use the changeover order as an additional check of your control unit. For example, deviations of a vehicle from the route or a plant from the prescribed production process can be detected.

7.14.2 Several monitoring case tables

Certain variants of the safety laser scanner support multiple simultaneous monitoring case tables. For example, you can use a monitoring case table to switch between different monitoring cases with different field sets. At the same time, you can use another monitoring case table to keep a monitoring case always active with a particular field set.

Even if you use several monitoring case tables, each shutdown path is assigned to only one monitoring case table.

If you use several monitoring case tables, one monitoring case must be active in each monitoring case table at all times. As long as no monitoring case is active in a monitoring case table after the start, all outputs remain in the OFF state and the device displays **Waiting for inputs**. If no monitoring case is active in a monitoring case table during operation, all outputs switch to the OFF state and the device displays an error.

7.14.3 Settings for monitoring cases

Name

Enter a name which is as descriptive as possible for the monitoring case in the **Name** field. If you create a lot of monitoring cases, you should consider a naming concept that makes it possible to identify the monitoring cases easily (for example right cornering, left cornering).

Sleep mode

If you activate this option, the safety laser scanner changes to the sleep mode as soon as the input conditions for this monitoring case exist.

7.14.4 Input condition

The controller transmits to the safety laser scanner in the process image the number of the monitoring event to be activated.

For each monitoring case, the Safety Designer shows the number with which the monitoring case is activated.

7.14.5 Cut-off paths

Overview

You can create cut-off paths and define the outputs switched by the cut-off paths.

You need a cut-off path for every field in a field set. If the field sets have different sizes, use the field set with the most fields as a guide.

Cut-off path

You can enter a meaningful name for each shutdown path.

Outputs

A cut-off path can switch safety outputs and non-safety outputs.

Warning fields only affect non-safety outputs. If a warning field is within the active monitoring case of a cut-off path, the assigned safety outputs are always in the OFF state even if the warning field is clear.

You select the outputs that the cut-off path should switch:

- **Cut-off path in field bus:** Number of the network output
Every network output is represented by 2 bits: One bit serves as a safety output (e.g. for protective fields) and the other bit as a non-safety output (e.g. for warning fields).
- **Reset:** Restart behavior of the network output

Further topics

- ["Available data", page 150](#)

7.14.6 Assigning field sets

Overview

The field sets that have been created are listed in the **Field sets** area.

Procedure

Assign a field set to a monitoring case

- Assign a field set to a monitoring case using drag and drop.
- ✓ The fields in a field set are arranged as they were drawn in the field editor.

Splitting a field set into a monitoring case

1. Assign a field set to a monitoring case using drag and drop.
2. Right click on the assigned field set and select **Split fieldset**.
3. Assign the individual fields to one or various monitoring cases.

Assigning a field to a monitoring case

1. Click on **De-/activate single-drag of fields** in the toolbar.
- ✓ Every field in the field sets is highlighted with a frame.

- Click on either a field set or an individual field and assign it to a monitoring case using drag and drop.

Removing assignment

- ▶ Drag a field set or field from a monitoring case onto the trash can icon.

7.14.7 Assigning a defined cut-off behavior

Overview

In a monitoring case, you can assign a defined cut-off behavior to a cut-off path instead of a field:

- **Always OFF:** If the monitoring case becomes active, the cut-off path is in the OFF state.
- **Always ON (NON-safe):** If the monitoring case becomes active, a safety output in the cut-off path is always in the OFF state. A non-safety output is always in the ON state.
- **Always ON (safe):** If the monitoring case becomes active, the cut-off path is in the ON state.

Important information



DANGER

Hazard due to lack of effectiveness of the protective device

Persons and parts of the body to be protected may not be recognized in case of non-observance.

The **Always ON (safe)** function has the same effect as a field which is always clear. In a monitoring case with the **Always ON (safe)** function, the cut-off path containing this function is permanently in the ON state.

Procedure

Assigning a defined cut-off behavior

- ▶ Assign a cut-off behavior to a cut-off path in a monitoring case using drag-and-drop.

Complementary information

If you have not assigned fields to certain cells in a monitoring case table, Safety Designer automatically assigns the **Always OFF** function to these cells.

7.14.7.1 Configuring the default settings for defined cut-off behavior

Overview

With this function, you can define specified cut-off behaviors per cut-off path as default settings for monitoring cases.

Table 21: Show/hide preset for specified cutoff behavior

	Show/hide preset for specified cutoff behavior
--	--

Procedure

- Select **Show/hide preset for specified cutoff behavior**.
✓ Safety Designer displays an additional line in the monitoring case table.
- Assign a cut-off behavior to a cut-off path in the **Preset for specified cutoff behavior** cell using drag and drop.
✓ Safety Designer applies the default settings when you add a new monitoring case.

7.14.8 Importing and exporting monitoring case tables

Overview

If you need identical monitoring case tables for different projects, you can export entire monitoring case tables out of one project and import them into another project.

Prerequisites

- The inputs used are the same for the target project as for the source project.
- The number of field records and fields created is the same for the target project as for the source project.
- The names of the field sets and fields is the same for the target project as for the source project.

Importing monitoring case tables

1. Click on **Importing from .xml....**
 2. Select exported file with monitoring case table.
 3. Start the import.
- ✓ The monitoring case table is imported.

Exporting monitoring case tables

1. Click on **Exporting to .xml....**
 2. Select desired folder and enter file name under which the monitoring case table will be saved.
 3. Start the export.
- ✓ The monitoring case table is exported.

Complementary information

In many cases, it makes sense to first export the field records from the source project and import them into the target project, [see "Importing and exporting field sets and fields", page 95](#).

7.15 Simulation

Overview

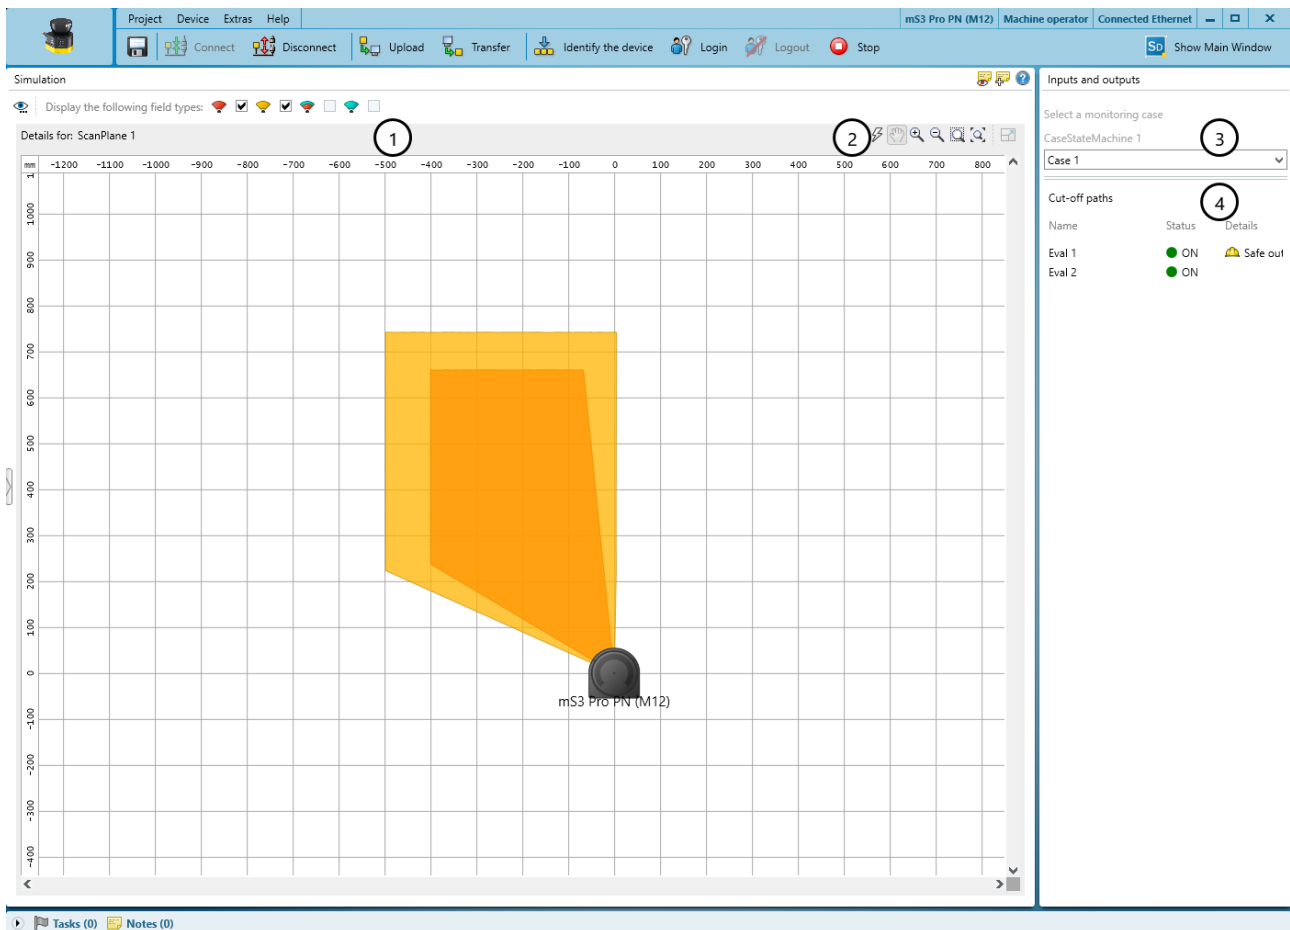


Figure 58: Simulation

- ① Show or hide field types
- ② Simulation tools
- ③ Select monitoring case
- ④ Display the cut-off paths

You can visualize the result of the set configuration in the simulation.

Simulation components and options

- Display the status of the cut-off paths
- You can switch monitoring cases virtually and observe the result
- You can simulate an object detection in a field and check the result.
- You can move fields to the foreground or to the background using the context menu (right mouse button)

7.16 Data output

Overview

Figure 59: Data output

- ① Send mode
- ② Data content
- ③ Angular range

You can define which data from the safety laser scanner is to be output via UDP or TCP/IP.

Important information

**DANGER**

Danger of using data output for safety function

Data output may only be used for general monitoring and control tasks.

- Do not use data output for safety-related applications.

Send Mode

- **Deactivated:** No data output
- **On request:** Data is output when there is an explicit request from a host computer via TCP/IP using CoLa 2
- **On request and also continuously to a target computer (router settings made via "Network settings"):** Data is output continuously via UDP to a defined target address and also when there is an explicit request from a host computer via TCP/IP using CoLa 2

Selection data content

- **Block "Device Status":** Information on the status of the safety laser scanner (e.g., cut-off paths, errors)
- **Block "Configuration of Data Output":** Information on the actual angle range used (due to technical conditions, data may be output from a slightly larger angle range than the set angle range)
- **Block "Measurement Data" *:** Distance data with reflector detection and RSSI
- **Block "Object detection" *:** Data on the beams in the fields of the active monitoring case in which an object was detected
- **Block "Application Data":** State of the inputs and outputs used in the monitoring case table
- **Block "Local I/Os":** State of the local inputs and outputs

Angular range

You define in which range measurement data and data on detections in fields are output.

Complementary information

For additional information on data output, see the technical information "microScan3, outdoorScan3, nanoScan3: Data output via UDP and TCP/IP" (part number 8022706).

7.17 Transfer

Transferring configuration**DANGER**

Hazard due to lack of effectiveness of the protective device

Persons and parts of the body to be protected may not be recognized in case of non-observance.

When transferring the configuration, the protective device's existing configuration may be overwritten.

- ▶ Check the configuration carefully before transfer.
- ▶ Make sure that the desired device is connected during transfer.

At first, the configuration only exists as a project, namely as a configuration file. The configuration must be transferred to the device.

At the left, you see the values configured in the project for the device. If the device is connected, you see the values saved in the device at the right.

The compatibility of the configuration is checked during transfer.

Checking the configuration



DANGER

Hazard due to lack of effectiveness of the protective device

Persons and parts of the body to be protected may not be recognized in case of non-observance.

If the configuration is verified, the device automatically starts the safety function after switching on the voltage supply.

If the configuration is not verified, the safety laser scanner may not be operated as a protective device. You can start the safety function manually to test the safety laser scanner and the configuration. The test operation has a time limit.

- ▶ Only operate the safety laser scanner as a protective device if the configuration is verified.

You can start the safety function manually to test the safety laser scanner with the new configuration, see ["Starting and stopping safety function", page 107](#).

Verifying configuration



DANGER

Hazard due to lack of effectiveness of the protective device

Persons and parts of the body to be protected may not be recognized in case of non-observance.

By verifying the configuration, you can confirm that the configuration complies with the planned safety function and fulfills the requirements in the risk assessment.

- ▶ Check the verification report carefully before confirming verification.
- ▶ If the configuration deviates from the planned safety function or does not fulfill the requirements in the risk assessment, verification must not be confirmed.

The configuration must be verified to ensure that the safety function is implemented correctly.

During verification, Safety Designer reads back the transmitted configuration from the safety laser scanner. It compares the configuration with the configuration saved in Safety Designer. If both configurations are identical, Safety Designer displays the verification report. If the user confirms that this is correct, the system is considered to be verified.

Transmitting and verifying the configuration of an individual safety laser scanner

1. Click on **Identify the device** to ensure that the desired device is connected.
 - ✓ The display of the connected device flashes blue.
2. If the checksums on the computer and the device differ, click on **Transfer to device**.
 - ✓ The transfer process is shown in Safety Designer and on the device.
 - ✓ Safety Designer will notify you as soon as the transfer process is complete.
3. Next click on **Verify**.
 - ✓ Safety Designer displays the verification report.
4. Check the verification report and, if necessary, click on **OK**.
 - ✓ Device configuration is shown as verified.

Transferring a verified configuration

No additional verification in Safety Designer is required after transferring a verified configuration. The thorough check during commissioning, however, still needs to be performed as in all other cases.

1. Click on **Identify the device** to ensure that the desired device is connected.
- ✓ The display of the connected device flashes blue.
2. If the checksums on the computer and the device differ, click on **Transfer to device**.
- ✓ The transmission process is shown in Safety Designer and on the device.
- ✓ Safety Designer displays the verification report.
3. Click on **OK**.
- ✓ Device configuration is shown as verified.

7.18 Starting and stopping safety function

In some situations, it is possible to start or stop the safety function manually.

Table 22: Starting and stopping safety function



Start

starts the safety function.



Stop

stops the safety function.



DANGER

Hazard due to lack of effectiveness of the protective device

Persons and parts of the body to be protected may not be recognized in case of non-observance.

If the configuration is verified, the device automatically starts the safety function after switching on the voltage supply.

If the configuration is not verified, the safety laser scanner may not be operated as a protective device. You can start the safety function manually to test the safety laser scanner and the configuration. The test operation has a time limit.

- Only operate the safety laser scanner as a protective device if the configuration is verified.

7.19 PROFINET Overview

Safety Designer shows information needed to integrate the safety laser scanner into the controller.

You can save the General Station Description (GSDML file).

7.20 Reports

Overview

1 PROJECT INFORMATION

Date of generation: 4/15/2024 2:34:25 PM
 Safety Designer version: SAFETY DESIGNER ENGINEERING TOOL 2024.x
 Name of Safety Designer project:
 User name of Safety Designer project:
 Description of Safety Designer Project:
 Culture: en-US, English (United States)

2 OVERVIEW

Information	Value
User group	Machine operator
User name	
Project name	
Application name	
Application description	
Device name	mS3 Core I/O (M12)
Device type	microScan3 Core I/O, 5.5m

Checksum	in the project file	in the device
Checksum of the configuration (function)	0xE6CA338C	0xE6CA338C
Lower-level identification number of the checksums	0x3411B69575CB70066D5C30EE64384A70	0x3411B69575CB70066D5C30EE64384A70

Configuration status	Verified
Verification date	4/15/2024 2:17:21 PM
Configuration date	4/15/2024 2:16:03 PM

Device information	Device without system plug	System plug
Serial number	19469974	19469335
Hardware revision	Not available	Not available
Firmware version	R01.83	R01.83
Functional scope of the device	V 1.2.0	Not available

3 TASKS AND NOTES

3.1 Tasks

Tasks (1) Notes (0)

Settings for reports

- Subareas
 - ☒ Project information
 - ☒ Overview
 - ☒ Tasks and notes
 - Tasks
 - User notes
 - ☒ Bill of materials
 - ☒ Configuration
 - Functionality of the configuration
 - Safety laser scanner response time
 - Monitoring settings
 - Safety laser scanner position
 - Fields
 - Inputs and outputs
 - Inputs and outputs, local
 - Monitoring cases
 - Cut-off paths
 - ☒ Access management
 - Device status
 - Device status
 - Status display
 - Current errors
 - Contamination measurement
 - Monitoring case tables
 - Fields
 - Cut-off paths
 - Local outputs
 - Local inputs
 - Object detections
 - Configuration history
 - ☒ Diagnostics

Figure 60: Report

- ① Contents of the report
- ② Composition of the report

A report shows the settings and data of a device. You have the option of saving and archiving these data as a PDF.

Report

When you open the **Report** dialog box, the Safety Designer creates a report. If you click on **Update** after making changes to the configuration, you will receive an updated report.

Compiling a report

You compose the contents of a report individually:

- Select the contents of the report under **Settings for reports**.
- ✓ Safety Designer creates a report with the selected contents.

Complementary information

National and international standards promote or recommend specific data and the person responsible for it. The required data are included in the report.

- Print the report.
- Write down the responsible person on the report.
- Archive the report.

7.21 Service

7.21.1 Device restart

If you have problems with the device, you can restart the device or subsections of the device (safety function, connections, additional functions).

Restarting safety function

- The fastest type of restart
- Serious errors remain, even if the cause has been rectified (for example a locking state because of a supply voltage which is too low).
- Communication with the device remains intact (connections for configuration, safety function and data not relating to safety).
- Communication beyond the device is not impaired.

Restarting safety function and connections

- The device's function is also re-established after serious errors if the cause has been rectified.
- Communication with the device is interrupted (connections for configuration, safety function and data not relating to safety). The device sets up communication again automatically after restarting.
- Communication beyond the device is not impaired.

Restarting device completely

- The device behaves exactly as it does when the voltage supply is switched off and back on again.
- The device's function is also re-established after serious errors if the cause has been rectified.
- Communication with the device is interrupted (connections for configuration, safety function and data not relating to safety).
- Communication beyond the device is interrupted. This may also affect devices which communicate beyond the device.

7.21.2 Factory settings

Overview

Before reconfiguring the device, you can reset all settings to factory settings.

Resetting safety function to factory settings

- The configuration for the safety function is reset to factory settings.
- Communication beyond the device is not impaired.

Resetting safety function and communication settings to factory settings

- The configuration for the safety function is reset to factory settings.
- The configuration of device communication is reset to factory settings (connections for configuration, safety function and data not relating to safety).

Resetting complete settings to factory settings

- The configuration for the safety function is reset to factory settings.
- The configuration of device communication is reset to factory settings (connections for configuration, safety function and data not relating to safety).
- The **Maintenance personnel** and **Authorized client** user groups are deactivated.
- The password of the **Administrator** user group is reset to the factory settings.

7.21.3 Managing passwords

Assigning or changing passwords

1. Establish a connection to the device.
 2. In the device window under **Service**, select the **User password** entry.
 3. In the **User password** dialog, select the user group.
 4. Enter the new password twice and confirm with **Transfer to device**.
 5. When you are prompted to log on, select your user group and enter the corresponding password.
- ✓ The new password is valid for the user group immediately.

Resetting a password

Reset user group password Administrator:

1. Request the form for resetting your password from SICK support.
 2. Connect to the device in Safety Designer.
 3. In the device window under **Service**, select the **User password** entry.
 4. In the **User password** dialog, select the **Start process for resetting the password** option.
 5. Send the information displayed on the form to SICK support.
- ✓ You will then receive an activation code.
6. If the device is connected via network: Release the password reset using the OK button in the corresponding display menu.
 7. Enter and confirm the activation code in the field provided in Safety Designer.
- ✓ The password of the **Administrator** user group is reset to factory settings (SICKSAFE). The **Maintenance personnel** and **Authorized client** user groups are deactivated. The configuration is not changed.

7.21.4 Access management

Overview

You can activate or deactivate interfaces and selected functions as needed.

In the **Projected device** area, you can see the settings in the project.

When a device is connected, you can see in the **Physical device** area the configuration in the device and the status describing the actual behavior of the device.

Older devices may not support all settings.

Functions and settings

You can activate, deactivate or select the default setting for each function displayed. The default setting depends on the device and its range of functions.

Safety Designer displays the minimum functionality that the device must have to support the setting.

Behavior if the "deactivated" setting is not supported by the device or replacement device:

It may happen that settings are stored in the system connector that the device cannot evaluate, e.g. because a device has been replaced by an older device. You can set how the device should behave in this case.

Older devices ignore all settings in this window. Safety Designer shows up to which functional range the settings are ignored.

7.21.4.1 Functions and settings

Device restart (without network) via device display

You can specify whether the device can be restarted using the pushbuttons on the display.

USB (Device configuration and diagnosis)

If you deactivate the USB interface and service work is to be performed on the device at a later time, the service technicians (e.g. from SICK) may have to be given access to your network.

As soon as the interface is deactivated, no new connections can be established. An existing connection remains open until it is closed or the timeout expires.

At least one interface must be active so that you can access the device. Safety Designer prevents the transfer of a configuration in which all configuration interfaces are deactivated.

PROFINET CoLa 2

You can activate or deactivate the CoLa 2 interface for all PROFINET connections.

The CoLa 2 interface enables device configuration and diagnostics with Safety Designer via network. For information on further functions of the CoLa 2 interface, refer to the technical information "microScan3, outdoorScan3, nanoScan3: Data output via UDP and TCP/IP" (part number 8022706).

As soon as the interface is deactivated, no new connections can be established. An existing connection remains open until it is closed or the timeout expires.

7.21.5 Compare configuration**Overview**

You can use this function to compare the current configuration in the project with a previously exported configuration or the configuration in the device.

Exported configurations are stored in their own format: ".sdsc". You can export a configuration under **Service > Compare configurations** in the **Current configuration of project** area in the project.

Table 23: Buttons

Button	Description
	Current configuration of project area: Exports the current configuration in the ".sdsc" format for another comparison
	Comparison data area: Exports the comparison configuration in the ".sdsc" format
	Via the comparison table: Exports the comparison result
	Imports the configuration file in the ".sdsc" format
	Identifying the device
	Reads the configuration from the device
	Updates the configuration comparison

Prerequisites

- The configuration export contains only one device.
- Type code of the device is identical in both configurations.
- Version number of the range of functions in the project is equal to or higher than the configuration to be compared with.

Procedure

1. In the navigation menu of the device window, navigate to **Service > Compare configurations**.
- ✓ The Safety Designer shows the current device configuration at the top left of the workspace.
2. Reading in comparison data:
 - Reading a configuration from the device: Open the drop-down menu next to the device symbol and select **Read from Device**.
 - Importing a configuration file: Select and import a previously exported configuration file using **Import data**.
 - Use the current configuration in the project: Select **Use comparison data**.
- ✓ The Safety Designer starts the configuration comparison and displays the results in a table in the workspace.
3. If necessary, export the comparison result as a .csv file using **Export result** via the comparison table.

Importing comparison data

You can use the **Import** button to apply all settings of the comparison data to the current configuration if the version number of the range of functions is identical in both configurations.

You need a license to use this function.

For information on licenses, see the Safety Designer operating instructions.

7.21.6 Import / Export

Overview

You can use this function to export the current configuration in the project or import a previously exported configuration.

Exported configurations are stored in their own format: “.sgexml”.

When importing using **Import**, you can select in detail which parts of the configuration to import.

When exporting using **Export**, you can select in detail which parts of the configuration to export.

8 Commissioning

8.1 Safety



WARNING

Hazard due to lack of effectiveness of the protective device

- ▶ Before commissioning the machine, make sure that the machine is first checked and released by qualified safety personnel.
- ▶ Only operate the machine with a perfectly functioning protective device.



DANGER

Dangerous state of the machine

During commissioning, the machine or the protective device may not yet behave as you have planned.

- ▶ Make sure that there is no-one in the hazardous area during commissioning.



DANGER

Hazard due to lack of effectiveness of the protective device

When changes are made to the machine, the effectiveness of the protective device may be affected unintentionally.

- ▶ After every change to the machine and changes to the integration or operational and secondary conditions of the safety laser scanner, check the protective device for effectiveness and recommission as specified in this section.

Before initial commissioning, project planning, mounting, electrical installation and configuration must be completed in accordance with the following chapters:

- ["Project planning", page 22](#)
- ["Mounting", page 60](#)
- ["Electrical installation", page 65](#)
- ["Configuration", page 67](#)

8.2 Alignment

The following options are available to you for precisely aligning the safety laser scanner using mounting kit 2:

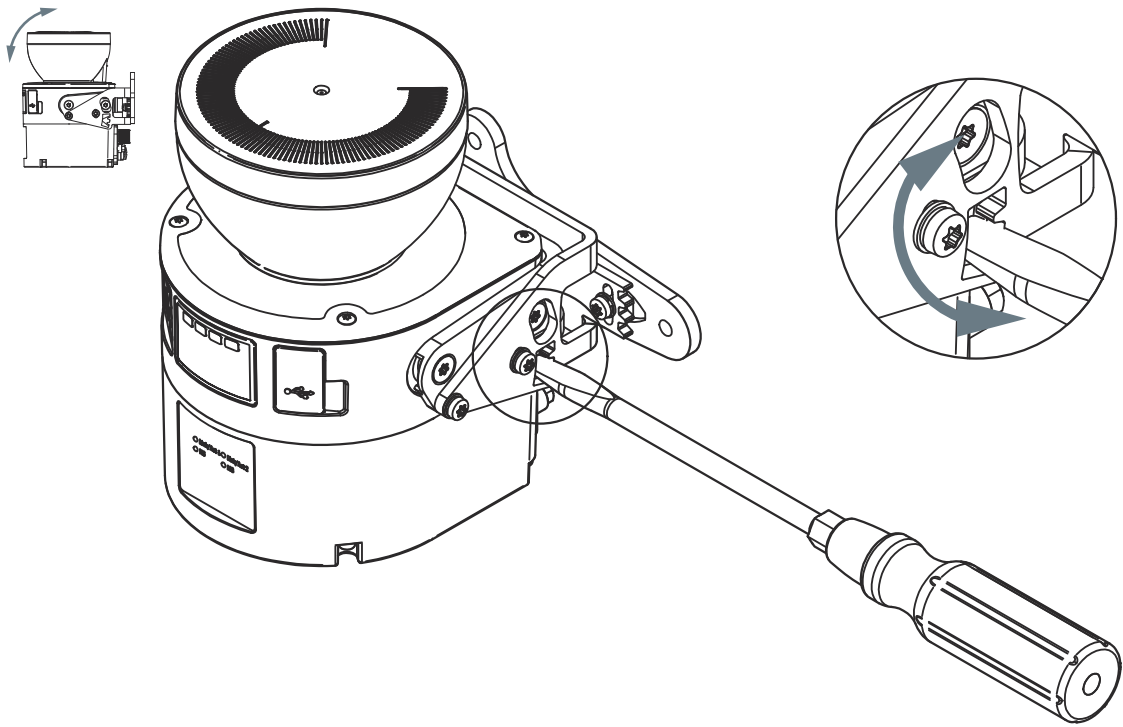


Figure 61: Alignment about the transverse axis

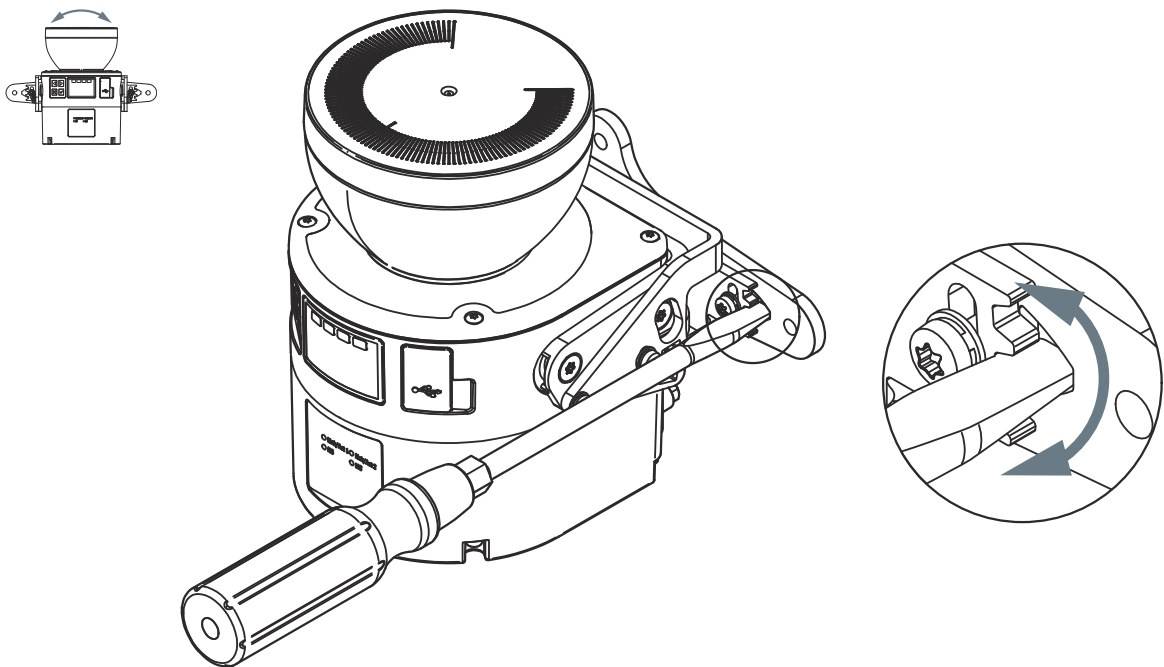


Figure 62: Alignment about the depth axis

- After alignment, tighten the screws with the specified tightening torque.

8.3 Switching on

After switching on, the device performs various internal tests. The OFF LED illuminates continually. The ON LED is off.

When switched on for the first time, the startup process can take up to 100 seconds. When switching on again, the required startup time depends on the volume of configuration data. The startup process then takes about 10 to 30 seconds.

When the startup process is finished, the status LEDs and the display show the current operational status.

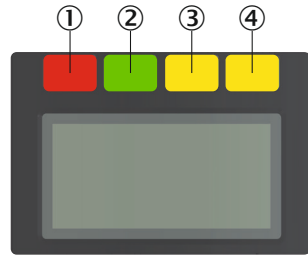


Figure 63: Status LEDs

Table 24: Status LEDs

Number	Function	Color	Meaning
①	OFF state	Red	Lights up red when at least one safety output is in the OFF state.
②	ON state	Green	Lights up green when at least one safety output is in the ON state.
③	Warning field	Yellow	Lights up yellow if an object is detected in at least one warning field.
④	Restart interlock	Yellow	Setup with reset: Flashes if the restart interlock has been triggered. Configuration with automated restart after a time: Lights up while the configured time to restart expires.

The OFF state and ON state light emitting diodes can be found in multiple locations on the device. 3 additional sets are arranged in pairs on the base of the optics cover. So the LEDs can also be seen in many cases when it is not possible to see the display, e.g. due to the mounting situation or because it is hidden from the operator's position.

The device has different LEDs for every network interface. These network LEDs are located below the display.

More information about what the LEDs mean and the symbols and information shown on the display: [see "Troubleshooting", page 127](#).

8.4 Check during commissioning and modifications

The thorough check is intended to ensure that the safety functions are fulfilling their planned purpose and whether persons are being adequately protected.

- Carry out the checks specified in the test plan of the manufacturer of the machine and the operating entity.

9 Operation

9.1 Safety



DANGER

Hazard due to lack of effectiveness of the protective device

Persons and parts of the body to be protected may not be recognized in case of non-observance.

- Maintenance work, alignment work, error analyses, and any changes to the integration of the protective device in the machine must only be carried out by qualified personnel.
- The effectiveness of the protective device must be checked following such work.



NOTE

This document does not provide instructions for operating the machine in which the safety laser scanner is integrated.

9.2 Regular thorough check

The thorough check is intended to ensure that the safety functions are fulfilling their planned purpose and whether persons are being adequately protected.

- Carry out the checks specified in the test plan of the manufacturer of the machine and the operating entity.

9.3 Status indicators

Overview



Figure 64: LEDs

- ① Status LEDs
- ② Additional LEDs for ON state and OFF state
- ③ Display
- ④ Network LEDs

Further topics

- ["Detailed diagnostics using the display", page 127](#)
- ["Error indication on the display", page 129](#)

9.3.1 Status LEDs

4 status LEDs are located directly above the display.

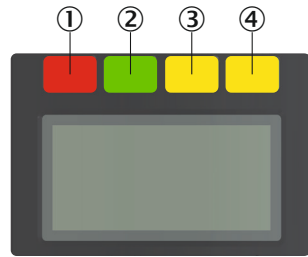


Figure 65: Status LEDs

Table 25: Status LEDs

Number	Function	Color	Meaning
①	OFF state	Red	Lights up red when at least one safety output is in the OFF state.
②	ON state	Green	Lights up green when at least one safety output is in the ON state.
③	Warning field	Yellow	Lights up yellow if an object is detected in at least one warning field.
④	Restart interlock	Yellow	Setup with reset: Flashes if the restart interlock has been triggered. Configuration with automated restart after a time: Lights up while the configured time to restart expires.

The OFF state and ON state light emitting diodes can be found in multiple locations on the device. 3 additional sets are arranged in pairs on the base of the optics cover. So the LEDs can also be seen in many cases when it is not possible to see the display, e.g. due to the mounting situation or because it is hidden from the operator's position.

9.3.2 Network LEDs

The device has different LEDs for every network interface. These network LEDs are located below the display.



CAUTION

The network LEDs are only used for diagnostic purposes and are not safety-relevant. The safety function of the device is not impaired even if the status indicators are incorrectly displayed or fail.

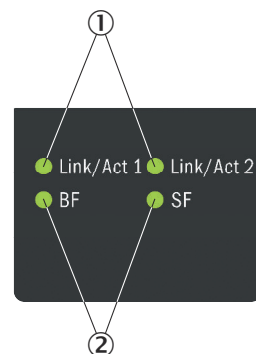


Figure 66: Network LEDs

- ① LEDs for network interfaces
- ② PROFINET LEDs

The device has an LED for every network interface.

For PROFINET and PROFIsafe the device has two additional LEDs.

9.3.2.1 LEDs for network interfaces

The device has an LED for every network interface.

Table 26: LEDs for network interfaces, labeling: Link/Act

LED status	Meaning	Troubleshooting
○	No supply voltage No Ethernet connection	▶ Check the voltage supply. ▶ Check the network cable. ▶ Check whether the device at the other end of the network cable is switched on.
● Green	Ethernet connection established	–
● Yellow	Data transmission	–

9.3.2.2 PROFINET LEDs

The device has two PROFINET LEDs. These LEDs are used collectively for both PROFINET connections.

Table 27: Bus error LED, inscription: BF

LED status	Meaning	Troubleshooting
○	No supply voltage or PROFINET communication not active or device is not configured	▶ Check power supply, wiring and connected communication partners. ▶ Restart device. ▶ Check the configuration of the device.
● Green	PROFINET communication is active	–
● Green	No connection to control unit	▶ Check PROFINET names. ▶ Check the control unit. ▶ Start the controller.
● Red	Serious error, device not ready	▶ Check device. ▶ Restart device. ▶ Replace device.
● Red	Incorrect PROFINET configuration	▶ Check the PROFINET configuration, in particular F_Dest_Add.
● Red/green	PROFINET alarm is active	▶ Check the cause of the error in the configuration program of the controller and observe the help text. ▶ Check the alarm in the Safety Designer.

Table 28: System error LED, inscription: SF

LED status	Meaning	Troubleshooting
○	No supply voltage or PROFIsafe communication not initialized or not active or incorrect process image selected	▶ Trigger or launch PROFIsafe communication. ▶ Check whether the same process image is selected in the controller and in the device (6 bytes or 12 bytes)
● Green	PROFIsafe communication is active	–

LED status	Meaning	Troubleshooting
 0.5 Hz, green	Passivation of the device has been completed, e.g. after communication error or connection termination	► Perform reintegration of the device.
 2 Hz, green	A process image with F_iPar_CRC is used, but value 0 is specified as F_iPar_CRC.	► Enter the correct F_iPar_CRC in the configuration program of the controller. ► Use process image without F_iPar_CRC.
 Red	Serious error, device not ready	► Check and restart the device. ► Replace device.
 Red	Incorrect PROFIsafe configuration	► Check the PROFIsafe parameters, in particular, F_Dest_Add, WD_Time, F_iPar_CRC. ► Check the PROFINET connection (see table 27, page 118).

 
9.3.3 Status indicator with the display

The display shows current information about the status of the safety laser scanner. The display switches off after approx. 60 s if all fields are clear and no other notification is displayed.

- If the display is switched off, press any pushbutton to activate the display.
- Press any pushbutton to obtain more details about the displayed status information.
- If there are a number of pages with detailed information, this is shown in the top right of the display.
- Press the arrow buttons to change between a number of pages with detailed information.

Table 29: Overview of status information

Display	Device or configuration	Meaning
	All devices and configurations	All fields clear, safety outputs in ON state. The number at bottom right indicates the active monitoring case.
	Devices and configurations with a configured safety output	Detection in the protective field, safety output in the OFF state.
	Devices and configurations with 2 to 4 configured safety outputs	For each of the 4 cut-off paths, the following applies: Detection in the protective field or there is a warning field in the active monitoring case. Safety outputs in the OFF state. Each column stands for a safety output. Safety outputs in the OFF state are marked with a cross if they could be in the safety-related ON state in at least one monitoring case.

Display	Device or configuration	Meaning
	Devices and configurations with 2 to 4 configured safety outputs	Detection in the protective field in position 3 or there is a warning field in the active monitoring case. The associated safety output is in the OFF state. Safety outputs for which no object is detected in the field and which are in the ON state are marked with their number.
	Devices and configurations with 2 to 4 configured safety outputs	Cut-off paths in which no protective field is located are not marked. The associated safety output is in the OFF state. A non-safety-related output can still be in the ON state, e.g. if a warning field is free.
	Devices and configurations with more than 4 configured safety outputs	For one or more cut-off paths, the following applies: Detection in the protective field or there is a warning field in the active monitoring case. The associated safety outputs are in the OFF state. • Left digit: the number of safety outputs in the OFF state • Right digit: the number of configured safety outputs
	Configuration with restart interlock	Protective field is clear, reset can take place.
	Configuration with restart interlock	Reset button pressed Safety output in the OFF state.
	Configuration with restart interlock	Reset button pressed Safety output in the ON state.
	Configuration with automated restart after a time	Protective field is clear, configured time to restart expires.
	Configuration with at least one warning field	Detection in the warning field (left column: number of warning fields with detection, right column: number of warning fields in the current monitoring case).
	All devices and configurations	Error. All safety outputs in the OFF state. Additional information: see "Error indication on the display", page 129.
Display flashes		
	All devices and configurations	Contamination warning. Check the optics cover for damage. Clean the optics cover.
Display flashes		

Display	Device or configuration	Meaning
 Display flashes	All devices and configurations	Contamination error. All safety outputs in the OFF state. Check the optics cover for damage. Clean the optics cover.
 Display flashes	All devices and configurations	Dazzle warning. Check whether the safety laser scanner is being dazzled by an external light source in the scan plane, e.g., sun, halogen light, infrared light source. Remove or cover the light source.
 Display flashes	All devices and configurations	Dazzle error. The associated safety outputs are in the OFF state. Check whether the safety laser scanner is being dazzled by an external light source in the scan plane, e.g., sun, halogen light, infrared light source. Remove or cover the light source.
 Display flashes	All devices and configurations	Tamper protection. The safety laser scanner measures no values within the distance measurement range in an area of at least 90°. All safety outputs in the OFF state.
	All devices and configurations	Safety function stopped. All safety outputs in the OFF state. Restart the device using the keypad or Safety Designer.
	All devices and configurations	The safety laser scanner has not yet received a valid monitoring case number. All safety outputs in the OFF state. After switching on, the safety laser scanner waits for a valid input signal. During this time, an invalid input signal does not result in a error. The message is also displayed during the passivation of the device in the PROFINET (e.g. after communication error or connection termination).
	All devices	The device is not configured. The device is in the as-delivered state or has been reset to factory settings. All safety outputs in the OFF state.
	All devices and configurations	Sleep mode. All safety outputs in the OFF state. Press any pushbutton to obtain more information.

10 Maintenance

10.1 Safety

**DANGER**

Improper work on the product

A modified product may not offer the expected protection if it is integrated incorrectly.

- ▶ Apart from the procedures described in this document, do not repair, open, manipulate or otherwise modify the product.

10.2 Regular cleaning

Overview

Depending on the ambient conditions, the optics cover must be cleaned regularly and in the event of contamination. For example, static charges can cause dust particles to be attracted to the optics cover.

Important information**DANGER**

Hazard due to lack of effectiveness of the protective device

Persons and parts of the body to be protected may not be recognized in case of non-observance.

- ▶ Regularly check the degree of contamination on all components based on the application conditions.

**DANGER**

Hazard due to lack of effectiveness of the protective device

Persons and parts of the body to be protected may not be recognized in case of non-observance.

- ▶ Make sure that the optical properties of the optics cover are not changed by:
 - beading water, mist, frost, or ice formation. If necessary, remove any residues of this type or any other form of contamination and restart the safety laser scanner.
 - Damage. Replace damaged optics covers.
 - Substances containing oil or fat. Substances like this may impair the detection capability of the safety laser scanner. Therefore keep the optics cover free from substances containing oil or fat.

**DANGER**

Hazard due to unexpected starting of the machine

- ▶ Make sure that the dangerous state of the machine is and remains switched off during cleaning.
- ▶ Make sure that the safety laser scanner's outputs do not affect the machine during cleaning.

**NOTICE**

- ▶ Do not use aggressive or abrasive cleaning agents.
- ▶ Do not use chemical de-icing agents (e.g. de-icing spray, glycol).
- ▶ Recommendation: Use lens cleaner and lens cloths from SICK.

Procedure

Cleaning the optics cover

1. Remove dust from the optics cover using a soft, clean brush.
2. Moisten a clean, soft cloth with lens cleaner and use it to wipe the optics cover.
3. Check the effectiveness of the protective device, [see "Thorough check of the principal function of the protective device", page 58](#).

Cleaning the field of view

- ▶ Remove any objects or animals (e.g., insects) from the area in front of the optics cover, e.g., in the weather hood or other cladding.

Complementary information



NOTE

The display shows a contamination warning if the optics cover is contaminated and needs to be cleaned soon. If it is not cleaned and the contamination continues to increase, the safety laser scanner switches to the OFF state for safety reasons and the display shows a contamination error.

- ▶ Check the optics cover for damage.
- ▶ Clean the optics cover in a timely manner.

Further topics

- ["Spare parts", page 164](#)

10.3 Replacing the optics cover

Overview

If the optics cover is scratched or damaged, it must be replaced.

Your SICK subsidiary will replace the optics cover for you.

10.4 Replacing the safety laser scanner

If the safety laser scanner is damaged or defective, you must replace it.



DANGER

Hazard due to lack of effectiveness of the protective device

If an unsuitable configuration is saved in the system plug, it may cause the dangerous state to not end in time.

- ▶ After replacement, make sure the same system plug is used or the configuration is restored.
- ▶ Make sure that the safety laser scanner is aligned correctly after the replacement.



NOTICE

Enclosure rating IP65 only applies if the safety laser scanner is closed and the system plug is mounted.

- ▶ Mount the system plug and the cover plate.
- ▶ Close each M12 plug connector on the safety laser scanner using a male cable connector or a protective cap.
 - Tightening torque for plug connector: 0.4 Nm ... 0.6 Nm.
 - Tightening torque for protective caps: 0.6 Nm ... 0.7 Nm.
- ▶ When mounting the connecting cables, ensure the seals are intact and seated correctly.



NOTICE

If the system plug is mounted with excessive force, the contacts can break or bend.

- ▶ Plug in the system plug carefully.
- ▶ Do not force it.

Tool required:

- TX20 Torx wrench

10.4.1 Replacing the safety laser scanner without system plug

Overview



In many cases, you can reuse the existing bracket and the existing system plug. Detach the defective safety laser scanner from the bracket and the system plug. Then, mount the new safety laser scanner on the bracket and the system plug. When the new safety laser scanner is switched on for the first time, it reads the configuration from the system plug and can be used without having to be reconfigured.

Procedure

 
1. Make sure that the environment is clean and free of dust and moisture (high air humidity, fog, rain, hail, snow).
2. Unscrew screws in the system plug and remove the system plug from the defective safety laser scanner.
3. Unscrew the fixing screws and remove the defective safety laser scanner.
4. Mount the system plug on the new safety laser scanner, [see "Replacing the system plug", page 125](#).
5. Mount the new safety laser scanner, [see "Mounting", page 60](#).
6. Perform commissioning again, taking particular care to conduct all of the thorough checks described, [see "Commissioning", page 113](#).

Complementary information

In certain cases (in the event of dust, high air humidity), it may make sense not to disconnect the system plug and the safety laser scanner at first. In these cases, proceed as follows:

1. Disconnect the connecting cables to the system plug.
2. Unscrew screws from the bracket and remove the defective safety laser scanner from the bracket.
3. Move the safety laser scanner with the system plug to a clean location (e.g., office, maintenance areas).
4. Unscrew screws in the system plug and remove the system plug from the defective safety laser scanner.
5. See above for further steps.

10.4.2 Replacing the safety laser scanner completely



1. Disconnect the connecting cables the system plug.
2. Unscrew the fixing screws and remove the defective safety laser scanner.
3. Mount the new safety laser scanner, [see "Mounting", page 60](#).
4. Reconnect the connecting cables to the system plug.
5. Configure the safety laser scanner, [see "Configuration", page 67](#).
6. Perform commissioning again, taking particular care to conduct all of the thorough checks described, [see "Commissioning", page 113](#).

10.5 Replacing the system plug

If the system plug is damaged or defective, you must replace it.



NOTICE

Enclosure rating IP65 only applies if the safety laser scanner is closed and the system plug is mounted.

- ▶ Mount the system plug and the cover plate.
- ▶ Close each M12 plug connector on the safety laser scanner using a male cable connector or a protective cap.
 - Tightening torque for plug connector: 0.4 Nm ... 0.6 Nm.
 - Tightening torque for protective caps: 0.6 Nm ... 0.7 Nm.
- ▶ When mounting the connecting cables, ensure the seals are intact and seated correctly.



NOTICE

If the system plug is mounted with excessive force, the contacts can break or bend.

- ▶ Plug in the system plug carefully.
- ▶ Do not force it.

Tool required:

- TX20 Torx wrench

Procedure



1. Make sure that the environment is clean and free of dust and moisture (high air humidity, fog, rain, hail, snow).
2. Disconnect the from connecting cables the system plug.
3. If necessary: move the safety laser scanner to a clean location.
4. Unscrew the screws in the defective system plug and remove the system plug from the safety laser scanner.

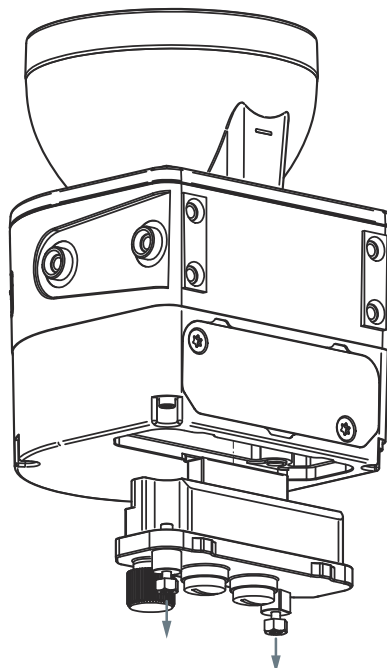


Figure 67: Replacing the system plug

5. Carefully insert the new system plug into the safety laser scanner.
6. Screw in the system plug using the captive screws. Tightening torque: 2.25 Nm ... 2.75 Nm.
7. Reconnect the connecting cables to the system plug.
8. Configure the safety laser scanner, [see "Configuration", page 67](#).
9. Perform commissioning again, taking particular care to conduct all of the thorough checks described, [see "Commissioning", page 113](#).

Complementary information

If a system plug has already been used on a device that has a different interface for integrating it into the controller, this system plug can no longer be used on a PROFINET device.

10.6 Regular thorough check

The thorough check is intended to ensure that the safety functions are fulfilling their planned purpose and whether persons are being adequately protected.

- Carry out the checks specified in the test plan of the manufacturer of the machine and the operating entity.

11 Troubleshooting

11.1 Safety



DANGER

Hazard due to lack of effectiveness of the protective device

Persons and parts of the body to be protected may not be recognized in case of non-observance.

- ▶ Immediately shut the machine down if the behavior of the machine cannot be clearly identified.
- ▶ Immediately put the machine out of operation if you cannot clearly identify or allocate the error and if you cannot safely remedy the error.
- ▶ Secure the machine so that it cannot switch on unintentionally.



DANGER

Hazard due to unexpected starting of the machine

- ▶ When any work is taking place, use the protective device to secure the machine or to ensure that the machine is not switched on unintentionally.



NOTE

Additional information on troubleshooting is available from your SICK subsidiary.

11.2 Detailed diagnostics using the display

Overview

You can open the menu using the pushbuttons.

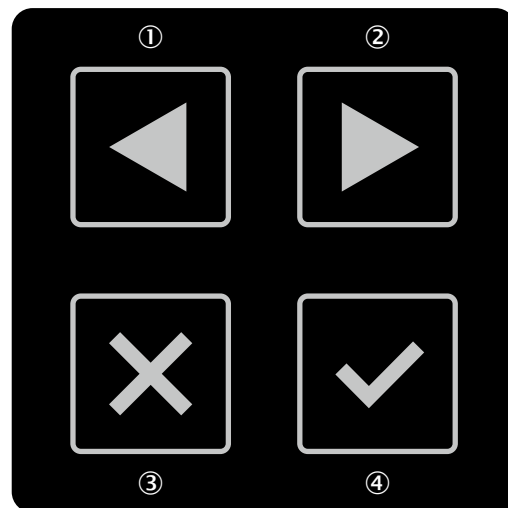


Figure 68: Pushbuttons on the device

- ① Left arrow button
- ② Right arrow button
- ③ Back pushbutton
- ④ OK pushbutton

If you do not press any pushbuttons for a time, the display changes back to the status display.

Menu

The menu provides access to the following areas:

- **Device info**
- **Diagnostics**
- **Device restart**
- **Settings**

Procedure

- ▶ Press the OK pushbutton ④ twice in succession to call up the menu.
- ▶ Use the arrow buttons ①, ② to change to the desired menu item.
- ▶ Confirm the desired menu item using the OK pushbutton ④.
- ▶ Use the same pushbuttons to navigate through the submenus.
- ▶ Press the Back pushbutton ③ to return to the higher-level menu item.
- ▶ Press the Back pushbutton ③ multiple times to return to the status display.
- ▶ Do not press any pushbutton for some time so that the display returns to the status display.

Device info

You will find information about the following topics in the Device info area:

- **Hardware:** For example type code, part numbers, serial numbers, firmware versions, functional scope of device
- **Configuration:** For example device name, application name, checksum, date of last configuration, functional scope of configuration
- **Service interfaces:** Information on whether access to individual interfaces and services is activated or deactivated
- **Fieldbus:** For example MAC address, IP address, subnet
- **Data output:** For example status, destination IP address
- **I&M Data**

The **Functionality of the device** and **Functionality of the configuration** show whether a configuration is compatible with the firmware version of a device. This can be important when exchanging a device, for example.

Configuration and firmware version of a device are compatible if the following conditions are met:

- The 1st place of both numbers must be identical
- The 2nd place for the device must be at least as large as that for the configuration
- The 3rd place does not have an effect on the compatibility

Diagnostics

Check whether the safety laser scanner is being dazzled by an external light source in the scan plane, e.g., sun, halogen light, infrared light source.

- **Intrusions:** Position and time of the last 10 objects in a protective field that have led to a safety output switching to the OFF state.
- **Messages:** Error code and error type of the last 10 error messages.
- **Service:** Currently measured contamination of the optics cover, operating hours, number of power-up processes.
- **Profinet Alarms**

Device restart

You have the following options in the Device restart area:

- Restart the safety laser scanner.

Settings

You have the following options in the Settings area:

- Set the display brightness and contrast.

Complementary information

The display language is set using Safety Designer during configuration. The display language and the configuration cannot be changed using the pushbuttons on the display.

11.3 Error indication on the display

Overview

If there is an error, the display shows a warning symbol, a type of error and an error code on a red flashing background.

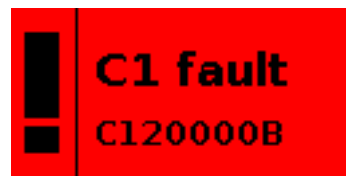


Figure 69: Error display

- The two-character error type will help you during troubleshooting.
- The eight-character error code in the bottom line helps SICK support during the detailed error analysis.
- By pressing any pushbutton, you will obtain more information about the error and for troubleshooting. You can use the arrow buttons to change to further pages with additional information.
- You will find detailed information in Safety Designer's message history about the individual errors and information about events not shown by the display.

Error indication on the display

Table 30: Error types

Error type	Brief description	Cause	Troubleshooting
C1	Faulty configuration	The configuration is faulty.	► Reconfigure the device.
C2	Incompatible configuration	The configuration in the system plug does not match the device's functionality.	► Check device variant. ► Replace or reconfigure the device.
C3	Incompatible firmware	The configuration in the system plug does not match the device's firmware version.	► Check the firmware version of the device. ► Replace or reconfigure the device.
E1	Error in the safety laser scanner	The safety laser scanner has an internal error.	► Perform a device restart using the display or Safety Designer or interrupt the voltage supply for at least two seconds. ► Replace the safety laser scanner and send it to the manufacturer for repair.

Error type	Brief description	Cause	Troubleshooting
E2	Error in the safety laser scanner	The safety laser scanner has an internal error.	▶ Perform a device restart using the display or Safety Designer or interrupt the voltage supply for at least two seconds. ▶ Replace the safety laser scanner and send it to the manufacturer for repair.
E3	Error in the system plug	The system plug has an internal error.	▶ Perform a device restart using the display or Safety Designer or interrupt the voltage supply for at least two seconds. ▶ Replace the system plug.
E4	Incompatible system plug	The system plug is unsuitable for the safety laser scanner.	▶ Check part number or type code. ▶ Replace the system plug.
E5	Dazzle error	Strong external light source, e.g., sun, halogen headlamps, infrared light source, stroboscope.	▶ Remove or cover the light source. ▶ Perform a device restart using the display or Safety Designer or interrupt the voltage supply for at least two seconds.
L8	Error in the reset input	An invalid signal is applied at a reset input. The reset signal is applied for too long.	▶ Check the reset pushbutton, the wiring, and any other components affected.
M1	Incompatible configuration of the data output	The data output is configured in a way that the device does not support (e.g., invalid start angle).	▶ Reconfigure the data output.
M2	Data output: Data packets lost	The data output could not transmit all data packets (e.g., buffer memory full).	▶ Configure the data output so that less data is transmitted.
M3	Configuration not verified	The configuration is not verified.	▶ Verify the configuration.
N2	Incorrect switching sequence	The configured switching sequence was interrupted by the new monitoring case.	▶ Check the machine's work process. ▶ Change the configured switching sequence monitoring.
N3	Invalid input signal	The input signal for switching between monitoring cases received via the network is invalid. The invalid signal is applied for longer than 1 s.	▶ Check the control over the network.
N4	Incorrect activation of the control inputs via the network	The input signal for activating switching between monitoring cases received via the network is invalid. The invalid signal is applied for longer than 1 s.	▶ Check the control over the network.
N5	Invalid input signal	The input signal for switching between monitoring cases received via the network is invalid. The invalid signal is applied for longer than 1 s.	▶ Check the control over the network.
N6	Invalid monitoring case number	The monitoring case number received via the network does not match the configuration of the device. The incorrect number is applied for longer than 1 s.	▶ Check the configuration with the Safety Designer. ▶ Check the control over the network.
R1	Connection errors	The data connection between the control and device is interrupted.	▶ Check the connection between the device and control. ▶ Adjust the data transmission rate in the control if necessary.

Error type	Brief description	Cause	Troubleshooting
T1	Temperature error	The operating temperature of the safety laser scanner has exceeded or fallen below the permitted range.	► Check whether the safety laser scanner is being operated in accordance with the permissible ambient conditions.
W1	Warnings exceed tolerance time	The combination of multiple warnings has resulted in an error. The tolerance time of 1 s has been exceeded as there are multiple warnings.	► Use Safety Designer to check what warnings exist.

11.4 Diagnostics using Safety Designer

Diagnostic tools

The following diagnostics tools are available in the device window:

- Data recorder
- Event history
- Message history
- Contamination measurement
- PROFINET Diagnosis
- PROFINET Status

Interfaces

The following interfaces are suitable for diagnostics:

- USB 2.0 mini-B (female connector) ⁹⁾
- Ethernet

⁹⁾ The USB connection may only be used temporarily and only for configuration and diagnostics.

11.4.1 Data recorder

Overview

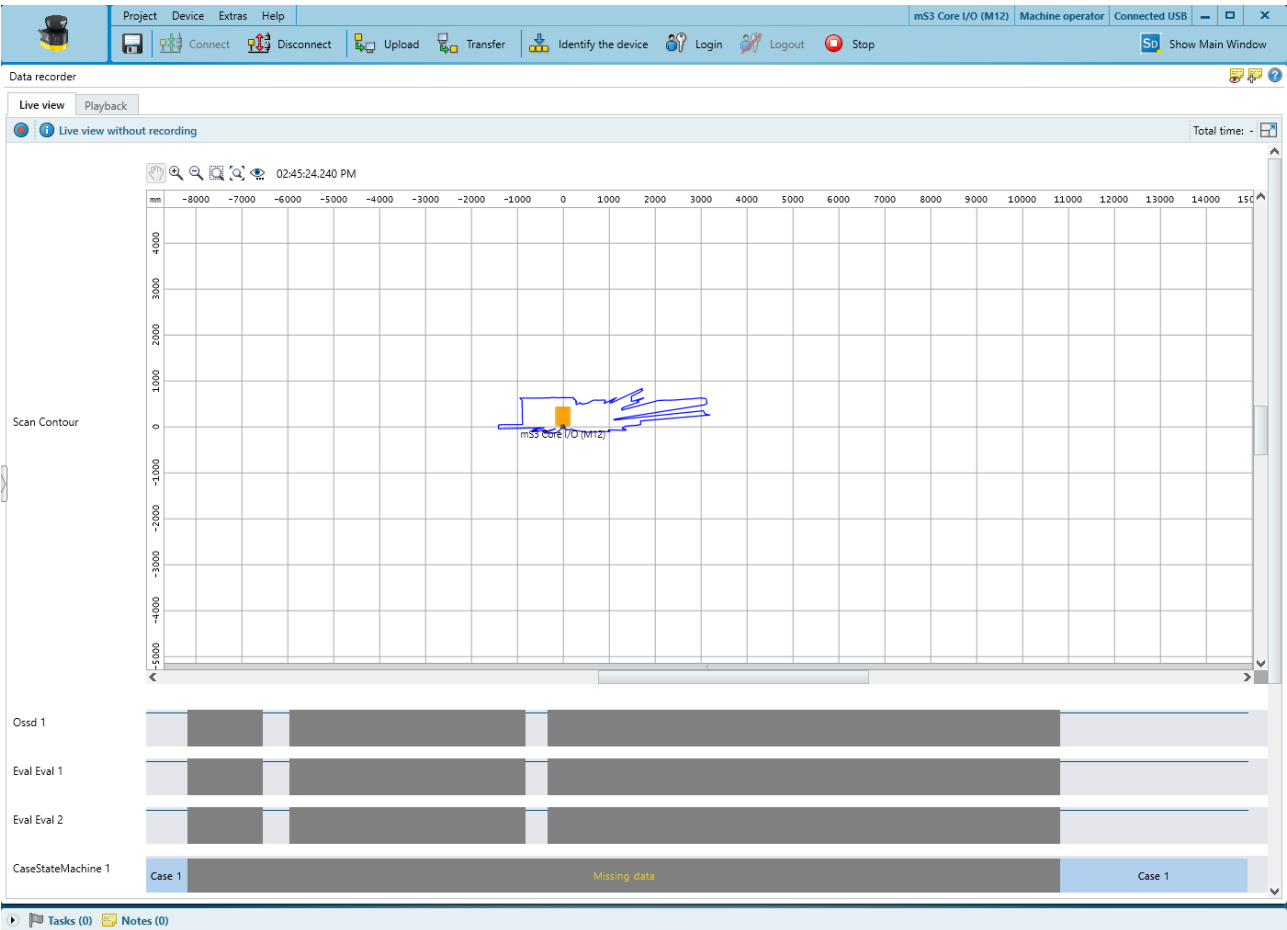


Figure 70: Data recorder

You can use the data recorder to record the device's signals. Depending on the interface and the load on the interface, the measurement data may not be transmitted and shown for every scan cycle.

The data is saved in a data recorder diagnostics file.

You can play the data recorder diagnostic file in the data recorder.

You can adjust the settings in the Safety Designer main window.

Table 31: Data recorder

	Start recording
	Stop recording
	Selecting the displayed data and setting the display sequence
	Full screen mode

Typical applications

- Check spatial geometry
- Check where a person can stay or when a person is detected

- Check input information about the current monitoring case
- Check why safety outputs have switched

Prerequisites

- Existing connection between Safety Designer and device
- Configuration in the project and configuration in the device are synchronized

Procedure

1. Import configuration from the device.
2. Take an image.

Complementary information

Reflectors are displayed in turquoise if they are detected at a distance of more than approx. 0.5 m.

11.4.2 Event history

Overview

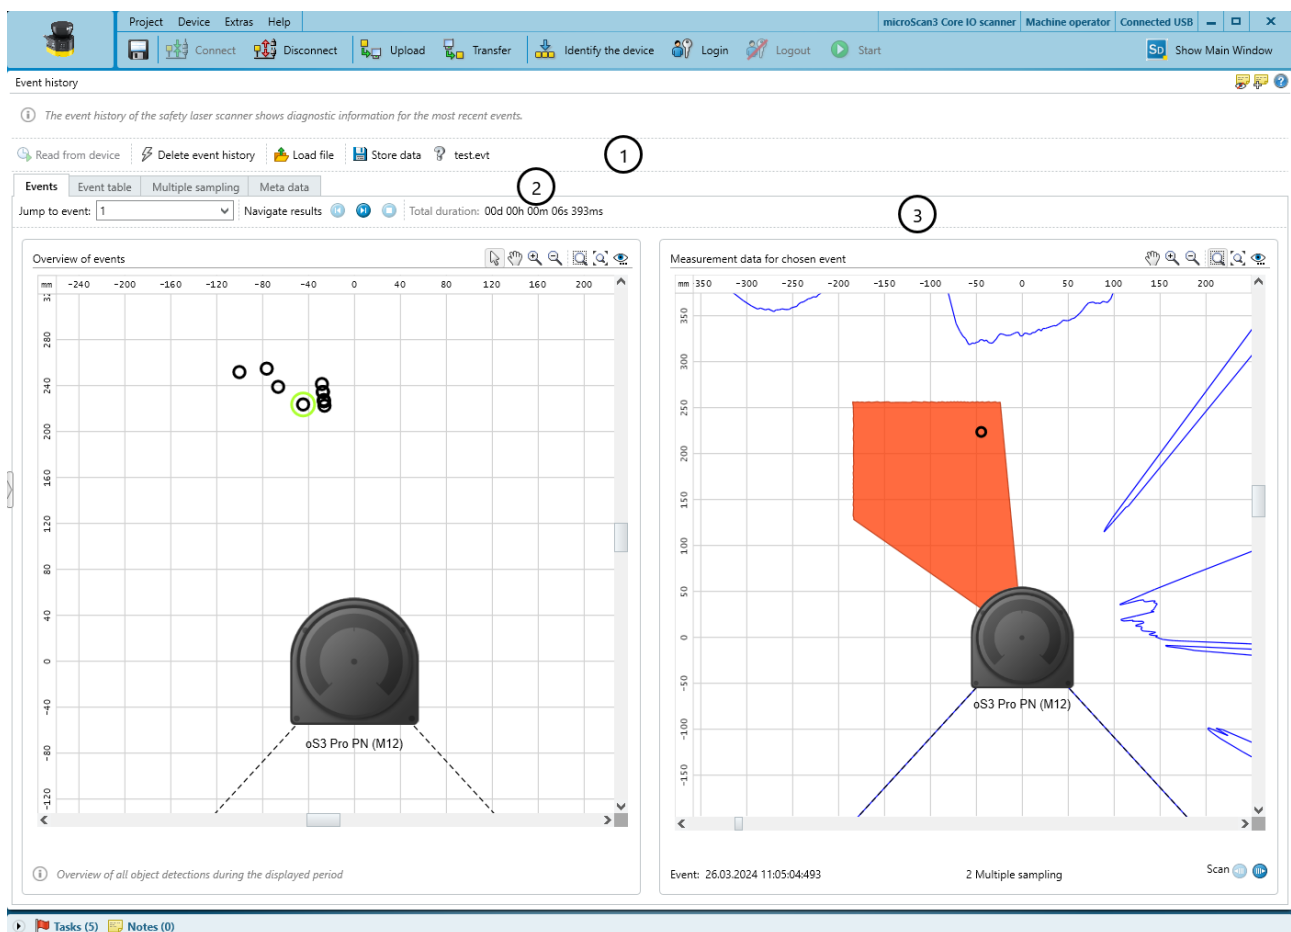


Figure 71: Event history

- ① Data source
- ② Available views
- ③ Navigation

The safety laser scanner stores data on important events. The event history displays information about the most recently stored events.

Event memory in the safety laser scanner

The safety laser scanner stores data on the following events:

- Safety output switches to the OFF state.
- An object is detected in a safety-related field.

For each object detection where a safety output switches to the OFF state, the safety laser scanner stores the data from 10 scans. When the internal memory of the safety laser scanner is full, the scan data of the oldest object detection is overwritten to store a new object detection. The position and time of the object detection are retained.

The internal memory of the safety laser scanner is cleared during a restart and when transferring a configuration.

Data source

- **Read from device:** Only available when a device is connected. The data stored in the device will be read.
- **Load file:** You can open a file that stores events that were previously read from a device.
- **Store data:** You can save the events read from a device to a file for later analysis.

Events

The **Events** view shows a graphical overview of the object detections in safety-related fields that have led to a safety output switching to the OFF state.

- **Navigation:** You can select the event whose measurement data is displayed in the right area.
- **Overview of events:** The position of each recorded object detection relative to the safety laser scanner is displayed. If you hold the mouse pointer on a position, the set multiple sampling is displayed. When you click on a position, the corresponding measurement data is displayed in the right-hand area.
- **Measurement data for the selected event:** The measurement data of the selected object detection is displayed. If multiple scans are stored for the selected object detection, you can view the individual scans one by one by clicking on the icons next to **Scan**.

Event table

The event table shows detailed information about the events which have led to a safety output switching to the OFF state.

Based on the measurement data, a probable cause is assigned to each event:

- **Object:** An object was probably detected in the protective field.
- **Contamination:** The shutdown was triggered by a contamination of the optics cover in the area of the protective field. The displayed distance relates to an object that was detected despite the contamination. This value is not reliable due to the contamination.
- **Dazzle:** The shutdown was triggered by an external light source in the scan plane in the area of the protective field, e.g., sun, halogen light, infrared light source, stroboscope.
- **Close to field edge or particle in field:** Object detection in the protective field was probably triggered at the edge or by particles.

Multiple sampling

The **Multiple sampling** view shows how often object detections with different durations occurred. All object detections in safety-related fields are taken into account. Therefore, the number of entries in this view may deviate from the other views.

The duration is specified as the number of consecutive scans in which an object is detected in the field. For each duration, the diagram shows the corresponding number of object detections.

Meta data

The **Meta data** view shows additional information.

You can add to a comment. When you save the event history, the comment is saved as well.

11.4.3 Message history

Overview

The screenshot shows the 'Message history' window. The table lists messages with the following data:

Type	Occurrence	End	Message	Acknowledged
Information	4/15/2024 2:43:51 PM	-	Monitoring case switching	
Information	4/15/2024 2:43:49 PM	4/15/2024 2:43:50 PM	Device started in test mode	
Information	4/15/2024 2:43:06 PM	4/15/2024 2:43:06 PM	Device started in test mode	
Information	4/15/2024 2:17:23 PM	-	Monitoring case switching	
Information	4/15/2024 2:17:21 PM	4/15/2024 2:17:21 PM	Device started in test mode	
Warning	4/15/2024 2:16:40 PM	-		
Information	4/15/2024 2:16:40 PM	4/15/2024 2:16:43 PM	Device started in test mode	
Error	4/15/2024 2:10:47 PM	-	C1 - Faulty configuration	

The bottom pane shows details for the selected message (Monitoring case switching):

Code	0x43120000
Local time occurrence	25530/0 days 0 h 33 min 6 s 017 ms
Reason	Monitoring case switching from: 0 to: 1
Solution:	No corrective actions necessary.
Info 1	1
New monitoring case: 1	1
Previous monitoring case: 0	0
The velocity usage of the new case: - 0: Velocity not used - 1: Velocity used for case switching - 2: Velocity used for speed monitoring	0

The settings pane on the right shows the following filters:

- Messages:
 - ☒ Warning
 - ☒ Error
 - ☒ Info
 - ☒ Event
- Time:
 - ☒ Outstanding
 - ☒ Selective
 - ☒ End
- Acknowledgment:
 - ☒ Acknowledgment
 - ☒ Unknown

Buttons: 'Reset all filters' and 'Show Main Window'.

Figure 72: Message history

- ① Message history
- ② Display filter
- ③ Details about the selected message

Events such as errors, warnings and information are stored in the message history.

By right-clicking on the table header, you can select the columns displayed in the message history.

Safety Designer shows details about the events in the bottom part of the window, ways to solve them are also shown.

Table 32: Message history

	Start automatic update
	Stop automatic update
	Mark all entries as viewed
	Delete all entries Deleted entries are hidden for the current user group and for user groups with lower permissions. They are still visible to user groups with higher permissions.
	Print message history
	Save message history as a PDF
	Save message history as CSV

11.4.4 Contamination measurement

Safety Designer displays information on the measured contamination of the optics cover.

A contamination of 100% means that the safety laser scanner is reporting a contamination error and is switching all safety outputs to the OFF state.

11.4.5 PROFINET diagnostics

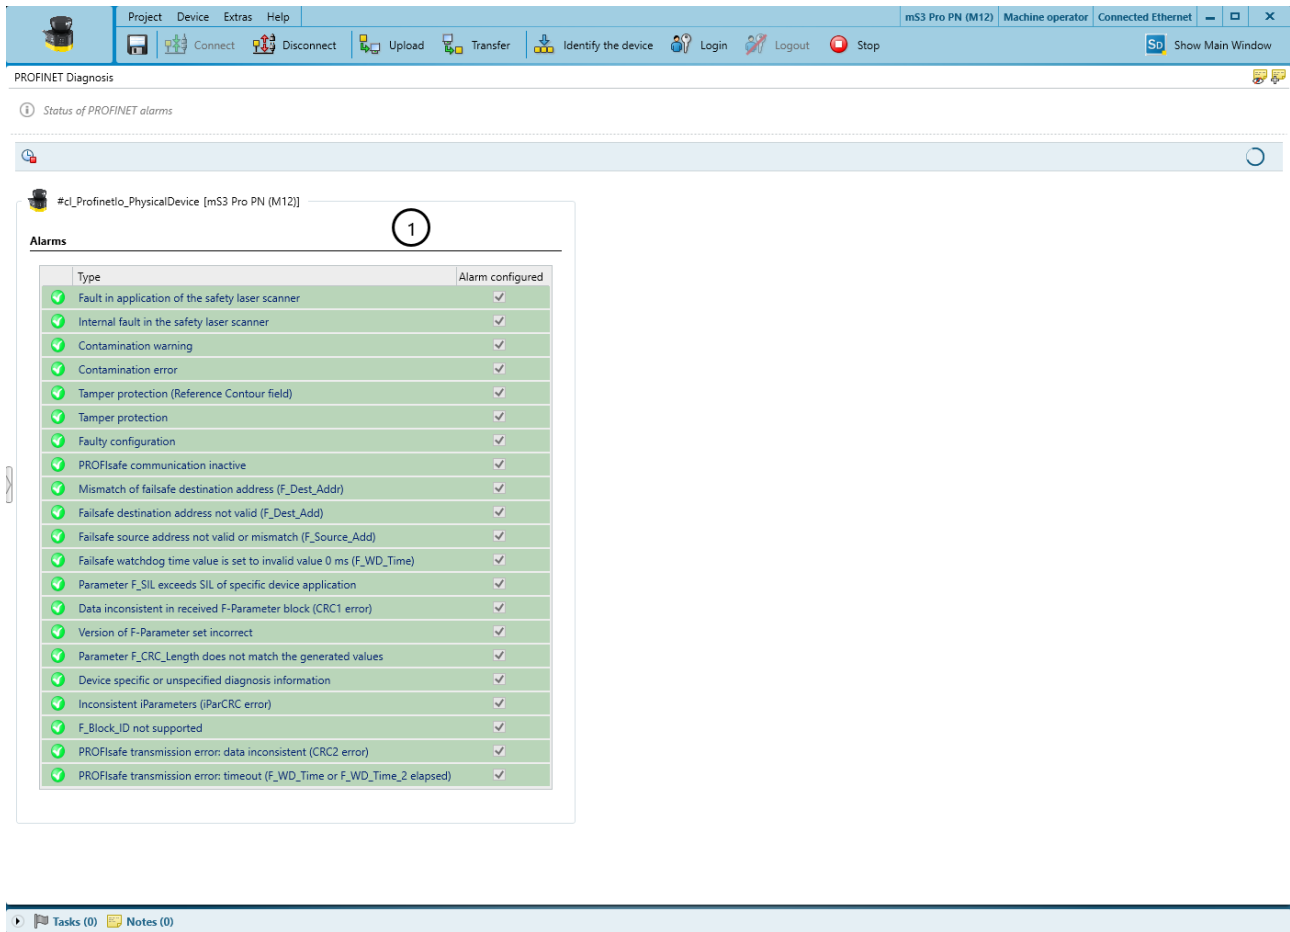


Figure 73: PROFINET diagnostics

① Table of all available alarms

When you click on the clock icon, the Safety Designer displays the status of all PROFINET alarms from the safety laser scanner. When the alarm is sent to the controller (see "PROFINET alarms", page 81), a check mark is displayed in the **Alarm configured** column.

The alarm colors have the following meanings:

- Red: Alarm was triggered
- Green: No alarm

11.4.6 PROFINET Status

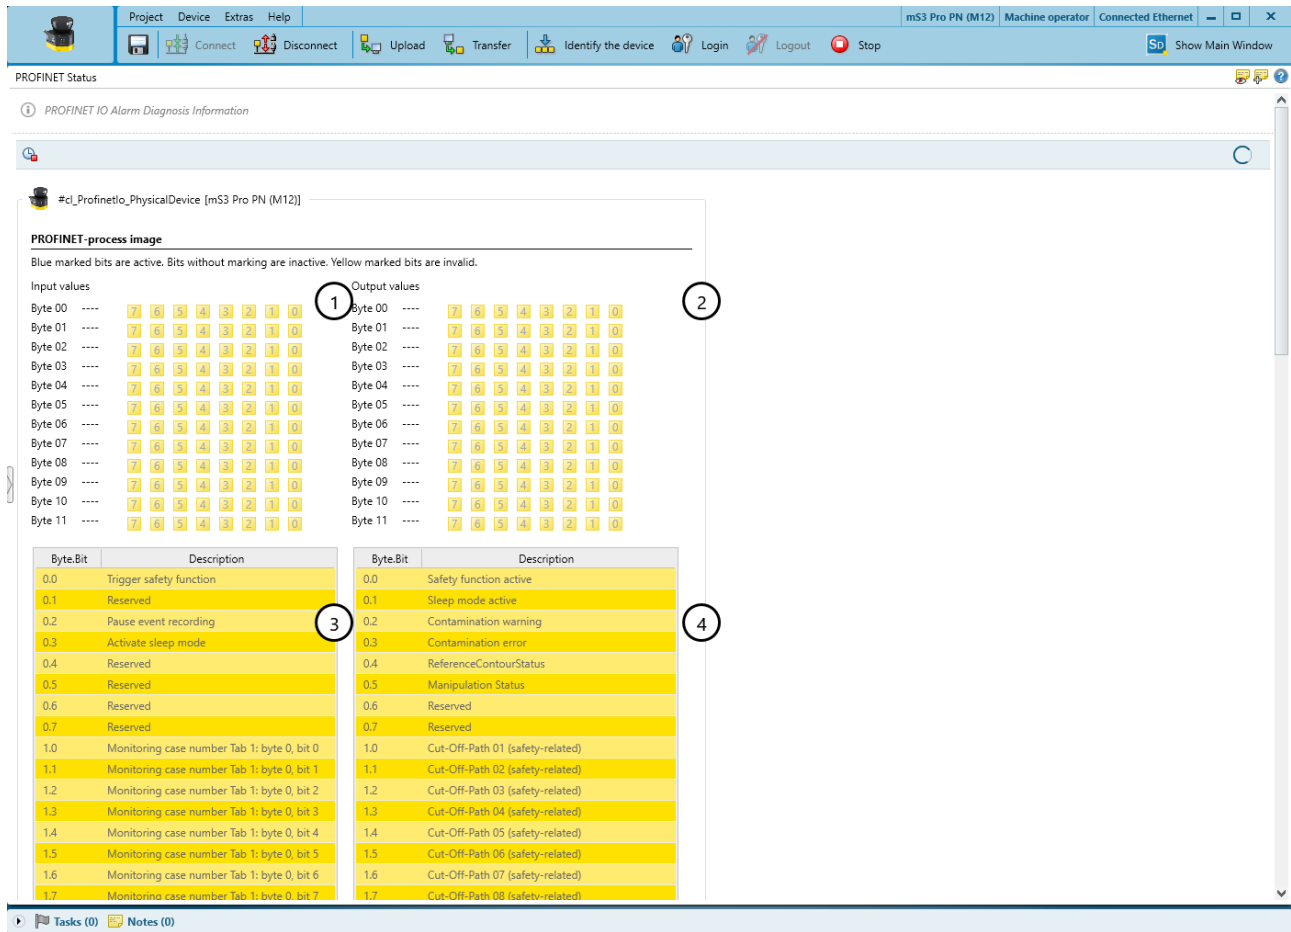


Figure 74: PROFINET status

- ① Data at the input of the safety laser scanner (controller output), graphical
- ② Data at the output of the safety laser scanner (controller input), graphical
- ③ Data at the input of the safety laser scanner (controller output), tabular
- ④ Data at the output of the safety laser scanner (controller input), in tabular form

When you click on the clock icon, Safety Designer displays the input data (from the perspective of the safety laser scanner) and the output data (from the perspective of the safety laser scanner).

In the upper part, the data is divided into bits and bytes.

In the lower part, the bits are displayed in tabular form with a description.

The colors have the following meanings:

- Gray: Bit is not active
- Blue: Bit is active
- Yellow: bit is invalid

11.5 Diagnostics using the control

The control allows you to access the contents of the process map, I&M data and alarms, see "Available data", page 54.

12 Decommissioning

12.1 Disposal

Procedure

- Always dispose of unusable devices in accordance with national waste disposal regulations.



Complementary information

SICK will be glad to help you dispose of these devices on request.

13 Technical data

13.1 Variant overview

Ordering information: see "Ordering information", page 163.

Table 33: Devices and type codes

- Performance package - Integration into the controller	Protective field range	Device without system plug	System plug	Position of the system plug when delivered	Device with system plug
- Pro - PROFINET - M12, 4-pin, D-coded	≤ 4.0 m	MICS3-CBUZ40PZ1	MICSX-RANNZZZZ1	Bottom	MICS3-CBUZ40PZ1P01

Table 34: airWiper Kit

Part	Protective field range	Device without system plug	System plug	Position of the system plug when delivered	Device with system plug
airWiper Kit outdoorScan3 Pro – PROFINET	≤ 4.0 m	1128912	2102812	Bottom	1128913

13.2 Version numbers and functional scope

Functional scope

Older devices might not support the full functional scope of the latest Safety Designer.

To identify the different levels of the functionality, we use a 3-digit version number. The version number is marked with the letter V on the device.

The functional scope of the device can be read at the following locations:

- Label on the device
- Display, entry in **Device info** menu at **Hardware**
- Safety Designer, **Overview** dialog (only with connected device)
- Safety Designer, report

Table 35: outdoorScan3 Pro – PROFINET functional scope

Version number	Amendments and new functions	GSDML version of the associated GSDML file
V 1.0.0	First released version	V2.41

Revision

The different revision statuses of the devices are identified by “Rev” followed by a three-digit version number. New devices have a label which indicates the revision status.

Table 36: Revision

Version number	Amendments and new functions
Rev 1.3.0	First released version
Rev 1.4.0	Internal change to components, no change in function
Rev 1.4.1	Improved measurement accuracy
Rev 1.5.0	Internal change to components, no change in function
Rev 1.6.0	Internal change to components, no change in function
Rev 1.7.0	Improved measurement accuracy

13.3 Data sheet

13.3.1 outdoorScan3 – PROFINET

Features

Table 37: Features

	outdoorScan3 Pro – PROFINET
Protective field range	
Devices with a max. protective field range of 4.0 m	≤ 4.0 m, details: see "Sensing range", page 146
Warning field range	
Devices with a max. protective field range of 4.0 m	≤ 40 m
Fields	≤ 128
Simultaneously monitored fields	
Devices with a max. protective field range of 4.0 m	≤ 8
Simultaneous cut-off paths	
Devices with a max. protective field range of 4.0 m	≤ 8
Field sets	≤ 128
Monitoring cases	≤ 128
Scanning angle	275° (-47.5° ... 227.5°)
Protective field resolution	50 mm, 70 mm
Response time	
Devices with a max. protective field range of 4.0 m	≥ 115 ms, details: see "Response times", page 145
Scan cycle time	
Devices with a max. protective field range of 4.0 m	40 ms
Generally necessary protective field supplement (TZ = tolerance zone of the safety laser scanner)	
Devices with a max. protective field range of 4.0 m	65 mm
Additional supplement Z_R for reflection-based measurement errors	350 mm
Distance of mirror rotational axis (zero point of x and y axis) to mounting surface on rear side of device	56 mm
Distance between center point of scan plane and top edge of the housing	40,1 mm
Multiple sampling	2 ... 16 ¹⁾

¹⁾ Can be adjusted collectively for all fields or individually for each field.

Safety-related parameters

Table 38: Safety-related parameters

	outdoorScan3 Pro – PROFINET
Type (IEC 61496)	Type 3
Safety integrity level (IEC 61508)	SIL 2
Safety integrity level (IEC 62061)	SIL 2
Category (ISO 13849)	Category 3
Performance level (ISO 13849)	PL d
SRS/SRSS performance class (IEC/TS 62998)	Performance class D
PFH (average frequency of a dangerous failure)	$8 \times 10^{-8} \text{ h}^{-1}$
T_M (mission time) (ISO 13849)	20 years
Safe status when an error occurs	The safety outputs via the network are logic 0.

Interfaces

Table 39: Interfaces

	outdoorScan3 Pro – PROFINET
Safety outputs via network	
Quantity	
Devices with a max. protective field range of 4.0 m	8
Duration of OFF state	$\geq 80 \text{ ms}$
Automated restart after	2 s to 60 s (can be configured)
Voltage supply	
Connection type	Male connector, M12, 4-pin, A-coded
Length of cable (power supply unit tolerance $\pm 5\%$)	
Length of cable with 0.25 mm ² conductor cross section	$\leq 100 \text{ m}$
USB	
Connection type	USB 2.0 mini-B (female connector)
Transmission rate	$\leq 12 \text{ Mbit/s}$
Length of cable	$\leq 5 \text{ m}$
PROFINET	
Connection type	M12 female connector, 4-pin, D-coded
Port properties	• 100BASE-TX • Auto-negotiation • Auto-crossover (MDIX) • Auto-polarity
Switch properties	• 2 port real-time switch compliant with IEEE 802 • Conformance Class C
Transmission rate	$\leq 100 \text{ Mbit/s}$

	outdoorScan3 Pro – PROFINET
Length of cable	≤ 100 m
Cycle time	1 ms, 2 ms, 4 ms, 8 ms, 16 ms ...
Services ¹⁾	• PROFINET PROFIsafe • PROFIenergy • F_iPar_CRC • Acyclic read-/write services for communication via TCI • SNTP (client and server)
Network management	• SNMP • MIB-2 • LLDP in accordance with IEEE 802.1AB • MRP client support
Conformance	Conformance Class C
Net load	Net load class III in acc. with security level 1 test
Supported protocol versions	• PROFINET specification V2.3 • PROFIsafe profile in accordance with specification V2.4 • PROFIsafe profile in accordance with specification V2.6.1
Diagnostics	• I&M data sets 0 ... 5 • PROFINET alarms

¹⁾ The SNTP server provides the time since the device was switched on.

Electrical data

Table 40: Electrical data

	outdoorScan3 Pro – PROFINET
Operating data	
Protection class	III (IEC 61140)
Supply voltage V_S	24 V DC (16.8 V to 30 V DC) (SELV/PELV) ¹⁾
Residual ripple	± 5% ²⁾
Start-up current at 24 V	≤ 3 A
Current consumption at 24 V	
Operation	≤ 0.45 A (type 0.3 A)
Sleep mode	Type 0.29 A
Power consumption	
Operation	≤ 11 W (type 7.2 W)
Sleep mode	Type 7 W
Power-up delay	≤ 45 s (type 20 s)

¹⁾ The supply voltage must be within the specified range at all times. It must not fall below the lower limit, even for a brief period.

The power supply unit must be able to bridge a brief power failure of 20 ms as specified in IEC 60204-1. Suitable power supply units are available as accessories from SICK.

²⁾ The voltage level must not fall below the specified minimum voltage.

Mechanical data

Table 41: Mechanical data

	outdoorScan3 Pro – PROFINET
Dimensions (without system plug, W × H × D)	114.6 mm × 150.7 mm × 114.6 mm
Weight (including system plug)	1.45 kg

	outdoorScan3 Pro – PROFINET
Housing material	Aluminum
Housing color	RAL 9005 (black) and RAL 2004 (pure orange)
Optics cover material	Polycarbonate
Optics cover surface	Outside with scratch-resistant coating

Ambient data

Table 42: Ambient data

	outdoorScan3 Pro – PROFINET
Enclosure rating ¹⁾	IP65 (IEC 60529)
Housing type ²⁾	3R (UL 50E)
Ambient light immunity	
Halogen light ³⁾	≤ 12,000 lx (IEC 61496-3)
Sunlight ³⁾	≤ 40,000 lx (IEC 61496-3)
Ambient operating temperature	–25 °C ... 50 °C ⁴⁾
Storage temperature	–25 °C ... 70 °C
Air humidity	≤ 95%, non-condensing ⁵⁾
Height above sea level during operation	≤ 2,300 m
Vibration resistance ⁶⁾	
Standards	• IEC 60068-2-6 • IEC 60068-2-64 • IEC 60721-3-5 • IEC TR 60721-4-3 • IEC 61496-1 • IEC 61496-3
Class	• 5M1 (IEC 60721-3-5) • 3M4 (IEC TR 60721-4-3)
Sinusoidal vibrations	• 50 m/s², 0.35 mm, 10 Hz ... 150 Hz • 5 m/s², 1.5 mm, 5 Hz ... 200 Hz • 10 m/s², 3.5 mm, 5 Hz ... 150 Hz
Noise vibrations	• 0.5 m²/s³, 5 Hz ... 200 Hz • 0.1 m²/s³, 200 Hz ... 500 Hz
Shock resistance ⁶⁾	
Standards	• IEC 60068-2-27 • IEC 60721-3-5 • IEC TR 60721-4-3 • IEC 61496-1 • IEC 61496-3
Class	• 5M1 (IEC 60721-3-5) • 3M4 (IEC TR 60721-4-3)
Single shock	50 m/s ² , 11 ms
Continuous shock	• 100 m/s², 16 ms • 150 m/s², 6 ms

	outdoorScan3 Pro – PROFINET
EMC	In accordance with IEC 61496-1, IEC 61000-6-2, and IEC 61000-6-4

- 1) The specified enclosure rating is only valid if the safety laser scanner is closed, the system plug and the cover plate are mounted, and all of the M12 plug connectors of the safety laser scanner have been closed using a male cable connector suitable for the enclosure rating or using a protective cap.
- 2) In conjunction with the weather protection hood (part no. 2103050).
- 3) Values outside specification can prematurely age the device. Values outside specification can affect the safety laser scanner. This may have a negative impact on the availability of the machine. That is to say, the safety laser scanner switches off the machine even though there are no people in the protective field.
- 4) The temperature of the device must be at least $-10\text{ }^{\circ}\text{C}$ when switched on. At lower temperatures the device must be warmed up before it is switched on.
- 5) IEC 61496-1, no. 4.3.1 and no. 5.4.2, IEC 61496-3, no. 4.3.1 and no. 5.4.2. Condensation has an influence on normal operation.
- 6) For direct mounting.

Miscellaneous data

Table 43: Miscellaneous data

	outdoorScan3 Pro – PROFINET
Wavelength	845 nm
Detectable remission	1.8% ... several 1000%
Maximum uniform contamination of the optics cover without reducing the detection capability ¹⁾	30%
Area where detection capability is restricted	$\leq 50\text{ mm}^2$ ²⁾
Receiving angle	0.75°
Pulse duration	Type 4 ns
Average output power	9.2 mW
Laser class	1 ³⁾

- 1) In the event of heavy contamination, the safety laser scanner displays a contamination error and switches all safety outputs to the OFF state. This status is displayed in Safety Designer as 100% contamination.
- 2) In close proximity (50 mm-wide area in front of the optics cover), the detection capability of the safety laser scanner may be restricted. If required, this area must be secured using an undercut or frame, for example.
- 3) This laser product has laser class 1 according to IEC 60825-1:2014. In some cases, evaluation is required according to the older IEC 60825-1:2007 standard, e.g. by employers in the EU according to Directive 2006/25 / EC. According to the older IEC 60825-1:2007 standard, laser class 1M must be used as the basis.

13.4 Response times

The protective device's response time is the maximum time between the occurrence of the event leading to the sensor's response and supply of the switch-off signal to the protective device's interface (for example OFF state of the OSSD pair).

**DANGER**

Hazard due to lack of effectiveness of the protective device

In the case of non-compliance, it is possible that the dangerous state of the machine may not be stopped or not stopped in a timely manner.

In addition to the protective device's response time, further signal transmission and processing also influence the time up until the end of the dangerous state. These include the network cycle time, a control's processing time and the response times of downstream contactors, for example.

- Take the time for further signal transmission and processing into account.

Response time

The safety laser scanner's response time depends on the following parameters:

- Scan cycle time
- Set multiple sampling

You can calculate the response time using the following formula:

$$t_R = t_S \times n + t_0$$

The following rules apply:

- t_R = response time
- t_S = scan cycle time
 - Setting "40 ms": $t_S = 40$ ms
- n = set multiple sampling
Preset to $n = 2$.

Multiple sampling can be changed for the safety laser scanner or for each individual field ($2 \leq n \leq 16$).

- t_0 = time for processing and output
Dependent on output used:
 - PROFINET: $t_0 = 35$ ms

Table 44: Response time of an individual safety laser scanner

Scan cycle time (t_S)	Output (t_0)	t_R = response time for multiple sampling n
40 ms	PROFINET	$n \times 40$ ms + 35 ms

13.5 Sensing range

Protective field range

The effective protective field range depends on the object resolution that has been set.

Table 45: Protective field range

Resolution	Protective field range
70 mm	4.00 m
50 mm	3.50 m

Range for warning fields

For non-safety applications (warning fields), the safety laser scanner has a larger scanning range than the maximum protective field range. The requirements for size and remission factor of objects to be detected are illustrated in the following graphs as a function of the desired scanning range.

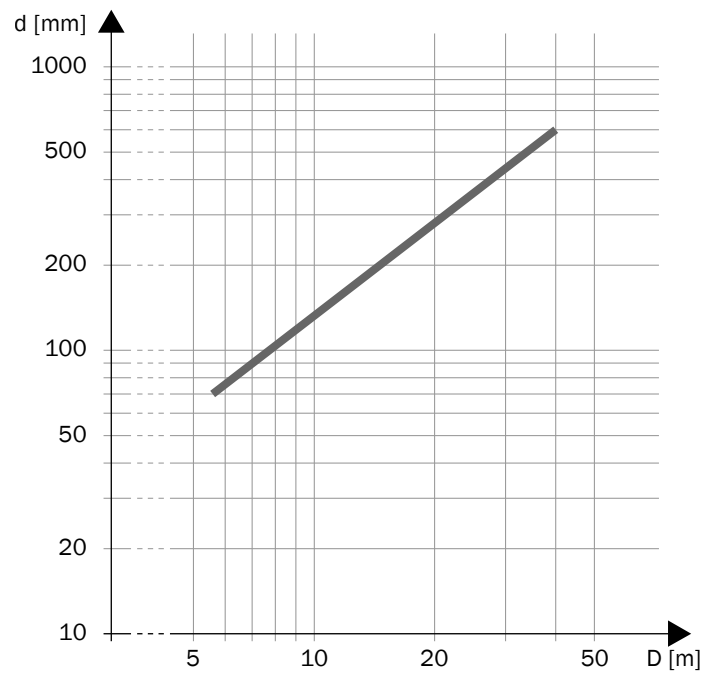


Figure 75: Scanning range and object size for warning fields

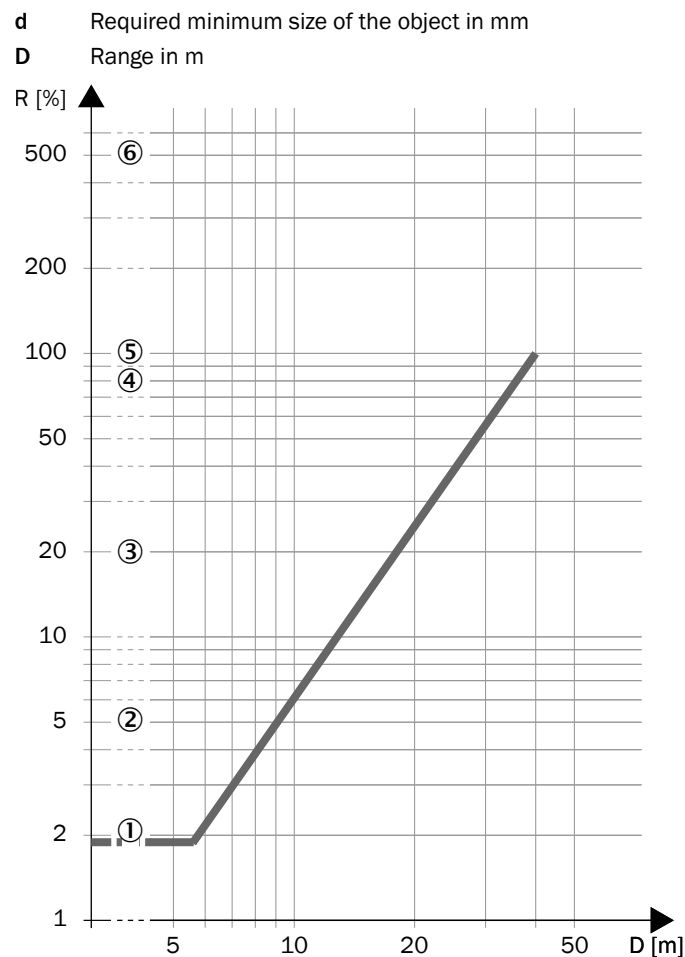


Figure 76: Scanning range and required remission for warning fields

- R** Required minimum remission in %
D Range in m
 ① Black shoe leather
 ② Matt black paint
 ③ Gray cardboard
 ④ Writing paper
 ⑤ White plaster
 ⑥ Reflectors > 2,000%, reflective tapes > 300% ¹⁰⁾

13.6 Scan plane

Overview

In practice, the scan plane is slightly conical and tilted.

Scan plane

Table 46: Scan plane

	outdoorScan3
	Maximum protective field range 4.0 m
Conical error ^{1) 2)}	• $\leq \pm 100$ mm at a distance of 5.5 m • $\leq \pm 364$ mm at a distance of 20 m
Tilt error ^{1) 3)}	• $\leq 3^\circ$ • $\leq \pm 288$ mm at a distance of 5.5 m • $\leq \pm 1048$ mm at a distance of 20 m
Deviation from the ideal scan plane taking into account the conical error and the tilt error ¹⁾	• $\leq \pm 388$ mm at a distance of 5.5 m • $\leq \pm 1,412$ mm at a distance of 20 m

1) The specified values are valid at an ambient temperature of 20 °C. Deviations can occur at other temperatures.

2) The conical error was described in earlier operating instructions as the deviation from the ideal scan field flatness, or a similar description.

3) The values for tilt error apply for the M5 threaded holes on the sides.
Additional deviations can arise, for example, due to brackets.

Complementary information

The scan plane details are relative to the midpoint of the light spot. Depending on the specific application, it may also be necessary to consider the light spot size.

Further topics

- ["Dimensional drawings", page 160](#)
- ["Light spot size", page 148](#)

13.7 Light spot size

Overview

The light spot has an elongated shape. The orientation of the light spot varies with the angle at which the light beam exists the device.

The light spot has at its edges a transition area in which significantly less light hits the object than in the central area. In the following, the light spot size is specified as the area of the light spot that triggers a detection under normal conditions.

¹⁰⁾ The measured values are less accurate for reflectors or reflective surfaces because the distance measurement is designed for lower remission values.

Light spot size

Table 47: Light spot size ¹⁾

	Devices with a max. protective field range of 4.0 m
At a distance of 4.0 m	5.5 mm × 13.8 mm
At a distance of 5.5 m	5.1 mm × 18.4 mm
At a distance of 9.0 m	12.3 mm × 31.3 mm
At a distance of 10.0 m	14.5 mm × 34.6 mm
At a distance of 15.0 m	24.6 mm × 52.8 mm
At a distance of 20.0 m	37.1 mm × 75.5 mm

¹⁾ Effective light spot size (W × H) when the light beam exits the device at a 90° forward angle.

13.8 Measurement data details

Table 48: Measurement data

	Devices with a max. protective field range of 4.0 m
Data output channels	1
Distance measurement range ¹⁾	
For remission factor = 10%	≤ 12 m
For remission factor = 100%	≤ 40 m
Scan rate	
Scan cycle time 30 ms	33 Hz
Scan cycle time 40 ms	25 Hz
Scan cycle time 50 ms	–
Angular resolution (physical) ²⁾	
Scan cycle time 30 ms	< 0.01°
Scan cycle time 40 ms	< 0.01°
Scan cycle time 50 ms	–
Angular resolution (safeHDDM®) ²⁾	
Scan cycle time 30 ms	0.51° (537 safeHDDM® measured values)
Scan cycle time 40 ms	0.39° (715 safeHDDM® measured values)
Scan cycle time 50 ms	–
Measurement uncertainty ³⁾	
Systematic error	± 10 mm
Total measurement error (statistical and systematic)	
At 1 σ	± 13 mm
At 2 σ	± 16 mm
At 3 σ	± 19 mm
At 4 σ	± 22 mm
At 5 σ	± 25 mm

¹⁾ Warm-up time ≥ 30 min. Light spot fully on the target object.

²⁾ safeHDDM® filters the physical measured values and provides very precise and reproducible measured values. Only safeHDDM® measured values are available via data output.

³⁾ Typical values at 20 °C and remission factor - 1.8%, distance = protective field range. The measured values are less accurate for reflectors or reflective surfaces because the distance measurement is designed for lower remission values.

13.9 Data exchange in the network





13.9.1 Process images in detail


13.9.1.1 Available data

13.9.1.1.1 Input of the device (output of the control)

Table 49: Input of the device (output of the control)

Name	Use	Data type	Definition	Values	Safety implication
ActivateStandbyMode	Additional function	BOOL	Activate sleep mode Activates sleep mode.	0 = no sleep mode 1 = sleep mode	Parameter without safety implication
SetMonitoringCaseNoTable1	Safety function	USINT	Monitoring case number (Monitoring case table 1) Activates the monitoring case with the corresponding number in monitoring case table 1.	0 = invalid 1 ... 254 = number of the monitoring case	Safety-relevant parameter
SetMonitoringCaseNoTable2	Safety function	USINT	Monitoring case number (Monitoring case table 2) Activates the monitoring case with the corresponding number in monitoring case table 2.	0 = invalid 1 ... 254 = number of the monitoring case	Safety-relevant parameter
SetMonitoringCaseNoTable3	Safety function	USINT	Monitoring case number (Monitoring case table 3) Activates the monitoring case with the corresponding number in monitoring case table 3.	0 = invalid 1 ... 254 = number of the monitoring case	Safety-relevant parameter
SetMonitoringCaseNoTable4	Safety function	USINT	Monitoring case number (Monitoring case table 4) Activates the monitoring case with the corresponding number in monitoring case table 4.	0 = invalid 1 ... 254 = number of the monitoring case	Safety-relevant parameter
StopAlarmDetection	Additional function	BOOL	Stop Event history	0 = event history active, object detections are recorded 1 = event history not active, object detections are not recorded, existing recordings are retained	Parameter without safety implication

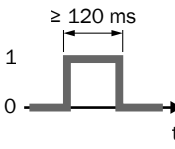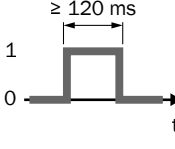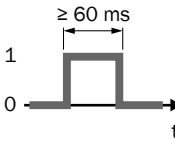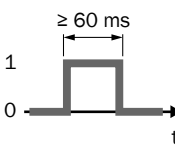Name	Use	Data type	Definition	Values	Safety implication
TriggerDeviceRebootWithNetwork	Additional function	BOOL	Restart device completely Restarts the device and the network stack. The internal switch function is interrupted.	0 = no restart 0-1-0 = device restart (duration of status 1 ≥ 120 ms)  1 = ignored	Parameter with implication for the safety function
TriggerDeviceRebootWithoutNetwork	Additional function	BOOL	Restarting safety function and connections Restarts the device without ending the network stack. The internal switch function is not interrupted.	0 = no restart 0-1-0 = device restart (duration of status 1 ≥ 120 ms)  1 = ignored	Parameter with implication for the safety function
TriggerResetCutOffPath01	Safety function	BOOL	Reset Cut-off path 01 Reset of cut-off path 01 after activation of the restart interlock	0 = no reset 0-1-0 = reset (duration of status 1 ≥ 60 ms) 	Safety-relevant parameter
TriggerResetCutOffPath02 ... TriggerResetCutOffPath08	Safety function	BOOL	Reset Cut-off path 02 ... 08 Reset of cut-off path 02 ... 08 after activation of the restart interlock ¹⁾	0 = no reset 0-1-0 = reset (duration of status 1 ≥ 60 ms) 	Safety-relevant parameter

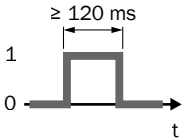Name	Use	Data type	Definition	Values	Safety implication
TriggerRunMode	Safety function	BOOL	Start safety function Restarts the safety function, e.g. if it was stopped or after an application error. (The device must be restarted after a device error.)	0 = no start command 0-1-0 = start safety function (duration of status 1 $\geq$ 120 ms)  1 = ignored	Safety-relevant parameter

1) Cut-off paths 5 to 8 are only available for the Pro performance package.

13.9.1.1.2 Output of the device (input of the control)

Table 50: Output of the device (input of the control)

Name	Use	Data type	Definition	Values	Safety implication
ApplicationError	Diagnostics	BOOL	Application error Signals whether an application error is present, causing the safety function to be paused. To resolve this, rectify the cause of the error and then restart the safety function.	0 = no application error 1 = application error	Parameter without safety implication
ContaminationError	Diagnostics	BOOL	Contamination error Optics cover is dirty. All safety outputs in the OFF state. Clean the optics cover.	0 = no contamination error 1 = contamination error	Parameter with implication for the safety function
ContaminationWarning	Diagnostics	BOOL	Contamination warning Optics cover is dirty. Clean the optics cover.	0 = no contamination warning 1 = contamination warning	Parameter without safety implication
CurrentMonitoringCaseNoTable1	Diagnostics	USINT	Current monitoring case (Monitoring case table 1) Signals the current (active) monitoring case of monitoring case table 1.	0 = no monitoring case is active 1 ... 254 = number of the current (active) monitoring case	Parameter without safety implication
CurrentMonitoringCaseNoTable2	Diagnostics	USINT	Current monitoring case (Monitoring case table 2) Indicates the current (active) monitoring case of monitoring case table 2.	0 = no monitoring case is active 1 ... 254 = number of the current (active) monitoring case	Parameter without safety implication

Name	Use	Data type	Definition	Values	Safety implication
CurrentMonitoringCaseNoTable3	Diagnostics	USINT	Current monitoring case (Monitoring case table 3) Signals the current (active) monitoring case of monitoring case table 3.	0 = no monitoring case is active 1 ... 254 = number of the current (active) monitoring case	Parameter without safety implication
CurrentMonitoringCaseNoTable4	Diagnostics	USINT	Current monitoring case (Monitoring case table 4) Indicates the current (active) monitoring case of monitoring case table 4.	0 = no monitoring case is active 1 ... 254 = number of the current (active) monitoring case	Parameter without safety implication
DeviceError	Diagnostics	BOOL	Device error Signals whether a device error (serious error) is present, causing the safety function to be paused. To resolve this, rectify the cause of the error and then restart the device.	0 = no device error 1 = device error	Parameter without safety implication
ManipulationStatus	Diagnostics	BOOL	Manipulation Signals if manipulation has been detected and the safety outputs are therefore in the OFF state, for example because the device has not detected an object over a long period of time.	0 = no manipulation detected 1 = manipulation detected	Parameter with implication for the safety function
NonsafeCutOffPath01	Additional function	BOOL	Cut-off path 01 (Not safety-related) The signal is ON if the currently monitored field in the cut-off path is free.	0 = OFF state, detection in field 1 = ON state, field free	Parameter without safety implication
NonsafeCutOffPath02 ... NonsafeCutOffPath08	Additional function	BOOL	Cut-off path 02 ... 08 (Not safety-related) The signal is ON if the currently monitored field in the cut-off path is free. ¹⁾	0 = OFF state, detection in field 1 = ON state, field free	Parameter without safety implication
ReferenceContourStatus	Diagnostics	BOOL	Reference contour monitoring The safety laser scanner does not detect any contour within the configured tolerance band of the reference contour field. All safety outputs in the OFF state.	0 = contour in the set tolerance band or reference contour monitoring not active 1 = contour not in set tolerance band	Parameter with implication for the safety function

Name	Use	Data type	Definition	Values	Safety implication
ResetRequiredCutOffPath01	Diagnostics	BOOL	Reset required, Cut-off path 01 Signals whether the device is waiting for a reset signal to switch safety-related cut-off path 01 to the ON state.	0 = reset not required 1 = reset required	Parameter with implication for the safety function
ResetRequiredCutOffPath02 ... ResetRequiredCutOffPath08	Diagnostics	BOOL	Reset required, Cut-off path 02 ... 08 Signals whether the device is waiting for a reset signal to switch the respective safety-related cut-off path to the ON state. ¹⁾	0 = reset not required 1 = reset required	Parameter with implication for the safety function
RunModeactive	Diagnostics	BOOL	Status of safety function Signals the operational status of the device.	0 = safety function paused. 1 = safety function is executed.	Parameter without safety implication
SafeCutOffPath01	Safety function	BOOL	Cut-off path 01 (safety-oriented) The signal is ON, if all of the following criteria are met: • The currently monitored field in the cut-off path is safety-oriented • The currently monitored field in the cut-off path is free • The restart interlock was not triggered	0 = OFF state, detection in protective field 1 = ON state, protective field free	Safety-relevant parameter
SafeCutOffPath02 ... SafeCutOffPath08	Safety function	BOOL	Cut-off path 02 ... 08 (safety-oriented) The signal is ON, if all of the following criteria are met: ¹⁾ • The currently monitored field in the cut-off path is safety-oriented • The currently monitored field in the cut-off path is free • The restart interlock was not triggered	0 = OFF state, detection in protective field 1 = ON state, protective field free	Safety-relevant parameter
StandbymodeActive	Diagnostics	BOOL	Status sleep mode Signals whether the device is in sleep mode.	0 = device not in sleep mode 1 = device in sleep mode	Parameter without safety implication

Name	Use	Data type	Definition	Values	Safety implication
StatusSafeCutOffPath01	Additional function	BOOL	Status of the safety-related cut-off path 01 (Not safety-related) Signals the status of the relevant safety-related cut-off path.	0 = safety-related cut-off path in OFF state 1 = safety-related cut-off path in ON state	Parameter without safety implication
StatusSafeCutOffPath02 ... StatusSafeCutOffPath08	Additional function	BOOL	Status of the safety-related cut-off path 02 ... 08 (Not safety-related) Signals the status of the relevant safety-related cut-off path. ¹⁾	0 = safety-related cut-off path in OFF state 1 = safety-related cut-off path in ON state	Parameter without safety implication

¹⁾ Cut-off paths 5 to 8 are only available for the Pro performance package.

13.9.1.2 Content of the process images

13.9.1.2.1 Process image, length 12 bytes

Table 51: Safety-related PROFIsafe process image: input of the device, output of the control

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	Reserved				ActivateS-tandbyMode	StopAlarm-Detection	Reserved	TriggerRun-Mode
1	SetMonitoringCaseNoTable1							
2	SetMonitoringCaseNoTable2							
3	SetMonitoringCaseNoTable3							
4	SetMonitoringCaseNoTable4							
5	Reserved							
6	Reserved							
7	Reserved							
8	Reserved							
9 ¹⁾	TriggerReset-CutOff-Path08	TriggerReset-CutOff-Path07	TriggerReset-CutOff-Path06	TriggerReset-CutOff-Path05	TriggerReset-CutOff-Path04	TriggerReset-CutOff-Path03	TriggerReset-CutOff-Path02	TriggerReset-CutOff-Path01
10	Reserved							
11	Reserved						TriggerDeviceReboot-WithNetwork	TriggerDeviceRebootWithoutNetwork

¹⁾ Cut-off paths 5 to 8 are only available for the Pro performance package.

Table 52: Safety-related PROFIsafe process image: output of the device, input of the control

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	Reserved		ManipulationStatus	Reference-ContourStatus	ContaminationError	ContaminationWarning	StandbymodeActive	RunModeactive
1 ¹⁾	SafeCutOff-Path08	SafeCutOff-Path07	SafeCutOff-Path06	SafeCutOff-Path05	SafeCutOff-Path04	SafeCutOff-Path03	SafeCutOff-Path02	SafeCutOff-Path01
2	Reserved							

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
3 ¹⁾	NonsafeCutOffPath08	NonsafeCutOffPath07	NonsafeCutOffPath06	NonsafeCutOffPath05	NonsafeCutOffPath04	NonsafeCutOffPath03	NonsafeCutOffPath02	NonsafeCutOffPath01
4	Reserved							
5 ¹⁾	ResetRequiredCutOffPath08	ResetRequiredCutOffPath07	ResetRequiredCutOffPath06	ResetRequiredCutOffPath05	ResetRequiredCutOffPath04	ResetRequiredCutOffPath03	ResetRequiredCutOffPath02	ResetRequiredCutOffPath01
6	Reserved							
7	CurrentMonitoringCaseNoTable1							
8	CurrentMonitoringCaseNoTable2							
9	CurrentMonitoringCaseNoTable3							
10	CurrentMonitoringCaseNoTable4							
11	Reserved						DeviceError	ApplicationError

¹⁾ Cut-off paths 5 to 8 are only available for the Pro performance package.

Table 53: Non-safety-related PROFINET process image: output of the device, input of the control

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	Reserved		ManipulationStatus	ReferenceContourStatus	ContaminationError	ContaminationWarning	StandbymodeActive	RunModeactive
1 ¹⁾	StatusSafeCutOffPath08	StatusSafeCutOffPath07	StatusSafeCutOffPath06	StatusSafeCutOffPath05	StatusSafeCutOffPath04	StatusSafeCutOffPath03	StatusSafeCutOffPath02	StatusSafeCutOffPath01
2	Reserved							
3 ¹⁾	NonsafeCutOffPath08	NonsafeCutOffPath07	NonsafeCutOffPath06	NonsafeCutOffPath05	NonsafeCutOffPath04	NonsafeCutOffPath03	NonsafeCutOffPath02	NonsafeCutOffPath01
4	Reserved							
5 ¹⁾	ResetRequiredCutOffPath08	ResetRequiredCutOffPath07	ResetRequiredCutOffPath06	ResetRequiredCutOffPath05	ResetRequiredCutOffPath04	ResetRequiredCutOffPath03	ResetRequiredCutOffPath02	ResetRequiredCutOffPath01
6	Reserved							
7	CurrentMonitoringCaseNoTable1							
8	CurrentMonitoringCaseNoTable2							
9	CurrentMonitoringCaseNoTable3							
10	CurrentMonitoringCaseNoTable4							
11	Reserved						DeviceError	ApplicationError

¹⁾ Cut-off paths 5 to 8 are only available for the Pro performance package.

13.9.1.2.2 Process image, length 6 bytes

Table 54: Safety-related PROFIsafe process image: input of the device, output of the control

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	Reserved				ActivateStandbyMode	StopAlarmDetection	Reserved	TriggerRunMode
1	SetMonitoringCaseNoTable1							
2	Reserved							

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
3 ¹⁾	TriggerReset-CutOff-Path08	TriggerReset-CutOff-Path07	TriggerReset-CutOff-Path06	TriggerReset-CutOff-Path05	TriggerReset-CutOff-Path04	TriggerReset-CutOff-Path03	TriggerReset-CutOff-Path02	TriggerReset-CutOff-Path01
4	Reserved							
5	Reserved						TriggerDeviceReboot-WithNetwork	TriggerDeviceRebootWithoutNetwork

¹⁾ Cut-off paths 5 to 8 are only available for the Pro performance package.

Table 55: Safety-related PROFIsafe process image: output of the device, input of the control

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	Reserved		ManipulationStatus	Reference-ContourStatus	ContaminationError	ContaminationWarning	StandbymodeActive	RunModeactive
1 ¹⁾	SafeCutOff-Path08	SafeCutOff-Path07	SafeCutOff-Path06	SafeCutOff-Path05	SafeCutOff-Path04	SafeCutOff-Path03	SafeCutOff-Path02	SafeCutOff-Path01
2 ¹⁾	NonsafeCutOffPath08	NonsafeCutOffPath07	NonsafeCutOffPath06	NonsafeCutOffPath05	NonsafeCutOffPath04	NonsafeCutOffPath03	NonsafeCutOffPath02	NonsafeCutOffPath01
3 ¹⁾	ResetRequiredCutOff-Path08	ResetRequiredCutOff-Path07	ResetRequiredCutOff-Path06	ResetRequiredCutOff-Path05	ResetRequiredCutOff-Path04	ResetRequiredCutOff-Path03	ResetRequiredCutOff-Path02	ResetRequiredCutOff-Path01
4	CurrentMonitoringCaseNoTable1							
5	Reserved						DeviceError	ApplicationError

¹⁾ Cut-off paths 5 to 8 are only available for the Pro performance package.

Table 56: Non-safety-related PROFINET process image: output of the device, input of the control

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	Reserved		ManipulationStatus	Reference-ContourStatus	ContaminationError	ContaminationWarning	StandbymodeActive	RunModeactive
1 ¹⁾	StatusSafe-CutOff-Path08	StatusSafe-CutOff-Path07	StatusSafe-CutOff-Path06	StatusSafe-CutOff-Path05	StatusSafe-CutOff-Path04	StatusSafe-CutOff-Path03	StatusSafe-CutOff-Path02	StatusSafe-CutOff-Path01
2 ¹⁾	NonsafeCutOffPath08	NonsafeCutOffPath07	NonsafeCutOffPath06	NonsafeCutOffPath05	NonsafeCutOffPath04	NonsafeCutOffPath03	NonsafeCutOffPath02	NonsafeCutOffPath01
3 ¹⁾	ResetRequiredCutOff-Path08	ResetRequiredCutOff-Path07	ResetRequiredCutOff-Path06	ResetRequiredCutOff-Path05	ResetRequiredCutOff-Path04	ResetRequiredCutOff-Path03	ResetRequiredCutOff-Path02	ResetRequiredCutOff-Path01
4	CurrentMonitoringCaseNoTable1							
5	Reserved						DeviceError	ApplicationError

¹⁾ Cut-off paths 5 to 8 are only available for the Pro performance package.

13.9.2 Alarms

Table 57: Available alarms (degree of difficulty: need for maintenance)

Number	Severity	Description	Troubleshooting
64	Error	Incorrect F destination address (F_Dest_Add) set	► Check the PROFIsafe parameters of the module.

Number	Severity	Description	Troubleshooting
65	Error	Invalid F destination address (F_Dest_Add) set	► Check the PROFIsafe parameters of the module.
66	Error	Invalid or incorrect F source address (F_Source_Add) set	► Check the PROFIsafe parameters of the module.
67	Error	The fail-safe monitoring time (F_WD_Time) is set to an invalid value of 0 ms	► Check the PROFIsafe parameters of the module.
68	Error	The set parameter F_SIL exceeds the safety integrity level (SIL) of the device	► Check the PROFIsafe parameters of the module.
69	Error	The set parameter F_CRC_Length does not match the length of the received CRC values	► Check the PROFIsafe parameters of the module.
70	Error	F parameter version set incorrectly	► Check the PROFIsafe parameters of the module.
71	Error	Inconsistent F parameter block received (CRC1 error)	► Rebuild and load the safety program.
72	Error	Device-specific or unspecified diagnostic message	
75	Error	iParameter inconsistent (F_iPar_CRC error)	► Check the set F_iPar_CRC. ► Process image without checking the F_iPar_CRC.
76	Error	F_Block_ID not supported	► Check the PROFIsafe parameters of the module.
77	Error	PROFIsafe transmission error: data inconsistent (CRC2 error)	► Check wiring for damage and possible electromagnetic interference (EMC).
78	Error	PROFIsafe transmission error: Monitoring time (F_WD_Time or F_WD_Time_2 expired)	► Increase, if necessary, the watchdog time set in the PROFIsafe parameters.
256	Need for maintenance	Error in application of the safety laser scanner	► Check the configuration, control and process of the machine.
257	Need for maintenance	Internal error in the safety laser scanner	► Restart device. ► Replacing the safety laser scanner.
258	Need for maintenance	Contamination warning	► Check the optics cover for damage. ► Clean the optics cover.
259	Need for maintenance	Contamination error	All safety outputs in the OFF state. ► Check the optics cover for damage. ► Clean the optics cover.
260	Need for maintenance	Tamper protection (reference contamination field)	The safety laser scanner does not detect any contour within the configured tolerance band of the reference contour field. All safety outputs in the OFF state.
261	Need for maintenance	Tamper protection	The safety laser scanner does not detect a contour in an area of at least 90° (maximum measuring range 40 m). All safety outputs in the OFF state.
262	Need for maintenance	Faulty configuration	► Reconfigure the device.
263	Need for maintenance	PROFIsafe communication inactive	► Perform reintegration. ► Change watchdog time.

13.9.3 I&M data

Table 58: I&M data available

Parameter	Explanation	Write access
I&M data set 0		
Vendor_ID	Ident number, awarded by PNO, in the case of SICK 0x0101	–
OrderID	Part number of the device	–
IM_Serial_Number	Device serial number	–
IM_Hardware_Revision	Hardware version of the device The revision level of the device is output as a five-digit number without separating dots. To convert the revision level to the normal notation: 1. Insert a dot after the first and third digits. 2. Remove leading zeros. Example: • Output value: 10203 • Revision level: 1.2.3	–
IM_SWRevision_Functional_Enhancement	Firmware version of the device	–
IM_SWRevision_Bug_Fix		–
IM_SWRevision_Internal_Change		–
IM_REVISION_COUNTER	Version of the I&M record	–
IM_Profile_ID		–
IM_Profile_Specific_Type		–
IM_Version_Major		–
IM_Version_Minor		–
IM_Supported	Information about further supported I&M data records	–
I&M data set 1		
IM_Tag_Function	System ID	Yes
IM_Tag_Location	Location identifier	Yes
I&M data set 2		
IM_Date	Installation date	Yes
I&M data set 3		
IM_Descriptor	Comment	Yes
I&M data set 4		
IM_Signature	Checksum of the safety configuration (in the Safety Designer: checksum of the configuration (function and network)). Is used to check whether the safety-relevant settings were changed. Is written by Safety Designer. The value is identical to F_iPar_CRC.	–
I&M data set 5		

Parameter	Explanation	Write access
IM_Annotation	Manufacturer's information on the network components used	–
OrderID		–
Vendor_ID		–
IM_Serial_Number		–
IM_Hardware_Revision		–
IM_SWRevision		–

13.10 Dimensional drawings

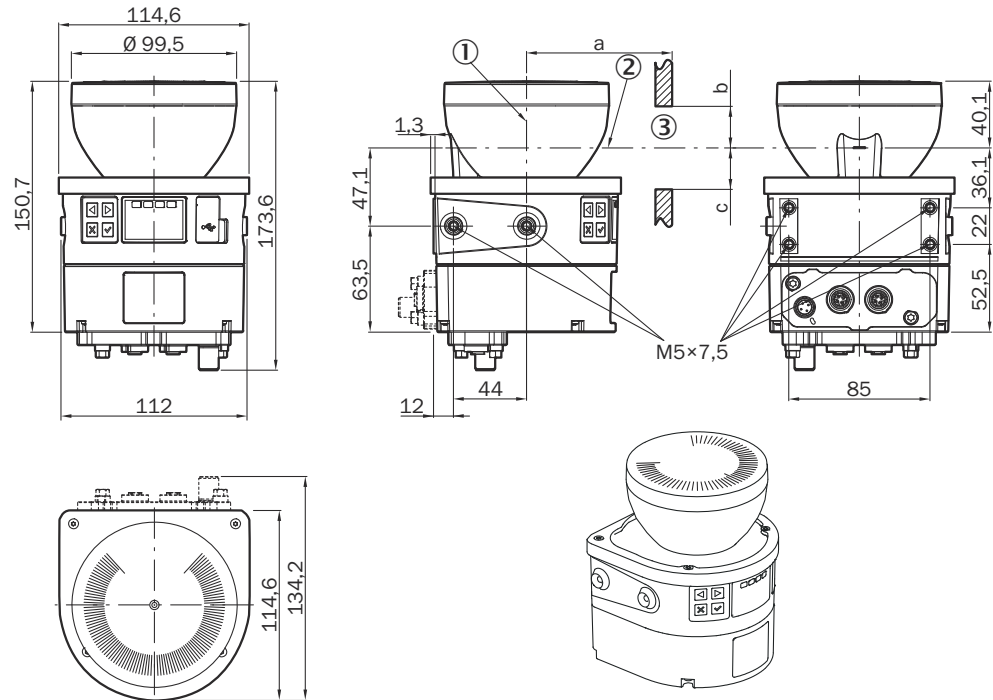


Figure 77: Dimensional drawing

All dimensions in mm.

- ① Mirror rotational axis
- ② Scan plane
- ③ Required viewing slit
 - a: Length of the viewing slit
 - b: Minimum height above the scan plane
 - c: Minimum height below the scan plane

Required viewing slit

If the device is installed in paneling, for example, you must ensure that the laser beam can exit unhindered. The reflected laser beam must also reach the device unhindered. That means the viewing slit must be large enough.

The required minimum height and width of the viewing slit depends on the following parameters, among others:

- Conical error
- Alignment of the safety laser scanner (with compensation of the tilt error)
- Light spot size at the end of the viewing slit. The reflected light beam has a significantly larger light spot. This size must be taken into account.
- Vibrations that affect the scan plane or the geometry of the viewing slit

The following information applies at an ambient temperature of 20 °C. Deviations may occur at other temperatures.

Dimensioning of a viewing slit with length $a \leq 200$ mm

- $b, c \geq 25$ mm
- $d \geq 23$ mm

Dimensioning of a viewing slit with length $a > 200$ mm

The individual tilt error of the safety laser scanner must be compensated for by suitable alignment during mounting. The cone error cannot be compensated and is taken into account in the formula.

- $b, c \geq 0.01956 \times a + 19.1$ mm, additional condition: $b, c \geq 25$ mm
- $d \geq 0.00166 \times a + 18.2$ mm, additional condition: $d \geq 23$ mm

Where:

- a = length of the viewing slit from the mirror rotation axis
- b = minimum height above the scan plane
- c = minimum height below the scan plane
- d = minimum lateral distance between the protective field and the boundary of the viewing slit

14 Ordering information

14.1 Scope of delivery

- Safety laser scanner with system plug
- Safety note
- Mounting Instructions
- Operating instructions for download: www.sick.com

14.2 Ordering information

Table 59: Ordering information for safety laser scanner with system plug

Part	Integration in the control	Connection type	Protective field range	Type code	Part number
outdoorScan3 Pro – PROFINET	PROFINET PROFIsafe	M12, 4-pin, D-coded	≤ 4.0 m	MICS3-CBUZ40PZ1P01	1094474

Table 60: Ordering information for the airWiper kit

Part	Part number
airWiper Kit outdoorScan3 Pro – PROFINET	1128913

15 Spare parts

15.1 Safety laser scanner without system plug

Table 61: Safety laser scanner without system plug

Product for which the spare part is suitable			Safety laser scanner without system plug	
Part	Part number	Protective field range	Type code	Part number
outdoorScan3 Pro – PROFINET	1094474	≤ 4.0 m	MICS3-CBUZ40PZ1	1094473

Table 62: airWiper kit without system plug

Product for which the spare part is suitable		airWiper kit without system plug
Part	Part number	Part number
airWiper Kit outdoorScan3 Pro – PROFINET	1128913	1128912

15.2 System plug

Table 63: System plug

Product for which the spare part is suitable			System plug	
Part	Part number	Connection type	Type code	Part number
outdoorScan3 – PROFINET	1094473, 1094474, 1128912, 1128913	M12, 4-pin, D-coded	MICSX-RANNZZZZ1	2102812

15.3 Additional spare parts

Table 64: Additional spare parts

Part	Part number
Cover plate, 91.8 mm × 31.3 mm (with screws)	2101643

16 Accessories

16.1 Weather protection

Table 65: Ordering information for weather protection

Part	Part number
Weather hood (only in conjunction with mounting kit 3)	2103050
Splash guard (only in conjunction with mounting kit 3)	2123205
Foam pad for splash guard (spare part for splash guard)	2123662

16.2 Additional accessories

Suitable accessories are available at www.sick.com. Enter the product part number in the search field (part number: see the type label entry in the “Ident. no.” field or in the “P/N” field). All suitable accessories are listed on the Accessories tab of the product page.

17 Glossary

AGV	Automatic Guided Vehicle: driverless vehicle used for transport.
CoLa 2	CoLa 2 (Command Language 2) is a protocol from SICK, with which a client (control, computer, etc.) can access suitable SICK sensors via a network (TCP/IP) or USB.
Conical error	In practice, the area scanned by a scan plane is not precisely flat but rather slightly conical. The conical error indicates how pronounced the conicity is, i.e. how strongly the scanned area deviates from the ideal plane. The conical error of a particular device is invariable. It can only be compensated for by measures during mounting.
Dangerous state	A dangerous state is a status of the machine or facility, where people may be injured. Protective devices prevent this risk if the machine is operated within its intended use. The figures in this document always show the dangerous state of the machine as movement of a machine part. In practice, there are different dangerous states, such as: • Machine movements • Electrical parts • Visible and invisible beam • A combination of multiple hazards
Electro-sensitive protective device	An electro-sensitive protective device is a device or system of devices for safety-related detection of people or parts of the body. It is used to protect people from machines and facilities that pose a risk of injury. It triggers the machine or facility to adopt a safe state before a person is exposed to a hazardous situation. Examples: Safety light curtain, safety laser scanner.
ESPE	Electro-sensitive protective device
Field set	A field set consists of one or more fields. The fields in a field set are monitored simultaneously. A field set can contain different field types, e.g., a protective field and a warning field.
Hazardous area	Hazardous area is any space within and/or around machinery in which a person can be exposed to a hazard. (ISO 12100)
Light spot	The light spot is the projection of the light beam on a plane perpendicular to the light beam. The light beam size depends on the distance between the light source and the surface on which the light beam strikes.
Localization	Position determination or localization is the determination of the position of an object. For vehicles, localization is a prerequisite for navigation.
Monitoring case	A monitoring case indicates the machine status to the sensor. Generally, one field set is assigned to each monitoring case. The sensor receives a defined signal for the current machine status. When a signal change occurs, the sensor activates the monitoring case and thereby the field set that is associated with the new machine status.
Navigation	Navigation is the determination and continuous adaptation of the route of a vehicle. This requires precise knowledge of the position of the vehicle and the nature of the environment in which the vehicle is moving.

Navigation	Navigation is a central element of a website or software interface that enables the user to always have an overview of the structure of the website or software and to navigate as directly as possible to any page of the website or software that is considered important.
OFF state	The OFF state is the status of the outputs of the protective device, where the controlled machine is triggered to quit its dangerous state and the start-up of the machine is prevented (e.g., the voltage at the OSSDs is LOW, so that the machine is switched off and remains still).
ON state	The ON state is the status of the outputs of the ESPE, where the controlled machine is permitted to operate (e.g., the voltage at the OSSDs is HIGH so that the machine can run).
OSSD	Output signal switching device: signal output for the protective device, which is used for stopping the dangerous movement. An OSSD is a safety switching output. The functionality of each OSSD is tested periodically. OSSDs are always connected in pairs and must undergo dual-channel analysis for safety reasons. An OSSD pair is formed from 2 OSSDs that are connected and analyzed together.
PFH	Average frequency of a dangerous failure per hour. More information: IEC 61508, IEC 62061, ISO 13849.
PL	Performance level (ISO 13849)
Position determination	Position determination or localization is the determination of the position of an object. For vehicles, localization is a prerequisite for navigation.
PROFINET	PROFINET (Process Field Protocol) is an Ethernet-based network used in industrial automation. With PROFIsafe, PROFINET is also suitable for safety-oriented data communication.
Protective field	The protective field is the area in which the test object specified by the manufacturer is detected by the electro-sensitive protective equipment (ESPE). As soon as the electro-sensitive protective device detects an object in the protective field, it switches the associated safety outputs to the OFF state. This signal can be passed to controllers resulting in the dangerous state coming to an end, e.g. to stop the machine or the vehicle.
Reference contour field	The contour as reference field monitors a contour of the environment. The safety laser scanner switches all safety outputs to the OFF state if a contour does not match the set parameters, because, for example, the mounting of the safety laser scanner has been changed. National and international standards require or recommend that a reference contour is monitored, if the safety laser scanner is used in vertical operation for hazardous point protection or for access protection.

Reset	When a protective device has sent a stop command, the stopped state must be maintained until a reset device is activated and the machine can be restarted in a second step. The reset brings the protective device back to the monitoring state after it has sent a stop command. The reset also quits the start-up or restart interlock of a protective device, so that the machine can be restarted in a second step. The reset must only be possible, when all safety functions and protective devices are functional. The reset of the protective device must not introduce any movement or dangerous situations itself. The machine is only permitted to start after the reset once a separate start command has been sent. • Manual resets are performed using a separate, manually operated device, such as a reset pushbutton. • Automatic resets by the protective device are only permitted in special cases, if one of the following conditions is met: ◦ It must not be possible for people to be in the hazardous area without triggering the protective device. ◦ It must be ensured that no people are in the hazardous area during or after the reset.
Resolution	The resolution of an active opto-electronic protective device (also known as the sensor detection capability) is the minimum size of an object for it to be reliably detected.
Response time	The protective device's response time is the maximum time between the occurrence of the event leading to the sensor's response and supply of the switch-off signal to the protective device's interface (for example OFF state of the OSSD pair).
Restart interlock	The restart interlock prevents the machine from automatically starting up, for example after a protective device has responded while the machine is operating or after changing the machine's operating mode. The restart interlock can be implemented in the protective device or in the safety controller. A command to reset the protective device must be given, for example using a reset pushbutton, before the machine can be restarted.
Retroreflector	A retroreflector reflects light back toward the light source largely independently of the alignment of the retroreflector.
RSSI	Received Signal Strength Indicator (RSSI): Indicator of the strength of the received signal. A higher value corresponds to a better reception. There is no universal relationship between a physical quantity and a specified RSSI.
Safety function	Function of a machine whose failure can result in an immediate increase of the risk(s). (ISO 12100)
Safety output	A safety output provides safety-related information. Safety outputs are OSSDs, for example, or safety-related information on a safety-related network.
Scan cycle time	The scan cycle time is the time the sensor needs for a complete scan of its detection area. Example: Time required by the mirror of a safety laser scanner for one rotation.

Scan plane	The scan plane is the geometric plane in which the 2D laser scanner captures its environment. A scan layer is created by deflecting a laser beam using a rotating mirror. In practice, the area scanned is not precisely flat. Deviations from the ideal plane are specified as a conical error. Deviations from the ideal alignment are specified as a tilt error.
SIL	Safety integrity level
Tilt error	The tilt error indicates how strongly tilted the scan plane is to the ideal alignment within the specific device. The tilt error can be compensated for in many cases by mounting the sensor at a compensating inclination.
Warning field	The warning field monitors larger areas than the protective field. Simple switching functions can be triggered with the warning field, e.g. a warning light or an acoustic signal can be triggered if a person approaches, even before the person enters the protective field. The warning field must not be used for safety applications.

18 Annex

18.1 Conformities and certificates

You can obtain declarations of conformity, certificates, and the current operating instructions for the product at www.sick.com. To do so, enter the product part number in the search field (part number: see the entry in the “P/N” or “Ident. no.” field on the type label).

18.1.1 EU declaration of conformity

Excerpt

The undersigned, representing the manufacturer, herewith declares that the product is in conformity with the provisions of the following EU directive(s) (including all applicable amendments), and that the standards and/or technical specifications stated in the EU declaration of conformity have been used as a basis for this.

- ROHS DIRECTIVE 2011/65/EU
- EMC DIRECTIVE 2014/30/EU
- MACHINERY DIRECTIVE 2006/42/EC

18.1.2 UK declaration of conformity

Excerpt

The undersigned, representing the following manufacturer herewith declares that this declaration of conformity is issued under the sole responsibility of the manufacturer. The product of this declaration is in conformity with the provisions of the following relevant UK Statutory Instruments (including all applicable amendments), and the respective standards and/or technical specifications have been used as a basis.

- Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012
- Electromagnetic Compatibility Regulations 2016
- Supply of Machinery (Safety) Regulations 2008

18.2 Note on standards

Standards are specified in the information provided by SICK. The table shows regional standards with similar or identical contents. Not every standard applies to all products.

Table 66: Note on standards

Standard	Standard (regional)
	China
IEC 60068-2-6	GB/T 2423.10
IEC 60068-2-27	GB/T 2423.5
IEC 60204-1	GB/T 5226.1
IEC 60529	GB/T 4208
IEC 60825-1	GB 7247.1
IEC 61131-2	GB/T 15969.2
IEC 61140	GB/T 17045
IEC 61496-1	GB/T 19436.1
IEC 61496-2	GB/T 19436.2
IEC 61496-3	GB 19436.3
IEC 61508	GB/T 20438

Standard	Standard (regional)
	China
IEC 62061	GB 28526
ISO 13849-1	GB/T 16855.1
ISO 13855	GB/T 19876

18.3 Checklist for initial commissioning and commissioning

Checklist for manufacturers or installers for installing electro-sensitive protective device (ESPE)

The details relating to the items listed below must be available no later than when the system is commissioned for the first time. However, these depend on the specific application (the requirements of which must be reviewed by the manufacturer or installer).

This checklist should be retained and kept with the machine documentation to serve as reference during recurring tests.

This checklist does not replace the initial commissioning, nor the regular inspection by qualified safety personnel.

Have the safety rules and regulations been observed in compliance with the directives and standards applicable to the machine?	Yes ☐ No ☐
Are the applied directives and standards listed in the declaration of conformity?	Yes ☐ No ☐
Does the protective device correspond to the required PL/SIL and PFH in accordance with ISO 13849-1/IEC 62061 and the required type in accordance with IEC 61496-1?	Yes ☐ No ☐
Is access to the hazardous area or hazardous point only possible through the protective field of the ESPE?	Yes ☐ No ☐
Have appropriate measures been taken to protect (mechanical protection) or monitor (protective devices) any persons or objects in the hazardous area when protecting a hazardous area or hazardous point, and have these devices been secured or locked to prevent their removal?	Yes ☐ No ☐
Are additional mechanical protective measures fitted and secured against manipulation which prevent reaching below, above or around the ESPE?	Yes ☐ No ☐
Has the maximum shutdown and/or stopping time of the machine been measured, specified and documented (at the machine and/or in the machine documentation)?	Yes ☐ No ☐
Has the ESPE been mounted such that the required minimum distance from the nearest hazardous point has been achieved?	Yes ☐ No ☐
Are the ESPE devices properly mounted and secured against manipulation after alignment?	Yes ☐ No ☐
Are the required protective measures against electric shock in effect (protection class)?	Yes ☐ No ☐
Is the control switch for resetting the protective devices (ESPE) or restarting the machine present and correctly installed?	Yes ☐ No ☐
Are the outputs of the ESPE (OSSDs or safety outputs via the network) integrated according to the required PL/SIL in accordance with ISO 13849-1 / IEC 62061 and does the integration correspond to the circuit diagrams?	Yes ☐ No ☐
Has the protective function been checked in compliance with the test notes of this documentation?	Yes ☐ No ☐
Are the specified protective functions effective at every operating mode that can be set?	Yes ☐ No ☐
Are the switching elements activated by the ESPE, e.g. contactors, valves, monitored?	Yes ☐ No ☐
Is the ESPE effective over the entire period of the dangerous state?	Yes ☐ No ☐
Once initiated, will a dangerous state be stopped when switching the ESPE on or off and when changing the operating mode, or when switching to another protective device?	Yes ☐ No ☐

18.3.1 Additional checklist for outdoor applications

For outdoor applications, the details relating to the items listed below must be available no later than when the system is commissioned for the first time. However, these depend on the specific application (the requirements of which must be reviewed by the manufacturer or installer).

Is the scan plane horizontal?	Yes ☐ No ☐
When using the Large areas application type: Are regular checks being performed to ensure that there are no objects at close range (< 50 mm from the optics cover) impairing the line of sight of the device?	Yes ☐ No ☐
Has it been ensured that the device has a temperature of at least -10 °C when switched on?	Yes ☐ No ☐
Is the device adequately protected against weather influences (rain, water spray, flowing water, snow, ice, wind, direct sunlight)?	Yes ☐ No ☐
Has condensation been prevented by suitable measures?	Yes ☐ No ☐
Has the device been mounted with the optics cover facing downward?	Yes ☐ No ☐
Have vibrations and knocks been damped by suitable measures?	Yes ☐ No ☐

18.4 Mounting methods for protection from interference from systems in close proximity

Due to the safeHDDM® scanning technology, mutual interference of multiple safety laser scanners is unlikely. If many safety laser scanners are operated at the same level in a stationary application, they may nevertheless interfere with one another. We recommend selecting a suitable mounting method to avoid mutual interference. In many cases, you can use the following examples as a guide.



NOTE

You must comply with the standard ISO 13855:2010 when choosing the mounting method.

Mounting multiple safety laser scanners slightly offset and in parallel

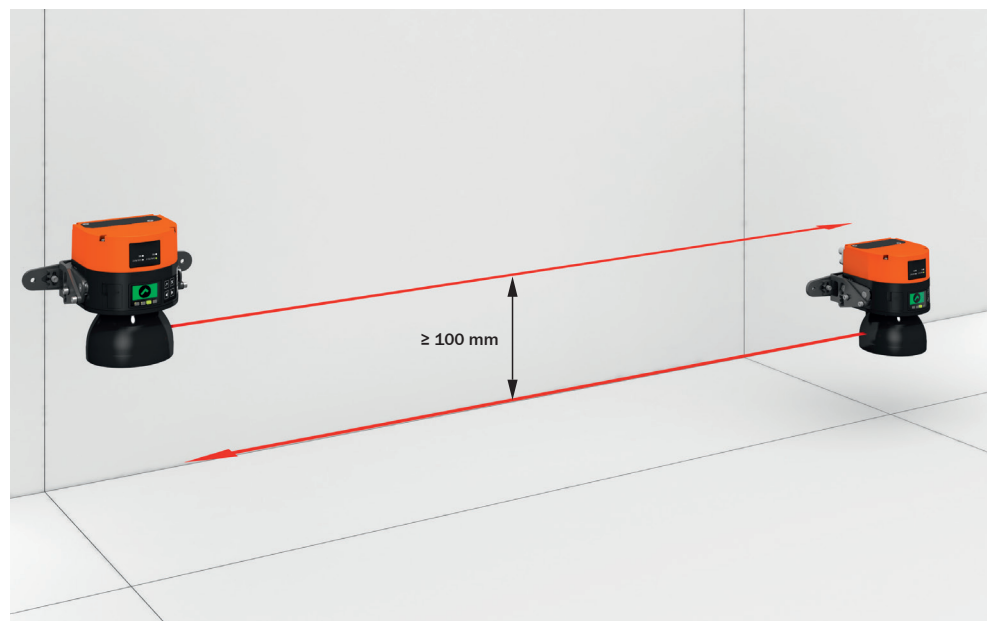


Figure 78: Mounting 2 safety laser scanners with the optics cover facing downward

The following mounting method has the advantage that both safety laser scanners can be mounted at a similar height. Nonetheless, there is enough space between the scan planes.

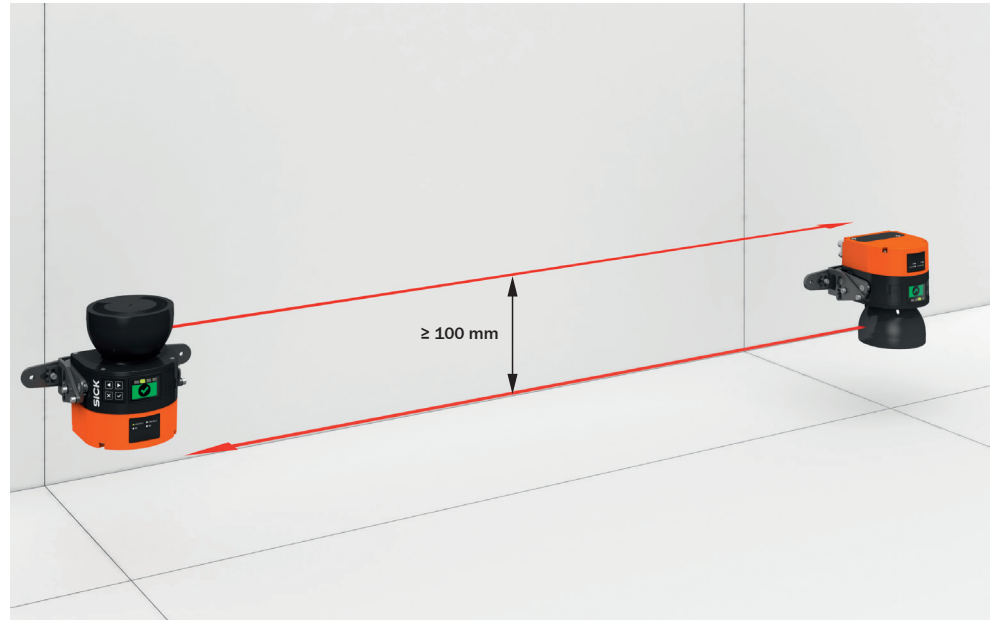


Figure 79: Mounting the upper safety laser scanner with the optics cover facing upward and mounting the lower safety laser scanner with the optics cover facing downward

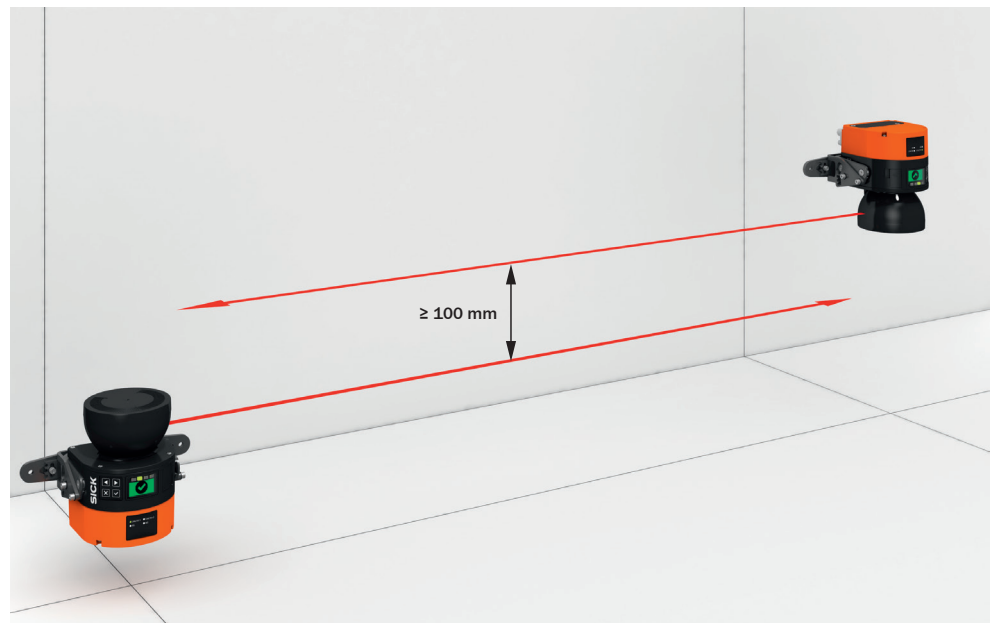


Figure 80: Mounting the upper safety laser scanner with the optics cover facing downward and mounting the lower safety laser scanner with the optics cover facing upward

19 List of figures

1.	Laser class 1.....	10
2.	SICK product ID.....	13
3.	Device overview.....	13
4.	Principle of time-of-flight measurement.....	14
5.	Light pulses scan an area.....	15
6.	Protective field, shown in red in this document.....	17
7.	Warning field, shown in yellow or orange in this document.....	18
8.	Field set, consisting of one protective field (red) and 2 warning fields (orange and yellow).....	18
9.	Monitoring case 1 with field set 1.....	19
10.	Monitoring case 2 with field set 2.....	19
11.	Simultaneous monitoring.....	20
12.	Hazardous area protection: detection of the presence of a person in the hazardous area.....	21
13.	Mobile hazardous area protection: detection of a person when a vehicle approaches.....	21
14.	Device mounted with the optics cover facing downwards to prevent accumulation of contaminants on the contamination measurement feature.....	26
15.	Prevent crawling beneath.....	29
16.	Prevent stepping over.....	29
17.	Unsecured areas.....	31
18.	Mounting with deflector plates (example).....	31
19.	Mounting in an undercut (example).....	32
20.	Mounting in vehicle paneling (example).....	33
21.	Stationary application with horizontal scan plane for hazardous area protection.....	35
22.	Protection against reaching over when mounted low (dimensions in mm).....	38
23.	Protection against reaching over when mounted high (dimensions in mm).....	38
24.	Scan plane at ankle height.....	39
25.	Scan plane at calf height.....	40
26.	Distance of the protective field from the wall.....	41
27.	Mobile application in horizontal operation for hazardous area protection.....	42
28.	flat-rate supplement ZF for lack of ground clearance.....	43
29.	Minimum supplement for lack of ground clearance.....	44
30.	Stopping distance as a function of the vehicle's speed.....	45
31.	Recommended fitting height.....	47
32.	Recommended fitting height for inverted mounting	47
33.	Prevent crawling beneath.....	61
34.	Prevent stepping over.....	61
35.	Remove the system plug from below.....	63
36.	Remove the cover plate from the rear.....	63
37.	Installing the rear system plug.....	64
38.	Mounting the safety laser scanner directly.....	64
39.	Pin assignment of the voltage supply (male connector, M12, 4-pin, A-coded).....	66
40.	Network pin assignment (M12 female connector, 4-pin, D-coding).....	66
41.	Software controls.....	68
42.	Configuration.....	70
43.	Overview.....	72
44.	Functional scope.....	74
45.	Network settings: PROFINET.....	75
46.	Identification and maintenance function in PROFINET.....	77
47.	Identification.....	79
48.	PROFINET alarms.....	81
49.	Application.....	82
50.	Monitoring plane.....	83

51. Field editor.....	86
52. Area that cannot be monitored.....	89
53. Enable propose field.....	90
54. Editing fields using coordinates.....	92
55. Field set template.....	94
56. Inputs and outputs.....	96
57. Monitoring cases.....	98
58. Simulation.....	103
59. Data output.....	104
60. Report.....	108
61. Alignment about the transverse axis.....	114
62. Alignment about the depth axis.....	114
63. Status LEDs.....	115
64. LEDs.....	116
65. Status LEDs.....	117
66. Network LEDs.....	117
67. Replacing the system plug.....	125
68. Pushbuttons on the device.....	127
69. Error display.....	129
70. Data recorder.....	132
71. Event history.....	133
72. Message history.....	135
73. PROFINET diagnostics.....	137
74. PROFINET status.....	138
75. Scanning range and object size for warning fields.....	147
76. Scanning range and required remission for warning fields.....	147
77. Dimensional drawing.....	160
78. Mounting 2 safety laser scanners with the optics cover facing downward.....	173
79. Mounting the upper safety laser scanner with the optics cover facing upward and mounting the lower safety laser scanner with the optics cover facing downward....	174
80. Mounting the upper safety laser scanner with the optics cover facing downward and mounting the lower safety laser scanner with the optics cover facing upward	174

20 List of tables

1.	Available documents.....	8
2.	Target groups and selected sections of these operating instructions.....	8
3.	Field types and their function.....	16
4.	Ambient conditions when used outdoors.....	23
5.	Network services and ports.....	51
6.	PROFIsafe parameters.....	53
7.	System plug and connections.....	66
8.	Pin assignment of the voltage supply.....	66
9.	Network pin assignment.....	66
10.	User groups.....	69
11.	Recommended multiple sampling.....	85
12.	Buttons on the toolbar.....	87
13.	Colors of the field types.....	88
14.	Buttons for field sets.....	88
15.	Mask areas.....	90
16.	Object transformation.....	91
17.	Background image.....	93
18.	Device Settings.....	93
19.	Settings for the field editor.....	94
20.	Virtual group.....	95
21.	Show/hide preset for specified cutoff behavior.....	101
22.	Starting and stopping safety function.....	107
23.	Buttons.....	111
24.	Status LEDs.....	115
25.	Status LEDs.....	117
26.	LEDs for network interfaces, labeling: Link/Act.....	118
27.	Bus error LED, inscription: BF.....	118
28.	System error LED, inscription: SF.....	118
29.	Overview of status information.....	119
30.	Error types.....	129
31.	Data recorder.....	132
32.	Message history.....	136
33.	Devices and type codes.....	140
34.	airWiper Kit.....	140
35.	outdoorScan3 Pro – PROFINET functional scope.....	140
36.	Revision.....	140
37.	Features.....	141
38.	Safety-related parameters.....	142
39.	Interfaces.....	142
40.	Electrical data.....	143
41.	Mechanical data.....	143
42.	Ambient data.....	144
43.	Miscellaneous data.....	145
44.	Response time of an individual safety laser scanner.....	146
45.	Protective field range.....	146
46.	Scan plane.....	148
47.	Light spot size	149
48.	Measurement data.....	149
49.	Input of the device (output of the control).....	150
50.	Output of the device (input of the control).....	152
51.	Safety-related PROFIsafe process image: input of the device, output of the control	155
52.	Safety-related PROFIsafe process image: output of the device, input of the control	155

53. Non-safety-related PROFINET process image: output of the device, input of the control..... 156

54. Safety-related PROFIsafe process image: input of the device, output of the control156

55. Safety-related PROFIsafe process image: output of the device, input of the control157

56. Non-safety-related PROFINET process image: output of the device, input of the control..... 157

57. Available alarms (degree of difficulty: need for maintenance)..... 157

58. I&M data available..... 159

59. Ordering information for safety laser scanner with system plug.....163

60. Ordering information for the airWiper kit..... 163

61. Safety laser scanner without system plug..... 164

62. airWiper kit without system plug..... 164

63. System plug..... 164

64. Additional spare parts.....164

65. Ordering information for weather protection..... 165

66. Note on standards.....170

Australia

Phone +61 (3) 9457 0600
1800 33 48 02 – tollfree
E-Mail sales@sick.com.au

Austria

Phone +43 (0) 2236 62288-0
E-Mail office@sick.at

Belgium/Luxembourg

Phone +32 (0) 2 466 55 66
E-Mail info@sick.be

Brazil

Phone +55 11 3215-4900
E-Mail comercial@sick.com.br

Canada

Phone +1 905.771.1444
E-Mail cs.canada@sick.com

Czech Republic

Phone +420 234 719 500
E-Mail sick@sick.cz

Chile

Phone +56 (2) 2274 7430
E-Mail chile@sick.com

China

Phone +86 20 2882 3600
E-Mail info.china@sick.net.cn

Denmark

Phone +45 45 82 64 00
E-Mail sick@sick.dk

Finland

Phone +358-9-25 15 800
E-Mail sick@sick.fi

France

Phone +33 1 64 62 35 00
E-Mail info@sick.fr

Germany

Phone +49 (0) 2 11 53 010
E-Mail info@sick.de

Greece

Phone +30 210 6825100
E-Mail office@sick.com.gr

Hong Kong

Phone +852 2153 6300
E-Mail ghk@sick.com.hk

Hungary

Phone +36 1 371 2680
E-Mail ertekesites@sick.hu

India

Phone +91-22-6119 8900
E-Mail info@sick-india.com

Israel

Phone +972 97110 11
E-Mail info@sick-sensors.com

Italy

Phone +39 02 27 43 41
E-Mail info@sick.it

Japan

Phone +81 3 5309 2112
E-Mail support@sick.jp

Malaysia

Phone +603-8080 7425
E-Mail enquiry.my@sick.com

Mexico

Phone +52 (472) 748 9451
E-Mail mexico@sick.com

Netherlands

Phone +31 (0) 30 204 40 00
E-Mail info@sick.nl

New Zealand

Phone +64 9 415 0459
0800 222 278 – tollfree
E-Mail sales@sick.co.nz

Norway

Phone +47 67 81 50 00
E-Mail sick@sick.no

Poland

Phone +48 22 539 41 00
E-Mail info@sick.pl

Romania

Phone +40 356-17 11 20
E-Mail office@sick.ro

Singapore

Phone +65 6744 3732
E-Mail sales.gsg@sick.com

Slovakia

Phone +421 482 901 201
E-Mail mail@sick-sk.sk

Slovenia

Phone +386 591 78849
E-Mail office@sick.si

South Africa

Phone +27 10 060 0550
E-Mail info@sickautomation.co.za

South Korea

Phone +82 2 786 6321/4
E-Mail infokorea@sick.com

Spain

Phone +34 93 480 31 00
E-Mail info@sick.es

Sweden

Phone +46 10 110 10 00
E-Mail info@sick.se

Switzerland

Phone +41 41 619 29 39
E-Mail contact@sick.ch

Taiwan

Phone +886-2-2375-6288
E-Mail sales@sick.com.tw

Thailand

Phone +66 2 645 0009
E-Mail marcom.th@sick.com

Turkey

Phone +90 (216) 528 50 00
E-Mail info@sick.com.tr

United Arab Emirates

Phone +971 (0) 4 88 65 878
E-Mail contact@sick.ae

United Kingdom

Phone +44 (0)17278 31121
E-Mail info@sick.co.uk

USA

Phone +1 800.325.7425
E-Mail info@sick.com

Vietnam

Phone +65 6744 3732
E-Mail sales.gsg@sick.com

Detailed addresses and further locations at www.sick.com

