

**SAFETY LIGHT CURTAINS** 



SAFETY LIGHT CURTAINS



## Ordering information

Resolution	Scanning range	Protective field height	System part	Туре	Part no.
30 mm	21 m	300 mm	Sender	C40S- 0303CA020	1026733

Other models and accessories -> www.sick.com/C4000\_Standard

Illustration may differ



## Detailed technical data

## Features

Application	Normal industrial environment
System part	Sender
Resolution	30 mm
Scanning range	21 m
Protective field height	300 mm
Synchronization	Optical synchronisation

## Safety-related parameters

Туре	Type 4 (IEC 61496-1)
Safety integrity level	SIL 3 (IEC 61508)
Category	Category 4 (EN ISO 13849)
Performance level	PL e (EN ISO 13849)
$\ensuremath{PFH}_{D}$ (mean probability of a dangerous failure per hour)	15 * 10 <sup>-9</sup> (EN ISO 13849) 43 * 10 <sup>-9</sup> (EN ISO 13849) 63 * 10 <sup>-9</sup> (EN ISO 13849)
T <sub>M</sub> (mission time)	20 years (EN ISO 13849)
Safe state in the event of a fault	At least one OSSD is in the OFF state.

## Functions

	Functions	Delivery status
Protective operation	1	
Restart interlock	1	
External device monitoring (EDM)	J	
Beam coding	1	Uncoded
Configurable scanning range	1	0 m 6 m

SAFETY LIGHT CURTAINS

	Functions	Delivery status	
Safe SICK device communication via EFI	✓		
Functions in combination with UE402			
Bypass	✓		
Operating mode switching	✓		
PSDI mode	✓		

Interfaces

System connection	Hirschmann male connector M26, 12-pin
Direction of cable connection	Angled
Conductor cross section	0.75 mm <sup>2</sup>
Permitted cable length	50 m <sup>1)</sup>
Display elements	7-segment display

 $^{\left(1\right)}$  Depending on load, power supply and wire cross-section. The technical specifications must be observed.

### Electrical data

Protection class	III (IEC 61140)
Supply voltage V <sub>S</sub>	24 V DC (19.2 V 28.8 V) <sup>1)</sup>
Residual ripple	$\leq 10 \%^{2}$

<sup>1)</sup> The external voltage supply must be capable of buffering brief mains voltage failures of 20 ms as specified in EN 60204-1. Suitable power supplies are available as accessories from SICK.

 $^{2)}$  Within the limits of  $\mathrm{V}_{S}.$ 

## Mechanical data

Dimensions	See dimensional drawing
Housing cross-section	48 mm x 40 mm
Housing material	Aluminum extruded profile

## Ambient data

Enclosure rating	IP65 (EN 60529)
Ambient operating temperature	0 °C +55 °C
Storage temperature	-25 °C +70 °C
Air humidity	15 % 95 %, Non-condensing
Vibration resistance	5 g, 10 Hz 55 Hz (EN 60068-2-6)
Shock resistance	10 g, 16 ms (EN 60068-2-27)


## Other information


Wave length	850 nm
Classifications	
ECLASS 5.0	27272704
ECLASS 5.1.4	27272704
ECLASS 6.0	27272704
ECLASS 6.2	27272704

SAFETY LIGHT CURTAINS

ECLASS 7.0	27272704
ECLASS 8.0	27272704
ECLASS 8.1	27272704
ECLASS 9.0	27272704
ECLASS 10.0	27272704
ECLASS 11.0	27272704
ECLASS 12.0	27272704
ETIM 5.0	EC002549
ETIM 6.0	EC002549
ETIM 7.0	EC002549
ETIM 8.0	EC002549
UNSPSC 16.0901	46171620

### Dimensional drawing (Dimensions in mm (inch))

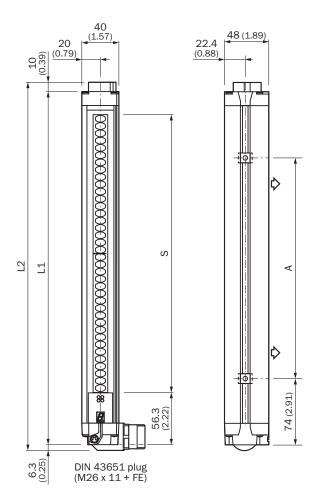

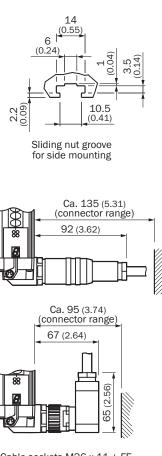

Cable sockets M26 x 11 + FE with crimp contacts

#### Illustration sender (receiver mirror image)


Protective field height S	L1	L2	A
300	381	397	224
450	532	548	374

SAFETY LIGHT CURTAINS

Protective field height S	Ц	L2	Α
600	682	698	524
900	984	1.000	824
1.050	1.134	1.150	974

### **Connection diagram**

C4000 safety light curtain to UE10-30S safety relay

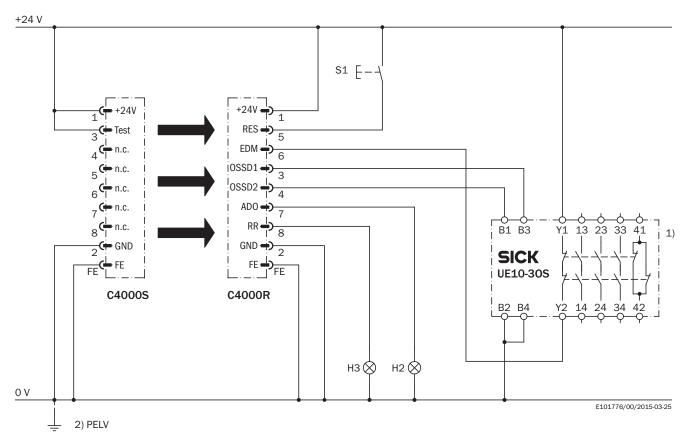

#### Task

Connection of a C4000 Standard/Advanced/Palletizer/Fusion safety light curtain to UE10-30S. Operating mode with restart interlock and external device monitoring.

#### Function

When the light path is clear and the UE10-30S is de-energized and functioning correctly, the yellow LED on the receiver and the H3 lamp flash. The system is ready to be switched on. The system is enabled by pressing S1 (button is pressed and released). The OSSD1 and OSSD2 outputs are live, and the UE10-30S is switched on. Upon the interruption of one of the light beams, the UE10-30S is deactivated by the OSSD1 and OSSD2 outputs.

#### **Possible faults**

Cross-circuits and short-circuits of the OSSDs are detected and lead to the inhibited state (lock-out). The incorrect functioning of the UE10-30S will be detected, but will not result in the loss of the shutdown function. Jamming of the S1 button prevents the output circuit from enabling. H2 lamp is illuminated if there is contamination (adjustable parameter).

#### Comments

<sup>1)</sup> Output circuits: These contacts are to be connected to the controller such that, with the output circuit open, the dangerous state is disabled. For categories 4 and 3, this integration must be dual-channel (x/y paths). Single-channel integration in the control (z path) is only possible with a single-channel control and taking the risk analysis into account.

## $^{\rm 2)}$ PELV as required in EN 60204-1 / 6.4

The related operating instructions for the integrated devices must be observed.

SAFETY LIGHT CURTAINS

## **Recommended accessories**

Other models and accessories → www.sick.com/C4000\_Standard

	Brief description	Туре	Part no.
Alignment aid	S		
Ŵ	Laser alignment aid for various sensors, laser class 2 (IEC 60825). Do not look into the beam!, 19 mm x 67.3 mm x 66.9 mm	AR60	1015741
	Adapter AR60 for housing cross-section 48 mm x 40 mm	AR60 adapter, 48x40	4032461
	Adapter AR60 for housing cross-section 48 mm x 40 mm in PU3H device column	AR60 adapter, 48x40, PU3H	4056731
Optics cloths			
SICK	Cloth for cleaning optical surfaces	Lens cloth	4003353
Mounting bra	ckets and plates		
	4 pieces, Mounting kit 1, mounting bracket, rigid, L-shaped, including fixing screws and washers	BEF-3WNGBAST4	7021352
Plug connecto	ors and cables		
and the second sec	<ul> <li>Connection type head A: Male connector, M8, 4-pin, straight</li> <li>Connection type head B: Male connector, USB-A, straight</li> <li>Cable: 2 m, 4-wire, PVC</li> <li>Description: Unshielded, Configuration cable with integrated RS-232 transducer on USB for connecting a sensor configuration connection (M8, 4-pin) to the USB interface of a PC</li> </ul>	DSL-8U04G02M025KM1	6034574
	<ul> <li>Connection type head A: Male connector, M8, 4-pin, straight</li> <li>Connection type head B: Male connector, USB-A, straight</li> <li>Cable: 10 m, 4-wire, PVC</li> <li>Description: Unshielded, Configuration cable with integrated RS-232 transducer on USB for connecting a sensor configuration connection (M8, 4-pin) to the USB interface of a PC</li> </ul>	DSL-8U04G10M025KM1	6034575
Terminal and	alignment brackets		
	4 pieces, Mounting kit 6, side bracket, rotatable, zinc diecast	BEF-1SHABAZN4	2019506
Q	4 pieces, Omega bracket, rotatable, fixable with only one screw, for mounting on the swivel mount	BEF-2SMMEAAL4	2044847
	4 pieces, Mounting kit 2, rotatable, swivel mount, Polyamide PA6	BEF-2SMMEAKU4	2019659
Switching am	plifiers		
	<ul> <li>Applications: Functionality upgrade</li> <li>Compatible sensor types: C4000 safety light curtains</li> <li>Description: Upgrades the C4000 Standard, Advanced, Palletizer, Entry/Exit, and Fusion to include the functions defined in the technical specifications, e.g., bypass, operating mode switching, and PSDI in the case of C4000 Standard, Advanced.</li> </ul>	UE402	1023577

# SICK AT A GLANCE

SICK is one of the leading manufacturers of intelligent sensors and sensor solutions for industrial applications. A unique range of products and services creates the perfect basis for controlling processes securely and efficiently, protecting individuals from accidents and preventing damage to the environment.

We have extensive experience in a wide range of industries and understand their processes and requirements. With intelligent sensors, we can deliver exactly what our customers need. In application centers in Europe, Asia and North America, system solutions are tested and optimized in accordance with customer specifications. All this makes us a reliable supplier and development partner.

Comprehensive services complete our offering: SICK LifeTime Services provide support throughout the machine life cycle and ensure safety and productivity.

For us, that is "Sensor Intelligence."

# WORLDWIDE PRESENCE:

Contacts and other locations -www.sick.com



Online data sheet

